



Shipping & Mailing
Postage Meters

SendPro® C Auto

PCN 9H00

Operator Guide

US English Edition
SV63245 Rev L
July 18, 2024

©2024 Pitney Bowes Inc.

All rights reserved. This book may not be reproduced in whole or in part in any fashion or stored in a retrieval system of any type or transmitted by any means, electronically or mechanically, without the express written permission of Pitney Bowes.

The use of this information by the recipient or others for purposes other than the training of customers on Pitney Bowes equipment may constitute an infringement of intellectual property rights of Pitney Bowes, and Pitney Bowes assumes no responsibility for any such use of the information.

We have made every reasonable effort to ensure the accuracy and usefulness of this manual. However, we cannot assume responsibility for errors or omissions or liability for the misuse or misapplication of our products.

Except as provided in writing, duly signed by an officer of Pitney Bowes, no license either express or implied, under any Pitney Bowes or third party's patent, copyright or other intellectual property rights is granted by providing this information.

PB Postage™ is a trademark of Pitney Bowes Inc.

Table of Contents

1 - Quick start guide

Finding the Product Code Number (PCN) and serial number	11
Navigating the Home screen	12
Printing a shipping label or printing postage on an envelope	15
Printing a shipping label	17
Enabling Cost Accounts for shipping labels	22
Adding a Envelope Printing or Print on Envelopes account	22
Navigating the Envelope Printing or Print on Envelopes app	23
Feeding envelopes	25
Printing postage on tapes	27
Sending a First-Class Mail envelope	28
Sending a large First-Class® envelope	28
Sending Certified Mail	30
Sending an international letter	30
Sending mail using a Certificate of Mailing	31
Using USPS special services	32
Updating postal rates or software for printing on envelopes	33
Adding or refilling postage for printing on envelopes	34
Sealing envelopes and printing postage	35
Filling the moistener tank	36
Replacing the ink cartridge	38
Printing a test pattern	40
Adding favorite apps	41
Creating presets for printing postage	42
Selecting a preset for printing postage	43

2 - Connectivity information

Setting up a wired network connection	46
---	----

Setting up a wireless (Wi-Fi) network connection	49
Connecting to a hidden Wi-Fi network	49
Forgetting a Wi-Fi network	51
Checking your network connection	53
Finding the MAC address for wired and wireless networks	53
Setting up a Proxy server	57

3 - Managing your Device

Creating or disabling the security PIN	62
Adjusting time zone and scale location code	63
Adjusting display brightness	63
Adding favorite apps	64
Setting up the Energy Saver	65
Using USPS Informed Delivery	65
Installing a scale	65
Uploading system logs	66

4 - Printing Shipping Labels

Signing in to and out of the Create Shipping Labels app	69
Printing a shipping label	69
Comparing rates when printing a shipping label	75
Creating a new sender address for shipping labels	81
Editing the sender address for shipping labels	82
Printing an international shipping label	82
Printing a USPS return shipping label	92
Printing a USPS scan form	93
Reprinting a USPS, UPS or FedEx shipping label	94
Canceling a UPS or FedEx shipping label	94
Getting a USPS refund for a shipping label	95

5 - Managing Shipping Labels

Using the Address Book	97
Enabling Cost Accounts for shipping labels	97
Changing the default refill amounts for shipping labels	97
Turning on address autofill for shipping labels	98
Adding new addresses to the shipping labels Address Book	98
Refilling postage for shipping labels	99
Setting an alert when shipping label postage refill is pending	100
Setting up your FedEx account	101
Setting up your UPS account	103
Setting up default printing options	103
Managing email notifications for shipping labels	104
Setting the default address for USPS return labels	105
Determining how you spend your shipping labels postage	106
Removing funds	106

6 - Printing on envelopes

Navigating the Envelope Printing or Print on Envelopes app	109
Printing postage on tapes	110
Checking the available funds for printing postage	111
Adding or refilling postage for printing on envelopes	112
Sending a First-Class Mail envelope	113
Sending a large First-Class® envelope	114
Sending Certified Mail	115
Sending an international letter	116
Sending mail using a Certificate of Mailing	116
Advancing the date	118
Printing postage without a date for pre-printed mailpieces	118
Printing additional postage	119
Re-dating your mail	120
Using USPS special services	121
Entering the weight manually when printing postage	121
Using the scale when printing postage	122
Sealing envelopes without printing postage	123
Sealing envelopes and printing postage	124
Zeroing the scale	125

Using Differential Weighing	126
Editing the Differential Weighing threshold	128
Adding insurance to your mail	129
Adding a graphic to your envelope or tape	130
Sending mail using Electronic Return Receipt (ERR)	130
Getting a USPS refund for damaged or incorrectly printed mail	131
Creating a custom text message for your mail	132
Adding a custom text message to your envelope or tape	134
Editing or deleting a custom text message	135
Printing a graphic without printing postage	137
Adding an inscription	138
Printing only the date and time	138
Presort features	140
Creating a PresortXtra letter preset	140

7 - Managing Printing on Envelopes

Confirming your meter update	144
Changing the default refill amount for printing postage	144
Uploading postage transactions	145
Clearing or resetting the number of mailpieces sent	146
Updating postal rates or software for printing on envelopes	146
Confirm the effective date for postal rates	147
Setting the low funds warning for printing postage	148
Setting up a mailer ID	148
Updating the ZIP code	148
What is Accounting	149
Turning Envelope Printing or Print on Envelopes account passwords on or off for printing postage	150
Adding a Envelope Printing or Print on Envelopes account	151
Editing an account	152
Making an account inactive	152
Deleting an account	153
Creating presets for printing postage	153
Viewing presets for printing postage	155
Selecting a preset for printing postage	155
Modifying presets for printing postage	155

Setting the default preset timer	156
--	-----

8 - View and Print Reports

Viewing a receipt when refilling postage	159
Viewing the total spent on printing postage	159
Viewing the refill history for printing postage	159
Printing a funds report	159
Running account reports	160
Emailing an account report	161
Setting the report period for an account	162
Setting the account report preferences	163
Creating a shipping report	164
Creating a USPS shipping label refund report	164

9 - Maintenance

Checking the postage print quality	167
Printing a test pattern	167
Checking the ink level	168
Replacing the ink cartridge	169
Changing the ink waste pad	171
Cleaning the printhead	173
Installing the printhead	178
Cleaning the moistener brush and wick assembly	183
Filling the moistener tank	191
Feeding envelopes	193
Moving the SendPro C Auto	196

10 - Supplies

Ordering supplies	198
-------------------------	-----

11 - Device Information

USPS requirements	200
Key in Postage	200
Sections of the meter impression	200
Finding the SendPro application software version	201
Postal Security Device	202
Parts of the SendPro C Auto	202
Connections on the back	204
Specifications	204
Material specifications	208

12 - Contacting Pitney Bowes

Contacting Pitney Bowes	212
-------------------------------	-----

13 - Safety

Lithium Ion Battery	215
Agency Compliance Information	215
Important Safety Notes	215
Note for California Customers Only on all Models	217

14 - Third party software

Third party software	219
----------------------------	-----

1 - Quick start guide

In this section


Finding the Product Code Number (PCN) and serial number.....	11
Navigating the Home screen.....	12
Printing a shipping label or printing postage on an envelope.....	15
Printing a shipping label.....	17
Enabling Cost Accounts for shipping labels.....	22
Adding a Envelope Printing or Print on Envelopes account.....	22
Navigating the Envelope Printing or Print on Envelopes app.....	23
Feeding envelopes.....	25
Printing postage on tapes.....	27
Sending a First-Class Mail envelope.....	28
Sending a large First-Class® envelope.....	28
Sending Certified Mail.....	30
Sending an international letter.....	30
Sending mail using a Certificate of Mailing.....	31
Using USPS special services.....	32
Updating postal rates or software for printing on envelopes.....	33
Adding or refilling postage for printing on envelopes.....	34
Sealing envelopes and printing postage.....	35
Filling the moistener tank.....	36
Replacing the ink cartridge.....	38
Printing a test pattern.....	40
Adding favorite apps.....	41
Creating presets for printing postage.....	42

Selecting a preset for printing postage.....	43
--	----

Finding the Product Code Number (PCN) and serial number

In order to find the correct information for your device, you need to know the model number.

To locate the **(1) Product Code Number (PCN)** and the **(2) 7-digit serial number**, check the label on the rear of the device or under the display cover. The serial number appears as zeros here for security reasons.

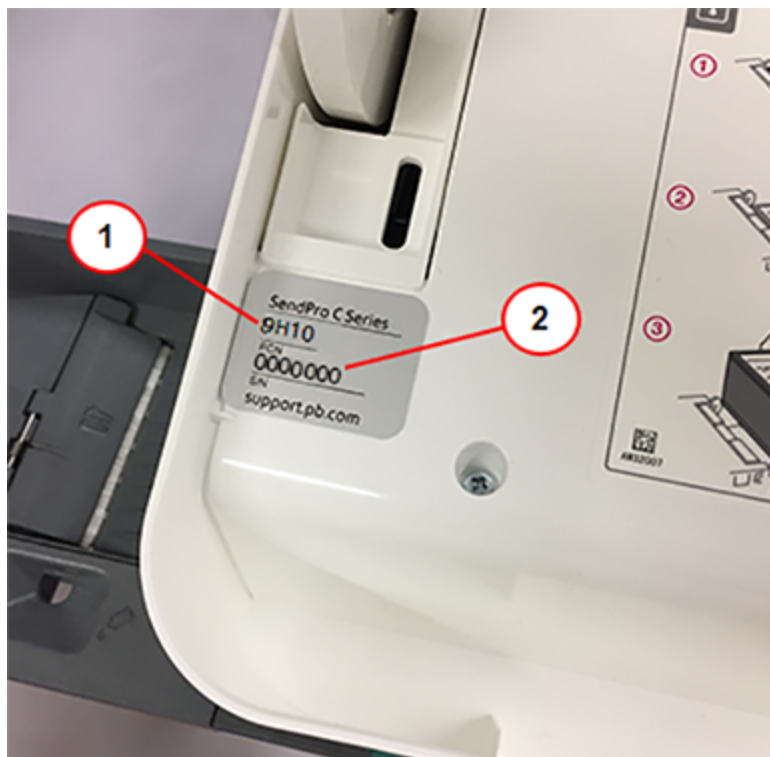


Navigating the Home screen

You can create a shipping label or print postage from the Home screen on the SendPro C Auto.

Creating shipping labels or printing on envelopes

Tap **Envelope Printing or Print on Envelopes** to print postage for envelopes and post cards. Tap **Create Shipping Labels** to create a shipping label for important large envelopes or packages using USPS, UPS®, or FedEx®.

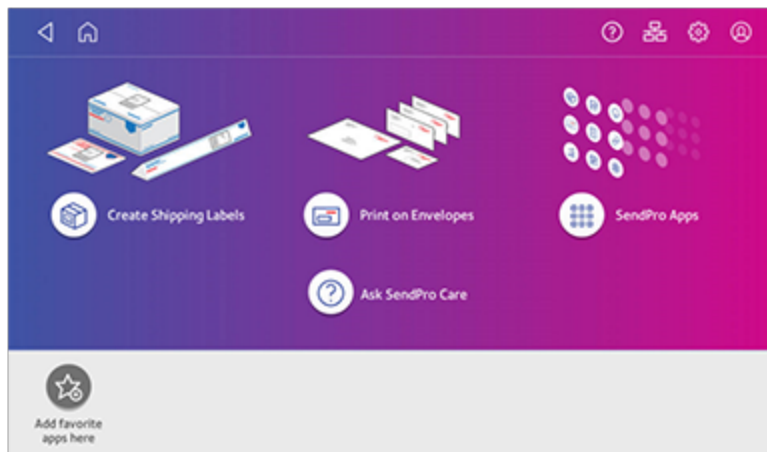


Using SendPro Apps

Tap on **SendPro Apps** to access a variety of apps to support and enhance your device.

For example, you can:

- Check for rates and updates (Rates and Updates)
- Get a history of shipping labels created (Shipping History)
- Check the status of your network connection (Network Connection).

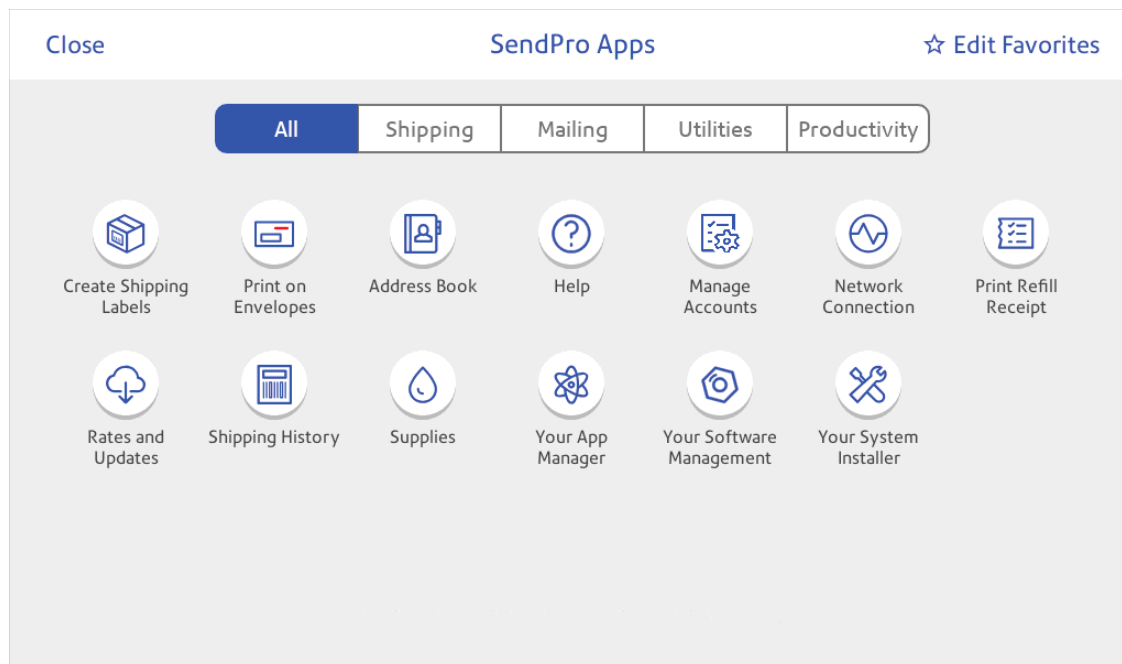

You can also add your most frequently used apps to a list of favorites appearing along the bottom of the Home screen.


Getting help on your device

Tap **SendPro Care** on the Home screen to get information about your device

The SendPro Care app automatically recognizes your device issues and provides recommendations for resolving them. The app also provides:

- Real-time predictive updates, diagnostic, error notifications, and offers.
- Solutions to resolve the issue.
- Essential tools and guides.
- Voice (mobile app) and text search to resolve issues quickly.
- Product health management and tracking.
- Account balances and case status.
- Spending and saving insights to track your budget more effectively.

To learn how to use the SendPro Care app, tap **i How to use** on the main page of the app.

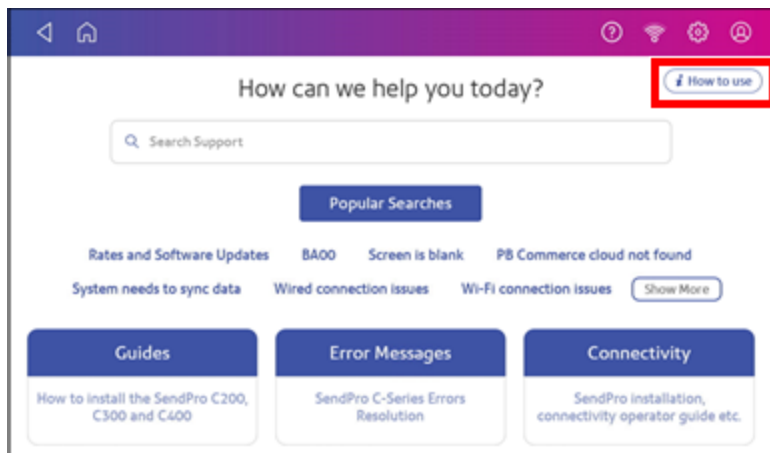

The toolbar

The toolbar appears at the top of every screen. It allows you to view and change settings for your device.



1. Back - Return to the previous screen.
2. Home - Return to the Home screen from anywhere in Create Shipping Labels or Envelope Printing or Print on Envelopes.
3. Tap the question mark in the toolbar to open the SendPro Care app.
4. Network - View the current network type (wireless or Ethernet) and status and strength (for wireless connection). Allows you to turn wireless connection on or off. The icon here represents a wireless connection.


5. **Settings** - View or change your device and app settings. This includes adjusting the screen brightness, setting sound notification levels, and viewing wireless or Ethernet connection information. For Envelope Printing or Print on Envelopes, this includes setting the default postage refill amount, installing external scales and performing maintenance. For shipping labels, this includes managing your carrier accounts and setting up your shipping label printer default values.
6. **Profile** - View your profile (name and email for shipping label account), log out, or lock your SendPro C Auto.

Printing a shipping label or printing postage on an envelope


You can either create a shipping label or print postage on an envelope. For a shipping label, tap **Create Shipping Labels** on the Home screen. For postage, tap **Envelope Printing or Print on Envelopes** on the Home screen.

Use Create Shipping Labels to get the best pricing, free tracking, and detailed delivery history for USPS package services. You can also send via UPS® or FedEx®. The packaging options and benefits are almost identical.

Use Create Shipping Labels for the following

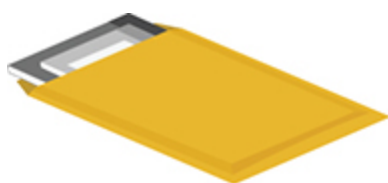

Thick envelopes

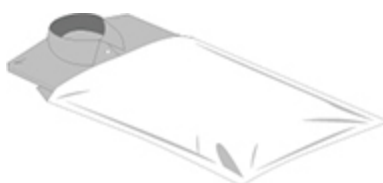

Poly mailers




USPS flat rate envelopes




USPS non flat rate envelopes



Boxes

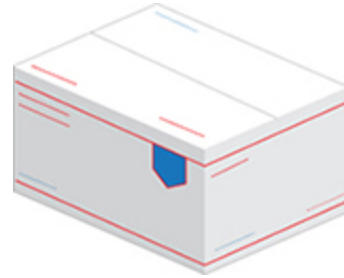

USPS flat rate boxes

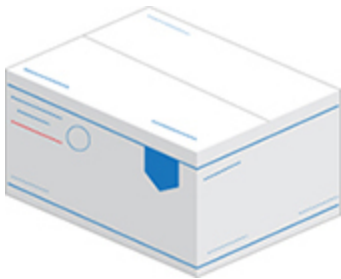

USPS non flat rate boxes



Tube

Use Envelope Printing or Print on Envelopes for the following



Standard envelopes and postcards




Large envelopes


Printing a shipping label

Use Create Shipping Labels to get the best pricing, free tracking, and detailed delivery history for USPS package services. You can also send via UPS® or FedEx®. The packaging options and benefits are almost identical.

1. Tap **Create Shipping Labels** on the Home screen.
2. Tap the carrier you wish to use.

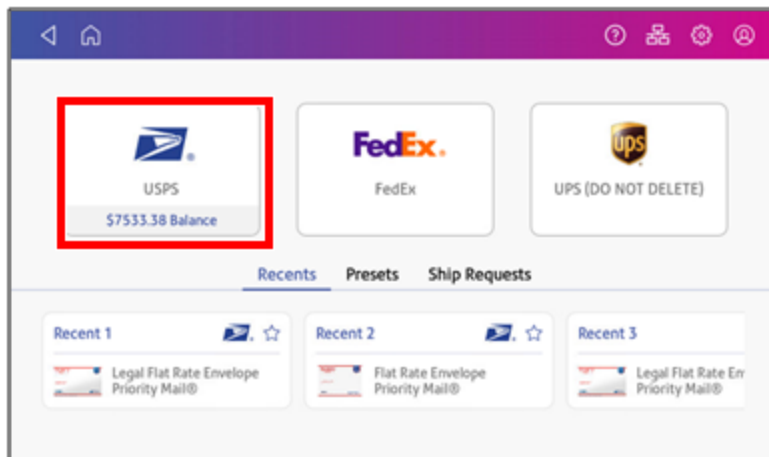

3. Verify that the sender address is correct. If not, tap on the **Sender** field and select a new address.

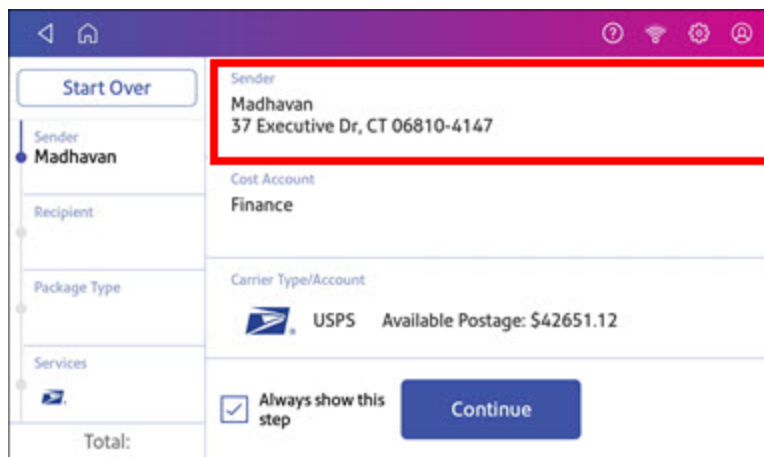


4. Select an account if cost accounts are enabled. Verify the selected cost account. Tap **Cost Account** and select an account to change or add the account..

The screenshot shows a mobile app interface for shipping a package. The top bar is purple with navigation icons. The main content area is white with a purple header. The 'Sender' field is filled with 'Madhavan' and '37 Executive Dr, CT 06810-4147'. The 'Cost Account' field is highlighted with a red box and shows 'Select...' and 'Account Required'. The 'Carrier Type/Account' field shows 'USPS' and 'Available Postage: \$42651.12'. The 'Services' field has a checkbox for 'Always show this step' which is checked. The 'Continue' button is visible at the bottom right.


5. Tap **Continue**.

6. Enter the recipient address manually or tap **Address book** to select one from the address book.

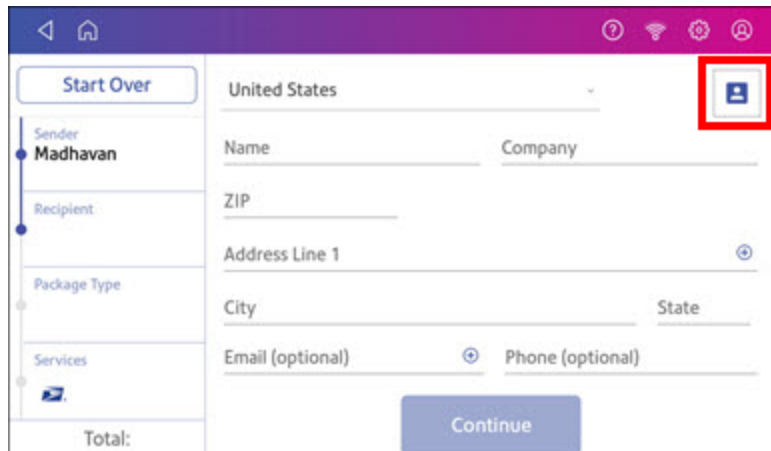

The screenshot shows the USPS shipping app interface. On the left, a vertical menu lists 'Sender' (Madhavan), 'Recipient', 'Package Type', 'Services', and 'Total:'. The 'Recipient' step is active. The main area is titled 'United States' and contains fields for 'Name', 'Company', 'ZIP', 'Address Line 1', 'City', 'State', 'Email (optional)', and 'Phone (optional)'. A 'Continue' button is at the bottom right. A red box highlights the 'Address book' icon in the top right corner.

7. Tap **Continue**.
8. Tap a package type.

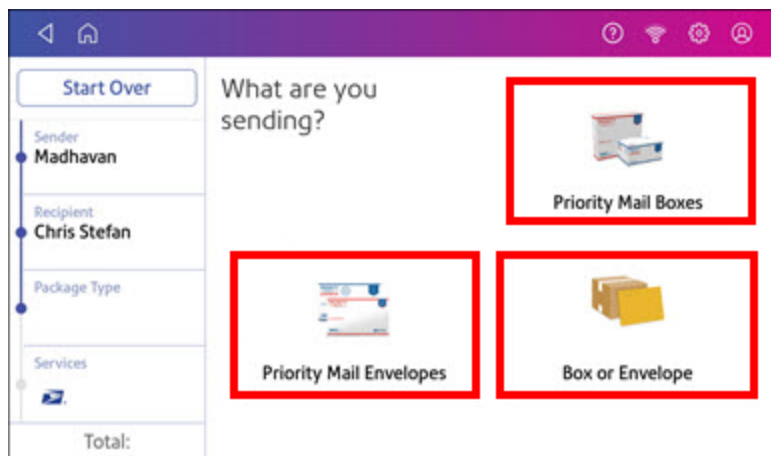

The screenshot shows the USPS shipping app interface with the question 'What are you sending?'. Three options are displayed with red boxes around them: 'Priority Mail Boxes' (top right), 'Priority Mail Envelopes' (bottom left), and 'Box or Envelope' (bottom right). The left menu is the same as the previous screen, but the 'Package Type' step is now active, and the 'Recipient' is listed as 'Chris Stefan'.

9. Enter the dimensions and weight of the package:
 - Tap each dimension and enter a value. Tap the green check mark when done.
 - If you have an attached scale, place the package on the scale and tap **Weight**. Tap **Scale** and the weight appears. Tap **Apply**.
 - If you do not have a scale, tap **Weight** and enter the weight, then tap **Apply**.

The screenshot shows the USPS shipping label creation interface. On the left, a sidebar lists the steps: Sender (Madhavan), Recipient (Chris Stefan), Package Type (Large Package), and Services. The main area shows the package type as 'Box or Envelope' with a 'Change' button. Below this are three tabs: 'Box', 'Envelope', and 'Irregular'. The 'Box' tab is selected, showing a 3D box icon. The dimensions are entered as 6 in. x 5 in. x 5 in. The weight is entered as 5 lb 0 oz. A 'Continue' button is at the bottom right.

10. Tap **Continue**.
11. Tap the service you wish to use.

The screenshot shows the USPS shipping label creation interface with service options. The top bar shows 'Ship From This ZIP' as 06484 and 'Ship Date' as Today. The sidebar on the left shows the steps: Sender (Madhavan), Recipient (Chris Stefan), Package Type (Large Package), and Services (Priority Mail®). The main area displays a table of shipping services with their arrival dates and prices. The 'Priority Mail®' service is highlighted with a red box.

Service	Arrival Date	Price
Library Mail®	Monday, September 24, 2018	\$4.45
Media Mail®	Monday, September 24, 2018	\$4.70
Priority Mail®	Thursday, September 20, 2018	\$7.41
Add additional services		
Parcel Select Ground™	Monday, September 24, 2018	\$7.41
Priority Mail Express™	Thursday, September 20, 2018	\$22.98

At the bottom left, the total price is \$7.41, and there is a green 'Print' button.

12. To add additional services, tap **Add additional services**. If you are not adding any extra services, go to step 14.

Service	Arrival Date	Price
Library Mail®	Monday, September 24, 2018	\$4.45
Media Mail®	Monday, September 24, 2018	\$4.70
Priority Mail®	Friday, September 21, 2018	\$7.41
Add additional services		
Parcel Select Ground™	Monday, September 24, 2018	\$7.41
Priority Mail Express™	Thursday, September 20, 2018	\$22.98

13. Select the desired services and tap **Apply**.


Service	Selected
Signature Confirmation™	<input checked="" type="checkbox"/>
Insurance	<input type="checkbox"/>
Registered Mail™	<input type="checkbox"/>
Registered Restricted Delivery	<input type="checkbox"/>
Registered Insured Restricted Delivery	<input type="checkbox"/>
Fragile	<input type="checkbox"/>
Collect on Delivery	<input type="checkbox"/>

Priority Mail® Total: \$9.96

Apply

14. To print the label, tap **Print**.

15. On the Label Options screen, tap **Format** and select the printer format.

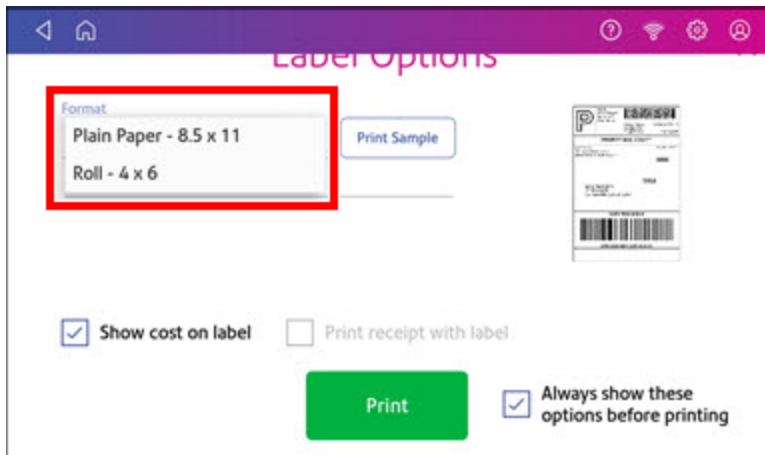

16. (Optional) Tap **Print Sample** to print a sample label.
17. Tap **Print** again and the label prints.
 - You may need to enter the Sender and Recipient's phone number, as it is required for some services.
18. The carrier screen reappears.

Enabling Cost Accounts for shipping labels

Cost Accounts help you keep track of where you're spending your money on postage by allowing you to assign shipping label costs. You can also assign a Cost Account for postage refills.

The Cost Accounts feature is enabled via the PitneyShip shipping solution. Please access the PitneyShip web application on your computer where you can also view Cost Accounts information.

Adding a Envelope Printing or Print on Envelopes account

You can add a Envelope Printing or Print on Envelopes account to track your costs for printing postage on envelopes. This is different from your PB account which is used to fund your postage or shipping label costs.


Accounting is a feature that is optional and needs enabling if you want to use it. Contact your Pitney Bowes Sales Representative for information about options and pricing.

1. Tap **SendPro Apps** on the Home screen.
2. Tap **Manage Accounts**.
3. Tap **Create new account**.
4. Tap **Create a new account** for a new account.
5. Enter the account name in the Enter account name field. Account names can be up to 75 characters long.
If the keyboard does not pop up, tap the line in the gray box.
6. Enter a unique code in the Code field to identify each account. Codes can be alphanumeric. Codes help you locate accounts more easily.
7. You can use the optional fields, such as:
 - **Description** - Enter a description of the account up to 150 characters.
 - **Password** - Tap **Password** to add a password for an account.
 - Passwords are case sensitive, can be alphanumeric, and must be four characters in length. If you do set a password, you need to enter it to print mail.
8. Ensure you set the status to active.
9. Tap anywhere on the screen outside of the fields when complete.
10. Tap **OK** to save. The name of the new account appears.
 - Tap **Create New Account** to create another account.
 - Tap **Add a Sub Account to this account** to add a sub account to the account you just created.
 - Tap **Done** if you do not need to create any more accounts.
11. Press the **back arrow** to return to the account list.

Navigating the Envelope Printing or Print on Envelopes app

The Envelope Printing or Print on Envelopes app is the starting point for printing postage on an envelope or a tape. It also allows you to change what you print.

To open the Envelope Printing or Print on Envelopes app, tap **Envelope Printing or Print on Envelopes**.

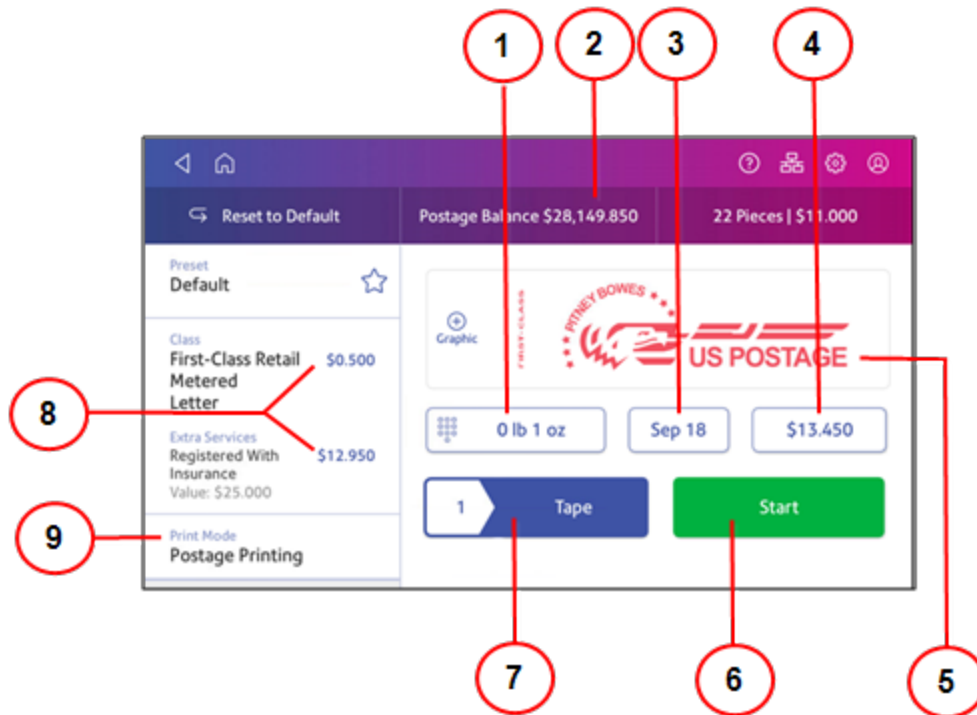

On this screen, you can:

1. Tap the weight to view the weighing options. You can enter the weight manually or use a scale.
2. View the balance of funds you have remaining in your device.
3. Tap the date to view the date options.
4. View the total postage amount.
5. Preview or add graphics.
6. Tap **Start** to begin feeding and printing postage on the envelopes loaded on the feed deck. The **Start** button is only present on SendPro C models equipped with an automatic feeder.
7. Tap **Tape** to begin printing postage on tape. To print more than one tape, tap the number next to **Tape** and enter the number of tapes. **Tape** is only present on SendPro C models equipped with an automatic feeder.
8. Tap **Class** to view the class and any extra services.
9. Tap **Print Mode** to access the Print Mode screen. This provides you with different printing modes such as adding graphics to your envelope, adding more postage, or making corrections to the date. You can also choose to seal envelopes without printing postage.

Feeding envelopes

Your SendPro C Auto can automatically feed a stack of envelopes.

Before you begin

- All envelopes in a single stack must be the same width and thickness.
- All envelopes in a single stack must be sealed or unsealed. Mixing sealed and unsealed envelopes in a stack will cause a jam in the moistener.

Insert the envelopes into the feeder


1. Slant the stack of envelopes as shown so the bottom envelope feeds first.
2. Place the stack of mail on the feed deck. Place the envelopes with the flap side facing down and the top edge against the rear wall.



3. Slide the side guide up to the mail stack. Leave about 1/8" space (about the thickness of 2 quarters) between the stack and the side guide so the envelopes do not drag against the guide.



4. Push the stack into the feeder until you feel resistance. The image shows how far into the feeder you need to position the stack. The side guide is pulled away to show the edge of the envelopes.

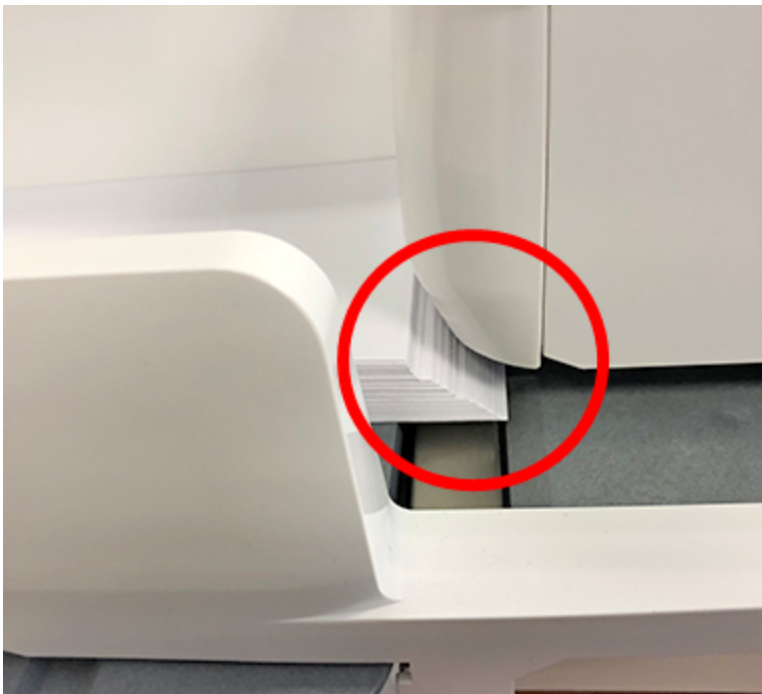

5. Set the desired moistener setting for your envelopes. In this photo "no seal" is selected.



6. Tap **Start** on the Envelope Printing or Print on Envelopes app. The device automatically feeds the envelopes and prints the postage.
 - If you are using a stacker, extend the stacker tray so that the envelopes exit the feeder completely.
 - If you are moistening the envelope flaps, press down on the envelopes after printing to ensure the flaps are securely glued closed.

Printing postage on tapes

If it is not possible to print postage directly onto your envelope, you can print it onto a tape. You can then apply the tape to the envelope.

1. Push the tape lever to the right and hold it there (a). Drop a stack of strip tapes down into the slot (b). Make sure that the printable side faces to the right (toward the touchscreen).



2. Tap **Envelope Printing** or **Print on Envelopes** on the Home screen.
3. Select the postage mode and settings (account, class and special service, weight).

4. For a single tape, tap **Tape**. The default value is set to 1 tape.
 - For multiple tapes, tap the number on the tape field and use the keypad to enter the number of tapes.

Sending a First-Class Mail envelope

First-Class Mail is an economical way to send mailpieces through the USPS. You can send standard postcards, letters, and large envelopes and small packages up to 15.99 ounces.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. If you have the accounting feature enabled, tap **Account** and select an account.
3. Tap **Class**.
4. Tap **Start Over** to show a list of all the available classes.
5. Tap **First-Class Retail Metered** for a First-Class Mail envelope.
6. Tap **Letter**.
7. Select any special services you wish to use.
8. Tap **Apply**.
9. Place the envelope on the scale. The weight appears.
10. Place the envelope or envelopes on the feed deck. Depending on the SendPro C model you have, feed the envelopes manually or tap **Start** to feed the envelopes.

Important: Your device will upload transactions if you have previously printed any mail. Once the upload completes, you see the message "Transaction upload status, Upload success" with a check mark. Tap the check mark.


Sending a large First-Class® envelope

Before you select a rate for a large envelope, you need to determine whether the mailpiece you are sending is a letter or large envelope according to the USPS.

If your mailpiece weighs more than 3.5 oz, the device automatically sets the class to Large Envelope regardless of the dimensions. If the mailpiece weighs less than 3.5 oz but has the dimensions of a large envelope, you need to manually select Large Envelope when you choose the class.

Weigh the mailpiece and measure the dimensions

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. If you have the accounting feature enabled, tap **Account** and select an account.
3. Place the mailpiece on the scale. The weight appears. You can also weigh the mailpiece using any other postal scale.

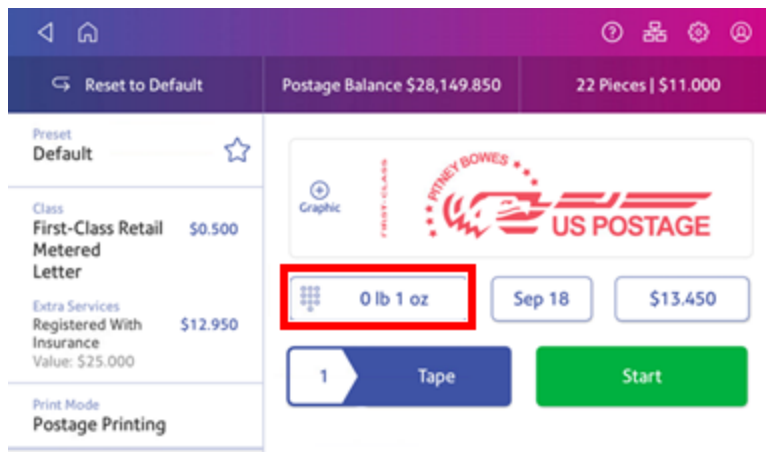

4. Measure and record the dimensions of the mailpiece.
5. Tap **Home** to return to the Home screen.

If the mailpiece is less than 3.5 oz, but has the dimensions of a large envelope:

1. Tap **Home**.
2. Tap **Envelope Printing or Print on Envelopes**.
3. If you have the accounting feature enabled, tap **Account** and select an account.
4. Tap **Class**.
5. Tap **Start Over** to show a list of all the available classes.
6. Tap **First-Class Retail Metered** for a First-Class mail envelope.
7. Tap **Large Envelope**.
8. Select special services, if required.
9. Tap **Apply**.
10. Place the envelope or envelopes on the feed deck. Depending on the SendPro C model you have, feed the envelopes manually or tap **Start** to feed the envelopes.
If the envelope is too thick to go through the feeder, print the postage on a tape and apply the tape to the large envelope or flat.

Sending Certified Mail

Certified Mail is a USPS service that provides you with proof of mailing by sending you a receipt once your mailpiece arrives at its destination.

Not all extra services like Certified Mail are available for all classes and you can only combine certain services.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. If you have the accounting feature enabled, tap **Account** and select an account.
3. Tap **Class**.
4. Tap **Start Over** to show a list of the available classes.
5. Tap a class that you can combine with Certified Mail (for example, First Class or Priority Mail).
6. Tap the mailpiece type (for example, letter or large envelope).
7. Select **Certified** and tap **Apply**.
8. Depending on the type class and type of mailpiece, enter the destination ZIP Code and tap **Apply**.
9. Place the envelope or envelopes on the feed deck. Depending on the SendPro C model you have, feed the envelopes manually or tap **Start** to feed the envelopes.
10. Place the green Certified Mail label (USPS Label 3800) on the mailpiece.

Sending an international letter

Use this process if you need to send mail from the United States to a different country.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. If you have the accounting feature enabled, tap **Account** and select an account.
3. Tap **Class**.
4. Tap **Start Over** to display a list of all the available classes.
5. Tap **First-Class Mail Intl Retail** for a First-Class Mail envelope.
6. Tap **Letter**.
7. Tap in the **Country** field and use the keypad to enter the destination country.
8. Select special services, if required.
9. Tap **Apply**.
10. Place the envelope on the scale. The weight appears.
11. Place the envelope or envelopes on the feed deck. Depending on the SendPro C model you have, feed the envelopes manually or tap **Start** to feed the envelopes.


Important: Your device will upload transactions if you have previously printed any mail. Once the upload completes, you see the message "Transaction upload status, Upload success" with a check mark. Tap the check mark.

Sending mail using a Certificate of Mailing

Purchase a Certificate of Mailing when you need to have proof that you sent a letter or package.

You can only obtain a Certificate of Mailing from the USPS. A Certificate of Mailing is a receipt that provides evidence of the date that you took your mail to the USPS for mailing. You cannot produce this certificate with your device. It is a record of when you turned the mailpiece over to the Post Office and you can only get it from the USPS.

1. Fill out the USPS postal forms [3606-D](#), [3665](#), or [3817](#). Obtain these at the Post Office or online at the [USPS website](#).
2. Calculate the fees for all of the mailpieces. This can include the cost of the Certificate of Mailing fees as well as the total postage amount.
3. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
4. If you have the accounting feature enabled, tap **Account** and select an account. If your device's model number is 8H00 or 9H00 and if you have only a single account, once you select that account the device will remember that account the next time you start Envelope Printing or Print on Envelopes.
5. Scroll down and tap **Print Mode** on the Envelope Printing or Print on Envelopes screen.
6. Tap **Certificate of Mailing**.

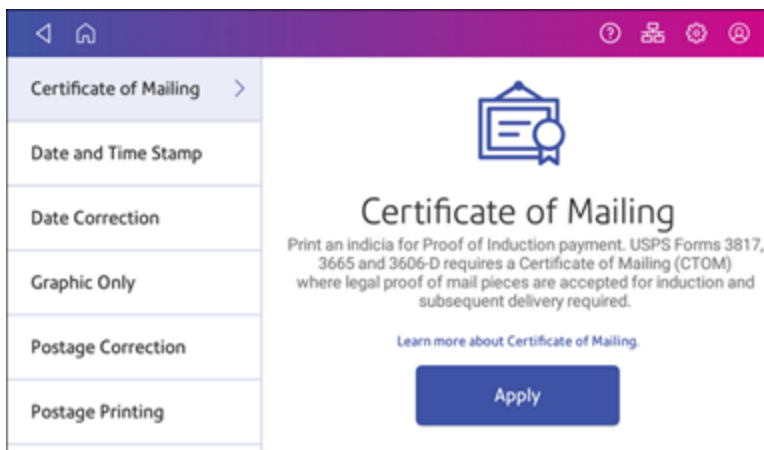

7. Tap **Apply**.

The screenshot shows a mobile application interface for USPS. At the top, there's a navigation bar with icons for back, home, help, settings, and a user profile. Below this, a status bar displays 'Reset to Default', 'Postage Balance \$335.500', and '125 Pieces | \$62.500'. The main content area is divided into two sections. On the left, there's a sidebar with options: 'Preset Default *', 'Account Marketing', and 'Print Mode Certificate of Mailing'. The right section contains a large text box with the instruction: 'Enter the single bulk payment amount below. Print and attach to Forms 3817, 3665 and 3606-D.' Below this text is a red 'US POSTAGE' logo. A large red arrow points to a red-bordered box containing the text '\$0.000'. Below the arrow, the text 'Not Ready to Print' is displayed in red.

8. Tap on the postage amount and enter the amount you calculated in step 2.
9. Feed the appropriate form (3606-D, 3665, or 3817) through the feeder so that the device stamp prints on the form or on a tape strip that can be applied to the form. Alternatively, you can print the device stamp on each of the mailpieces included in the Certificate of Mailing.
10. Take the mailpieces and the printed form to the Post Office. They will apply a round stamp proof of induction mark that serves as legal proof that your items will enter the USPS.

Using USPS special services

You can select additional services for your mail. These include Certified Mail, Insured Mail, Delivery Confirmation, Registered Mail and more. The number and types of services available depend on the class of mail.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap **Class**.
3. Tap **Start Over** to see a list of the available classes.
4. Tap the class you wish to use. Sub-classes appear when available for the selected class.
 - For some classes, you must select the type of mailpiece. For example, if you select First-Class Retail Metered, you must select either Letter, Large Envelope, or Package.
5. Select any special services you wish to use.
6. Enter a ZIP code if required.
7. For some classes, you need to either scan or manually enter the Electronic Certified barcode from your label. Then, attach your label to your envelope or package.
8. Tap **Apply**.

Updating postal rates or software for printing on envelopes

Automatic updates

Your device updates postal rates and software automatically.

Keep your device turned on and connected to your network to get your automatic updates, as the device downloads updates during the evening hours.

Manual postal rate updates

1. Select Rates and Updates:
 - Tap **SendPro Apps**, then **Rates and Updates**.
2. If new rates are available, your device downloads and installs updates.
 - a. If the rates are available today, this message appears:
"New postage rates took effect today. Your device has been updated and new rates are already in effect. To learn more, visit pitneybowes.com/ratesandupdates."
 - b. If the rates took effect already, this message appears:
"New postage rates took effect on [effective date]. Your device has been updated and new rates are already in effect. To learn more, visit pitneybowes.com/ratesandupdates."
 - c. If the new rates are pending, this message appears:
"New postage rates take effect on [future effective date]. Your device has been updated and you'll see the new rates then. To learn more, visit pitneybowes.com/ratesandupdates."
3. To continue tap **Got it**.

Manual software updates

1. Select Rates and Updates:
 - Tap **SendPro Apps**, then **Rates and Updates**.

2. If new rates are available, your device downloads and installs updates.
 - a. If the rates are available today, this message appears:
"New postage rates took effect today. Your device has been updated and new rates are already in effect. To learn more, visit pitneybowes.com/ratesandupdates."
 - b. If the rates took effect already, this message appears:
"New postage rates took effect on [effective date]. Your device has been updated and new rates are already in effect. To learn more, visit pitneybowes.com/ratesandupdates."
 - c. If the new rates are pending, this message appears:
"New postage rates take effect on [future effective date]. Your device has been updated and you'll see the new rates then. To learn more, visit pitneybowes.com/ratesandupdates."
3. To continue tap **Got it**.

Adding or refilling postage for printing on envelopes

Add or refill postage for your Envelope Printing or Print on Envelopes balance as soon as you receive a message that your funds are getting low.

Before you begin

Check that your device is connecting to the internet.

- For wired network connections, the following connection image appears in the toolbar:



- If you have a wireless connection, the following connection image appears in the toolbar:



Add postage for Printing on Envelopes

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap **Postage Balance**.
3. Tap **Refill Postage**.
4. Enter the amount of postage you wish to add.

5. Tap **Refill Mail Postage**.
6. Tap **View Receipt** to view or print a receipt.
7. Tap **Done**.
8. Your updated postage balance appears on the Envelope Printing or Print on Envelopes app.

Sealing envelopes and printing postage

Use the moistener on your device to seal your envelopes before you print postage.

1. Check the level of sealing solution by checking the sight window on the front of the feeder deck.



2. Place the envelopes with the flap side facing down and the top edge against the rear wall.

3. Make sure that the seal/no seal lever is set to the seal position (all the way to the left).



4. Place the envelopes on the feed deck. Tap **Start** on the Envelope Printing or Print on Envelopes app.

If the moistener tank is full and your envelopes do not seal correctly, clean or replace the moistener brush and wick.


Filling the moistener tank

Your device will need refills of E-Z Seal® in order to seal envelopes. Follow these steps to fill the moistener tank.

1. Check the level of sealing solution in the moistener tank by checking the sight window on the front of the feeder deck.



2. Open the feeder access cover to access the moistener bottle.

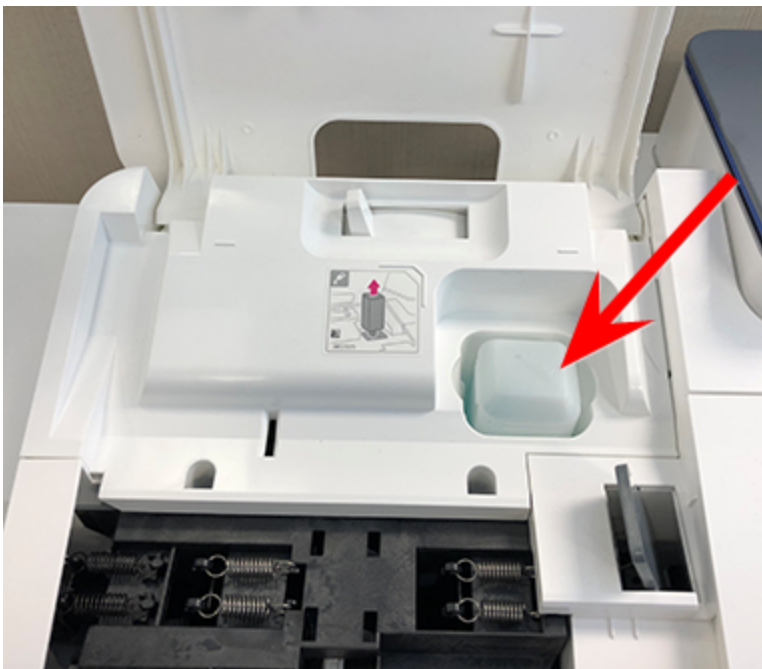

3. Remove the moistener bottle and place it with the cap up on a flat surface.

4. Unscrew the moistener bottle cap and fill it with Pitney Bowes E-Z Seal®. Do not overfill the moistener bottle.



5. Screw the cap back on and place the bottle back in its original site (upside down in the device).
6. Close the feeder access cover.
7. If the tank is empty, allow 30 minutes for the moistener brush and wick to get completely wet.

Replacing the ink cartridge


Replace the ink cartridge when the low ink warning appears. This ensures your device is in optimal working condition.

1. Tap **Settings**.




2. Scroll down and tap **Envelope Printer Maintenance**.
3. Tap **Install Ink**.


4. Lift the top cover. The ink cartridge moves to the front position.
5. Remove the ink cartridge, as shown on the label next to the cartridge holder.

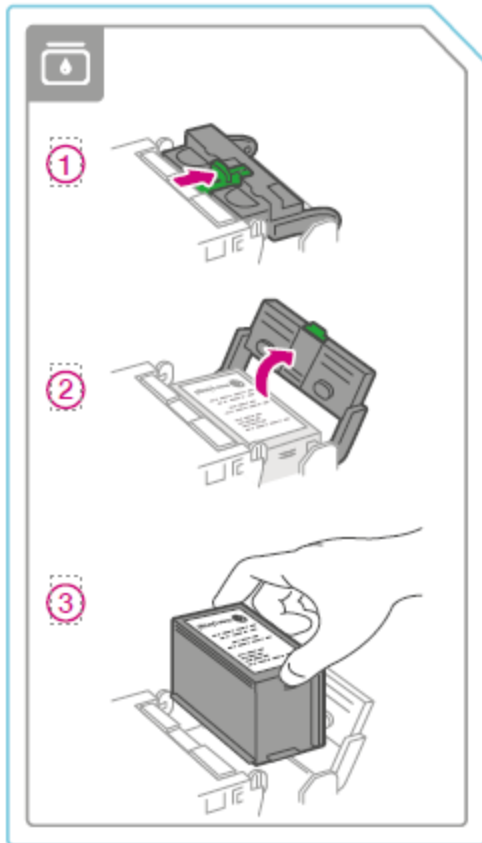

6. Insert the new ink cartridge, then close the ink cartridge guard.

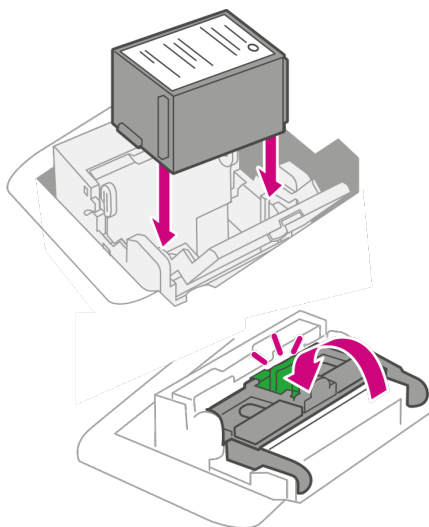

7. Close the top cover.

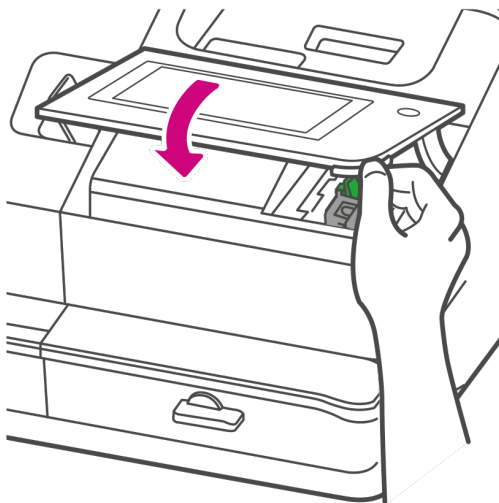

8. The cartridge repositions itself and the Envelope Printer Maintenance screen appears.
9. Print a test pattern to ensure that your ink cartridge installs properly.

Printing a test pattern


Print a test pattern to see if the printhead is working properly or if you have enough ink in the cartridge.

1. Tap **Settings**.




2. Scroll down and tap **Envelope Printer Maintenance**.
3. Tap **Print Test Pattern**.
4. Insert the envelope into the device when the message "Print a Test Pattern?" appears.

5. Examine the pattern printed on the envelope:
 - Tap **Done** if the lines are unbroken and match the "Good" test pattern shown on the display.
 - Tap **Clean Print Nozzle** if the test pattern has missing or incomplete lines
 - Once the cleaning operation completes, you must print another test pattern.
 - If this new pattern still has broken or missing lines, you may need to replace the ink cartridge or clean or replace the printhead.
 - If you see no improvement in print quality, do not repeat the cleaning, as cleaning the print nozzles consumes ink.

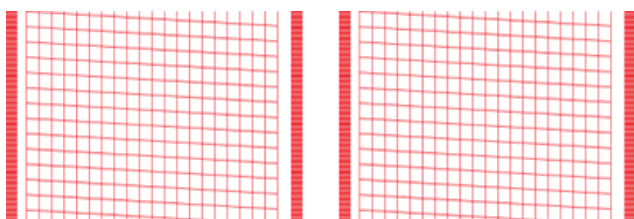

Good Test Pattern

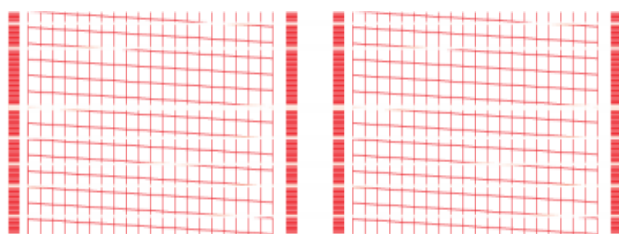


Bad Test Pattern

Adding favorite apps

Add your favorite apps to make them easy to find on the Home screen.

1. Tap **SendPro Apps** on the Home screen. All the available apps display.
2. Tap **Edit Favorites** and a star appears next to each app.

3. Tap the star next to an app to make it a favorite.

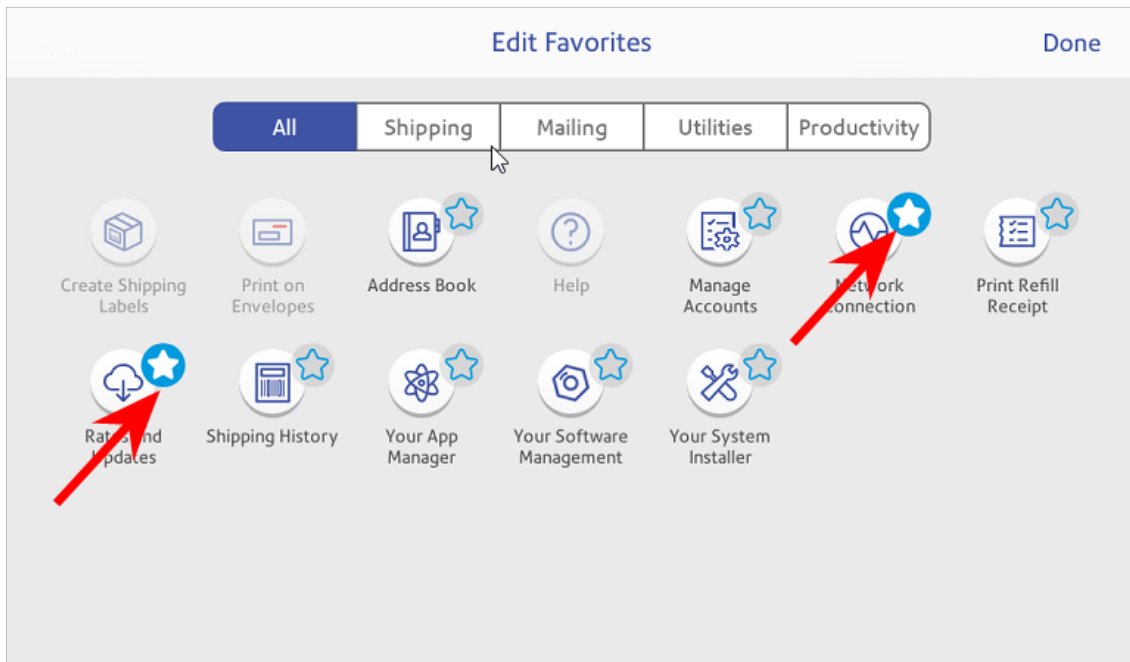

4. Tap **Done** when complete.


Creating presets for printing postage

Create presets to store a group of commonly-used settings. Presets can store settings such as a postage class, an account and a graphic. The maximum number of presets you can have is 21. This includes the default preset.


1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap **Class**, select the class and any special services, messages or graphics.
3. Verify the settings in the Envelope Printing or Print on Envelopes app.

4. Tap the **star** in the Preset box.

Important: You must modify something in the Envelope Printing or Print on Envelopes app for the Preset star to appear.

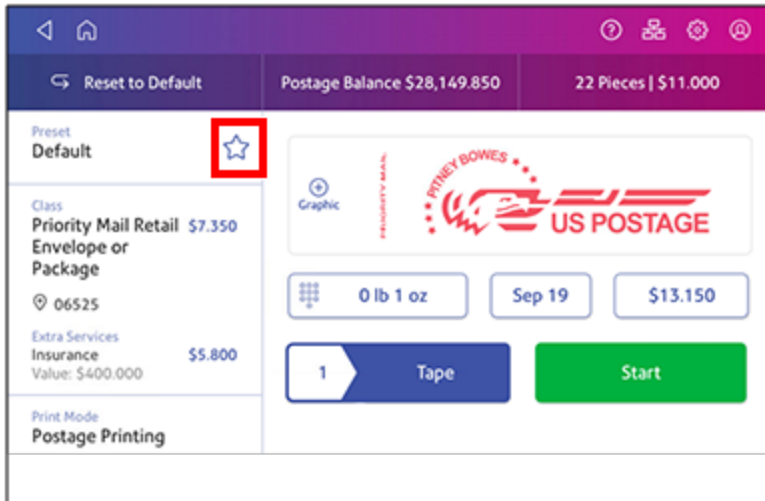

5. Tap **Save New Preset** to save it. If you wish to save it and replace the default setting, tap **Replace Default Preset**.

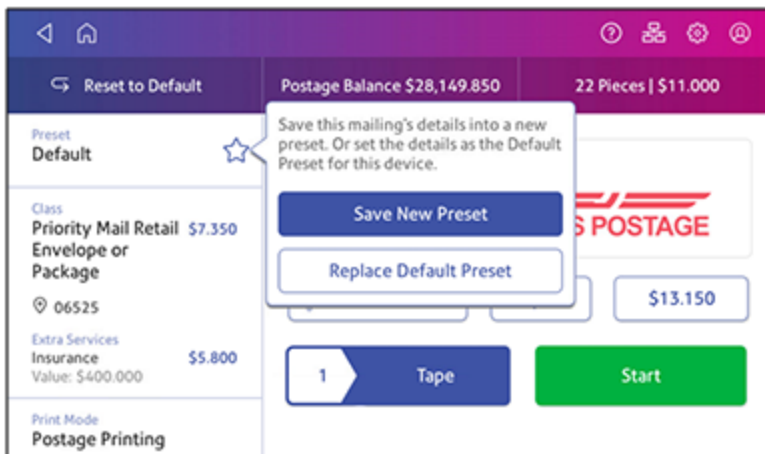

6. For a new preset, enter a name, then tap **Save**.

Selecting a preset for printing postage

Select a preset to quickly apply a group of settings.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap **Preset**.
3. Tap the preset you want to use, then tap **Apply Preset**.

If you select a preset and do not use it within about one minute, the Envelope Printing or Print on Envelopes screen restores the default preset values. The same is true when you switch your device off or it enters sleep mode.

2 - Connectivity information

In this section

Setting up a wired network connection.....	46
Setting up a wireless (Wi-Fi) network connection.....	49
Connecting to a hidden Wi-Fi network.....	49
Forgetting a Wi-Fi network.....	51
Checking your network connection.....	53
Finding the MAC address for wired and wireless networks.....	53
Setting up a Proxy server.....	57

Setting up a wired network connection

Use a network cable to connect your device to the Pitney Bowes Data Center.

Step 1: Plug in your network cable

Plug one end of your network cable to your device and the other end to an internet jack on the wall or a router.

Step 2: Choose the connection type

Select one of the two connection types supported for this device:

- *DHCP*
- *Static IP*

DHCP is the most common connection type. Choose DHCP if you are unsure which connection protocol to use or contact your IT department for advice.


DHCP

1. Tap **Settings**.



2. Tap **Wired**.

3. Select **DHCP**.

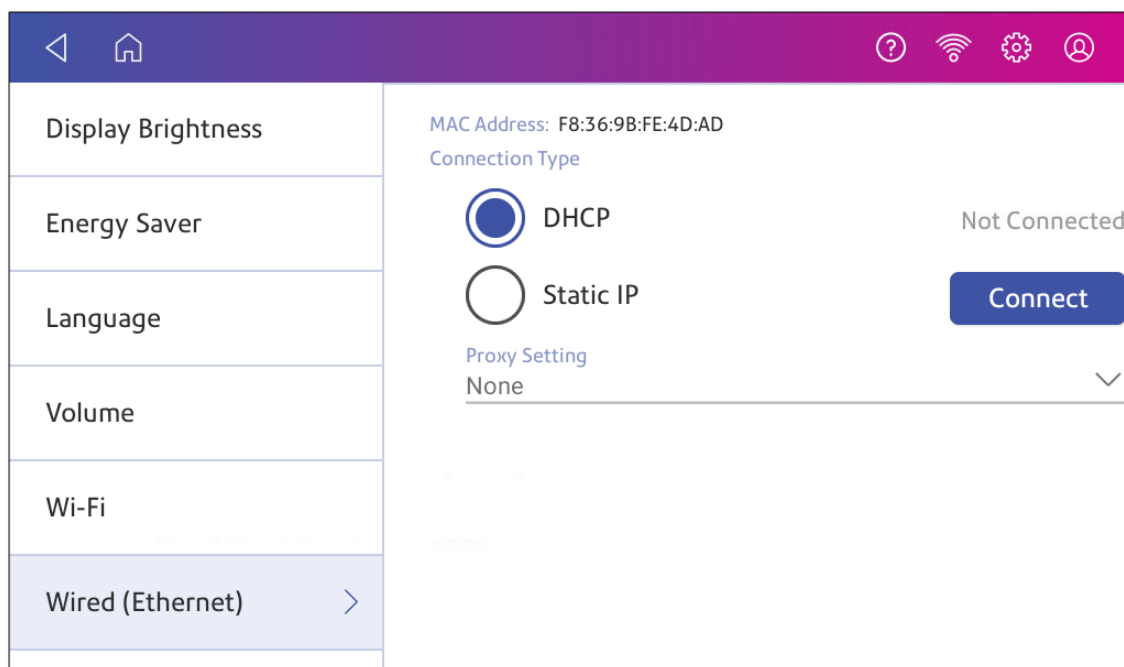

4. Tap **Connect**.
5. If it does not connect, unplug the power cord.
6. Wait 30 seconds. The screen should turn off after 10 seconds.
7. Plug the power cord back in directly into a wall outlet.
8. Quickly tap and release the power button to turn the device back on.
9. Tap **Settings**.




10. Tap **Wired (Ethernet)**.
11. Tap **DHCP**.
12. Tap **Connect**.

Static IP

1. Tap **Settings**.



2. Tap **Wired**.
3. Select **Static**.

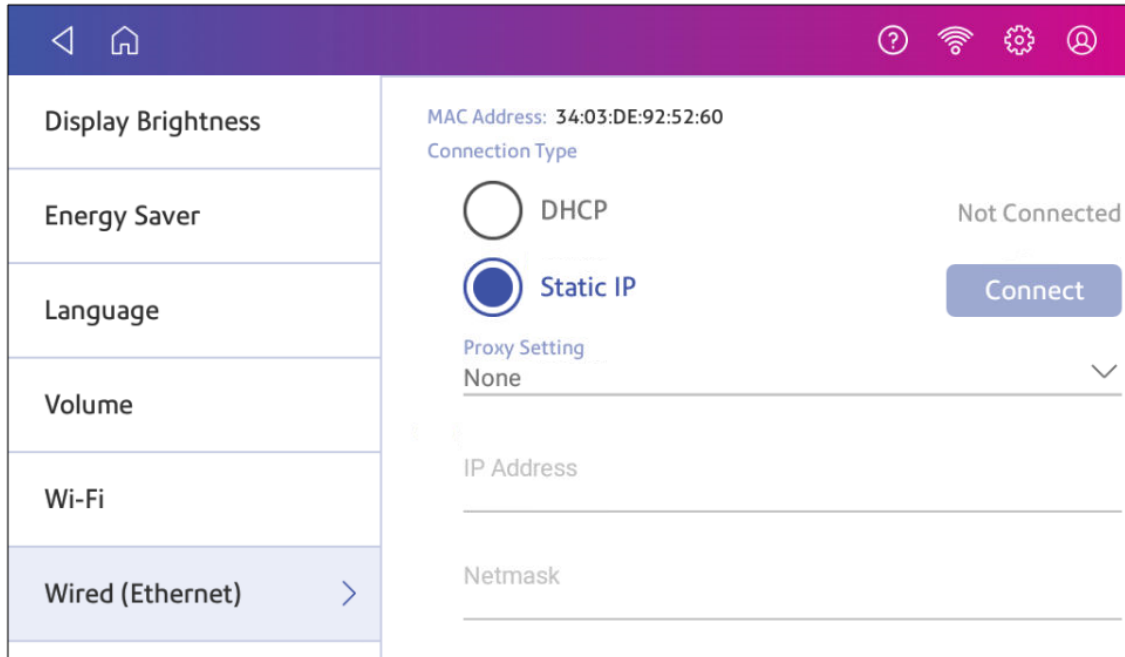

4. Contact your IT department to obtain the settings you will need to enter for your device. The values needed are:
 - **IP Address**
 - **Netmask**
 - **Gateway**
 - **DNS Address.**
5. Enter the settings you obtained in step 4 for the **IP Address**, **Netmask**, **Gateway**, and **DNS Address** in the corresponding fields.
6. Tap **Connect**.
7. If the device fails to connect, remove the network cable from the back of the device.
8. Tap **Connect**. Wait for the attempted connection to fail.
9. Plug the network cable back in.
10. Delete the values in the **IP Address**, **Netmask**, **Gateway**, and **DNS Address** fields.
11. Enter the **IP Address**, **Netmask**, **Gateway**, and **DNS Address** that you obtained in step 4.
12. Tap **Connect**.

NOTE: If your device's model number is 8H00 or 9H00 it will remember the Static IP information even if you switch back to DHCP and then back again. This information includes IP Address, Netmask, Gateway and DNS Address as well as the proxy information.

Setting up a wireless (Wi-Fi) network connection

You can connect your device with a wireless network connection.

1. Tap **Settings**.



2. Tap **Wi-Fi** in the Device & Network section.
3. Choose your Wi-Fi network from the list. Tap **Add Network** if your Wi-Fi network does not appear.
4. Enter your Wi-Fi password.
Tip: Use the show password option to make sure that you enter your password correctly.
5. Tap **Advanced Options** if your network requires advanced network settings such as a Static IP address:
 - To set up a Static IP address:
 - a. Select the **IP Setting** menu and choose **Static**.
 - b. Tap on the line and enter the value provided by your IT department.
 - c. Tap the > in the green circle.

Connecting to a hidden Wi-Fi network


Add a network when you want to connect using Wi-Fi and your network is not present in the Wi-Fi list.

1. Tap **Settings**.




2. Tap **Wi-Fi** in the Device & Network section to see a list of available networks.

3. Tap **Add Network** at the top of the Wi-Fi screen.

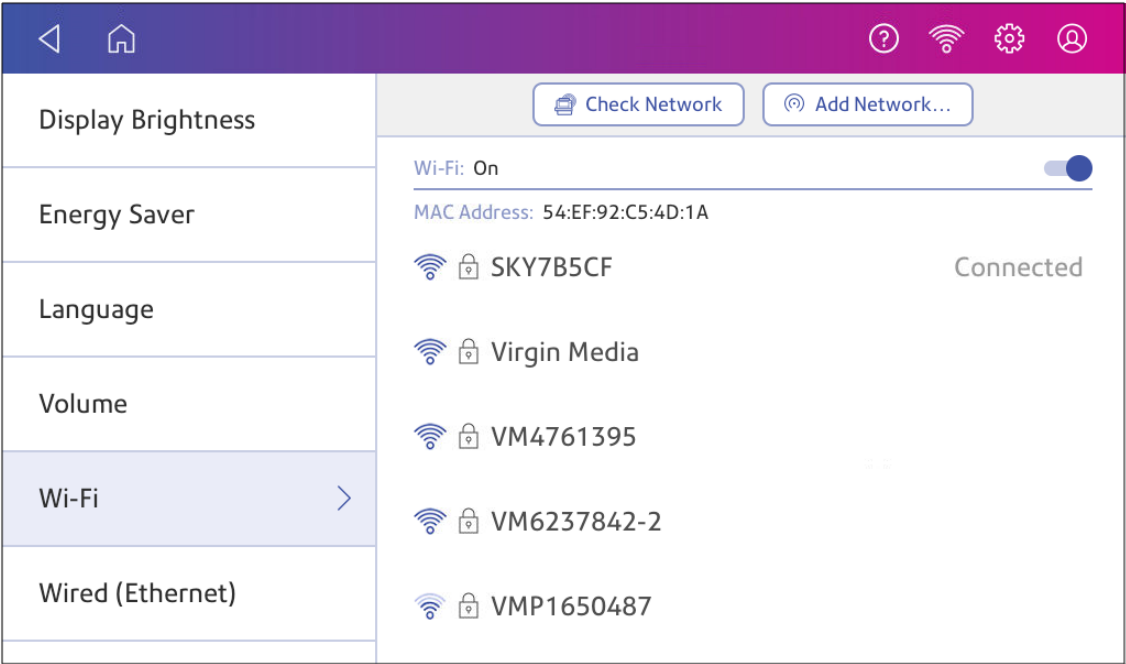

4. For each of the following steps, please consult with your IT department to obtain the necessary information.
 - a. Tap the down arrow in the Security field and select the security method.

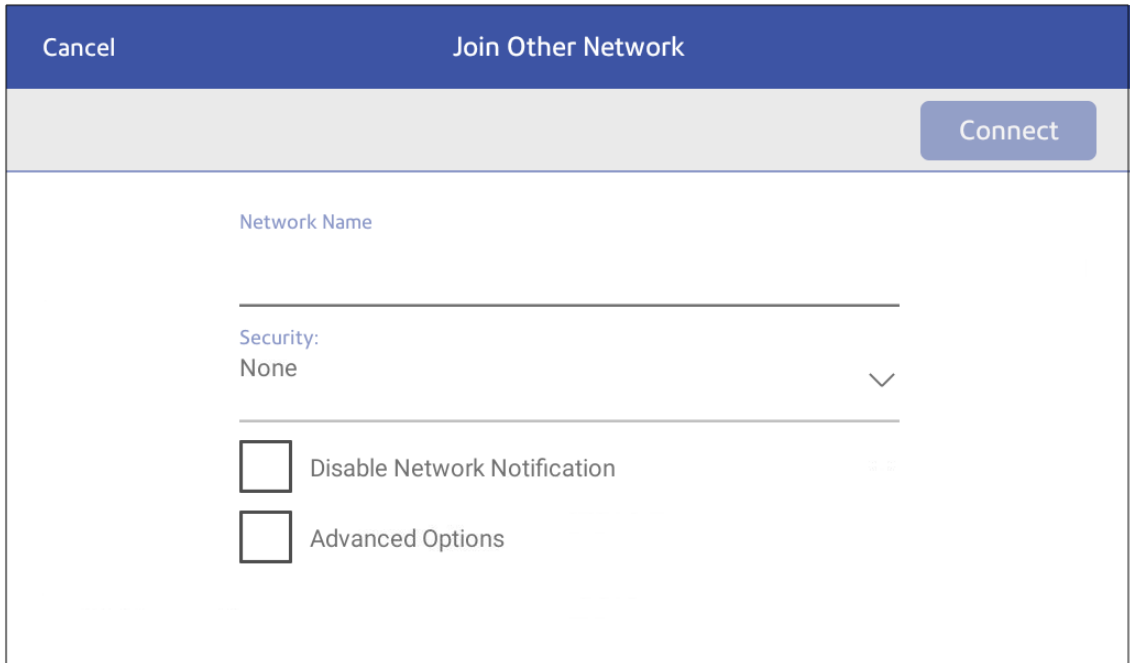

- b. Tap **Advanced Options** to enter a static IP or set up a proxy.
5. Tap **Connect** when done.

Forgetting a Wi-Fi network

Forget a Wi-Fi network if:


- You do not want your device to automatically connect to that network or
- You need to resolve a wireless network issue.

1. Tap **Settings**.




2. Tap **Wi-Fi** in the Device & Network section.

- 3. Tap the network you want to forget. You can only forget a network if you’ve connected to it before.

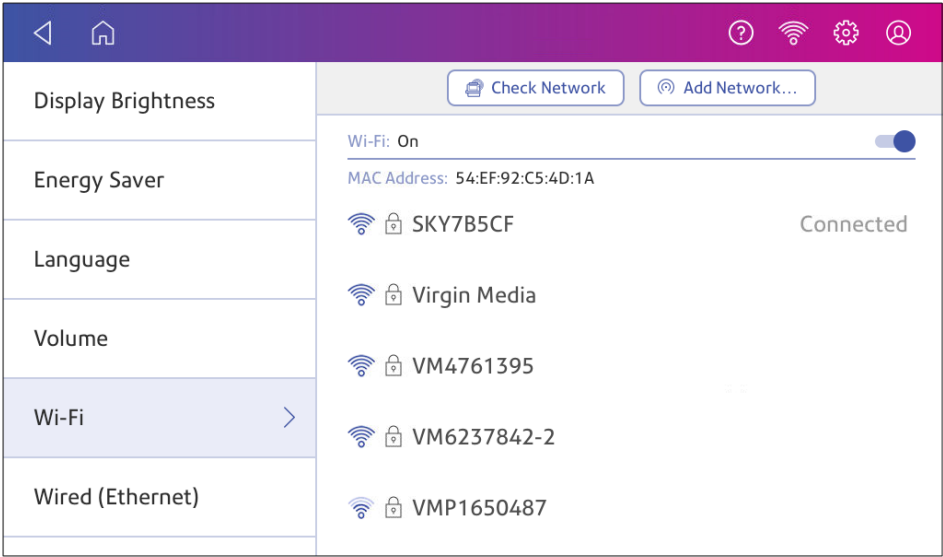

The network details appear.

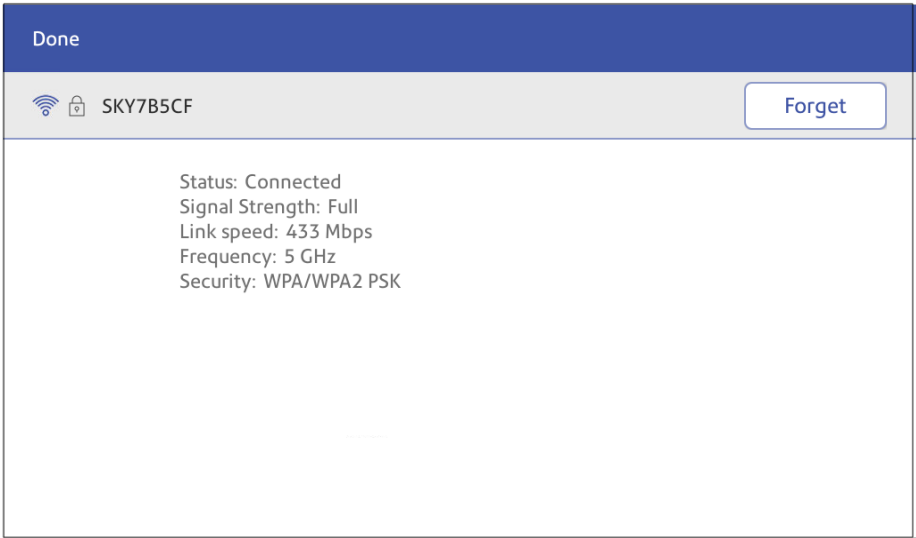

- 4. Tap **Forget** to forget the network connection.

Checking your network connection

Use the Network Connection app to check that you have the necessary internet services to connect to the internet. The app helps diagnose network connection issues.

Your IT department may be blocking certain services. Only they will know if the necessary services are available on your network.

1. To open and run the network checking app:
 - Tap **SendPro Apps** on the Home screen, then tap **Network Connection**.
2. The device then provides you with the results of the network check.
3. Tap **Close** twice to return to the Home screen.

If you are unable to connect to the internet, ask your IT department or internet provider to check the internet settings before you contact Pitney Bowes.

Finding the MAC address for wired and wireless networks

The MAC address is the network identifier for the device. IT uses it to allow the device onto the network.

Your device contains two MAC addresses: One for wireless connections and one for wired connections.


Locating the MAC address for wireless connections

1. Tap **Settings**.



2. Tap **Wi-Fi**.

3. The MAC address appears above the list of wireless networks.

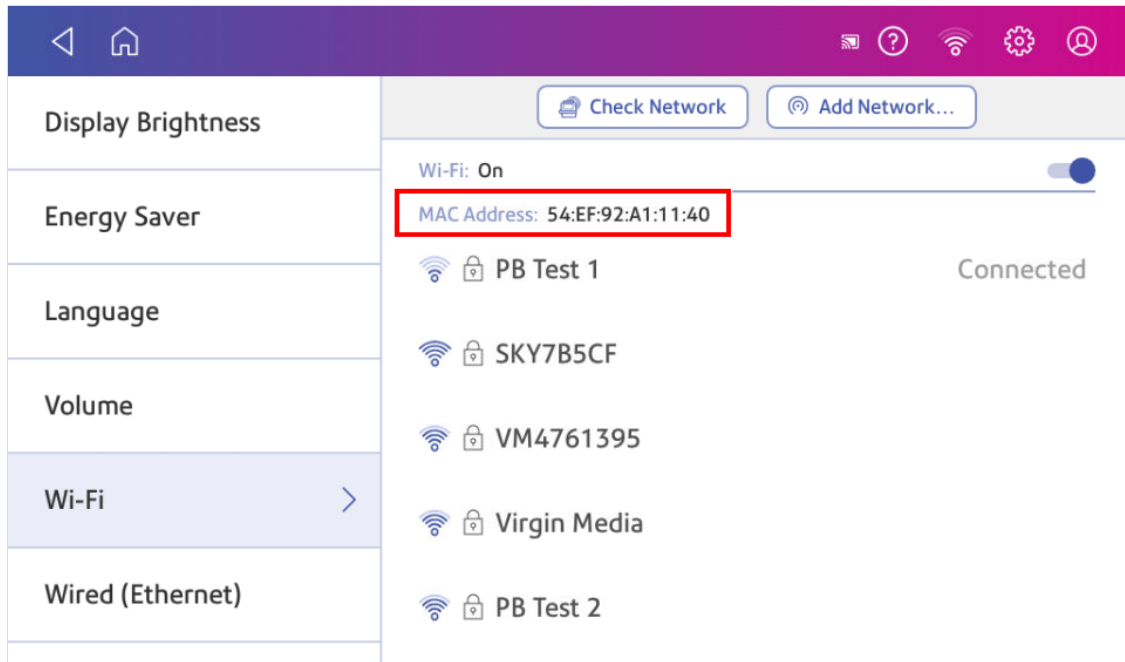


Locating the MAC address for wired connections

1. Tap **Settings**.




2. Tap **Wired (Ethernet)**. The MAC address is present at the top of the screen.

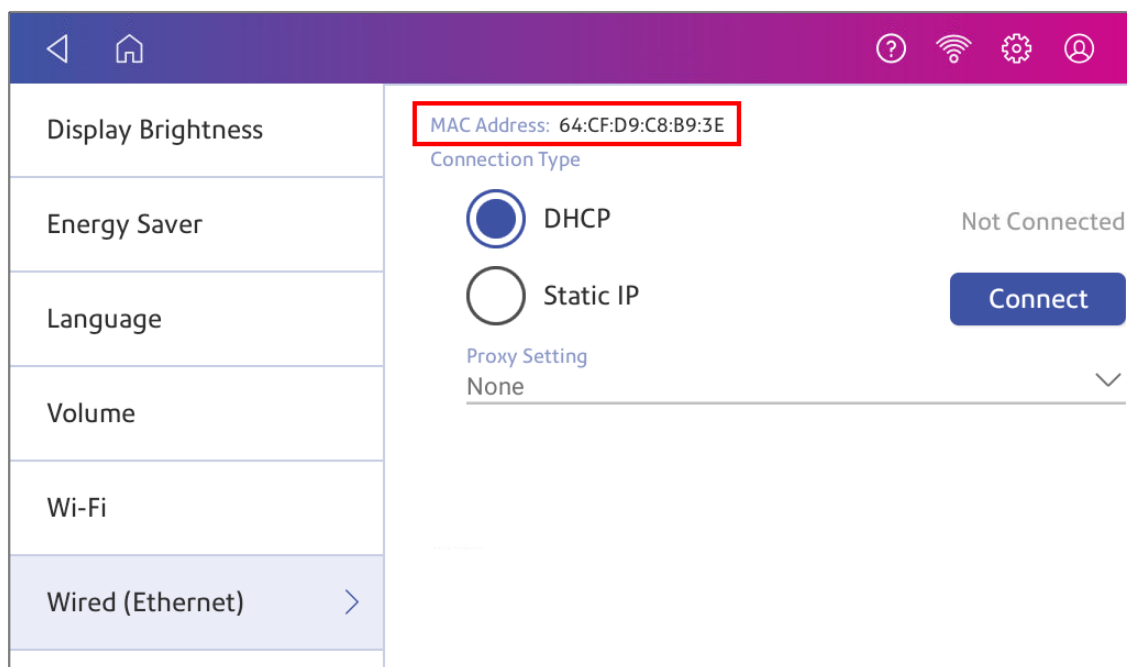


3. Tap **Check Network**. The Checking Network Connection screen appears.

4. Tap **View Details** in the Connected to wired network box when the test finishes.

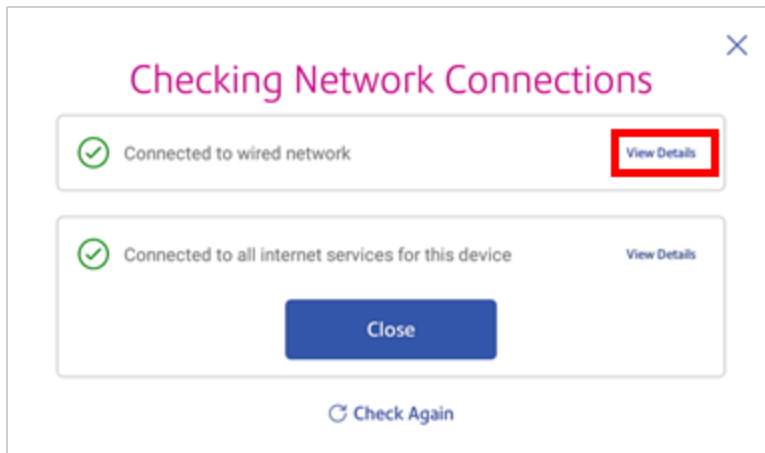

The MAC address appears:

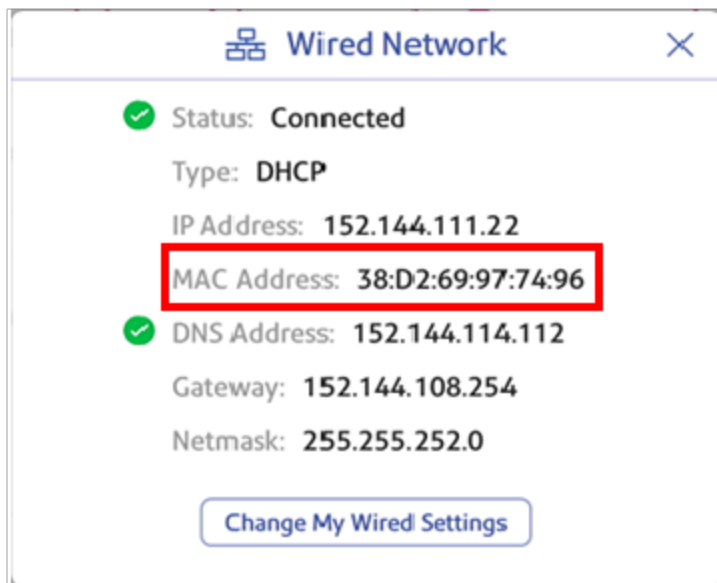

5. Tap **X** to close this window.
6. Tap **Close**, then the **back arrow** to return to the Home screen.

If the MAC address does not appear, try these steps:

1. Tap **Settings**.



2. Scroll down to the Advanced Device Options section and tap **About this C-Series**.
3. Scroll down to the Base Network Info section to locate the MAC Address.

System Info		Upload Report
Base Network Info		Rates
DHCP	Disabled	Rate Manager version
DNS0	192.168.0.1	11.05
DNS1	null	
DNS2	null	Weight units
DNS3	null	METRIC
Gateway	192.168.10.244	
IP	0.0.0.0	
IPV6	null	Module count
IPV6LINK	null	Total:7
LanState	false	Active rating:7
MacAddress	64:CF:D9:C8:B9:3E	
Name	eth0	Module info
Netmask	0.0.0.0	CCF: HZAU000.H.01
		HZAU001.C01 ID: 49
		HZAU002.C01 ID: 50
		HZAU003.C01 ID: 51
		HZAU004.D01 ID: 52
		HZAU005.C01 ID: 53
Wifi Network Info		
IP	192.168.0.80	
Gateway	192.168.0.1	
Netmask	255.255.255.0	

4. Tap **Cancel** to return to the Home screen.

Setting up a Proxy server

A Proxy server is a computer that acts as a gateway between your local network, your device, and the internet. Proxy servers provide increased performance and security.

If your network requires a proxy server, you must contact your IT department or service provider to obtain the proxy server information to set up a proxy server.

Choose the connection type

Choose how you connect your device to set up a Proxy server:

- [Setting up a Proxy server using a Wi-Fi network connection](#)
- [Setting up a Proxy server using a wired network connection](#)

Setting up a Proxy server using a Wi-Fi network connection

1. Tap **Settings**.



2. Tap **Wi-Fi** in the Device & Network section.
3. Select the network from the list.
4. Tap on the **Advanced Options** checkbox to select it.
5. Scroll down and tap the arrow next to Proxy, then select **Manual**.

 A screenshot of the 'Wireless Network' settings screen on an iOS device. The screen has a blue header with 'Cancel' on the left and 'Wireless Network' in the center. Below the header, there is a section for the selected network, 'VM4761395', with a Wi-Fi icon and a lock icon on the left, and a 'Connect' button on the right. Underneath this section, there is a checkbox labeled 'Advanced Options' which is checked. Below the checkbox, there is a 'Proxy' dropdown menu that is open, showing 'Manual' as the selected option. Below the dropdown, there are three text input fields: 'Proxy Hostname', 'Proxy Port', and 'Bypass (example1.com,example2.com)'.

6. Enter the IP address, HTTP or HTTPS proxy address of your proxy server in the **Proxy Hostname** field.
7. Enter the port number for the proxy server in the **Proxy Port** field.
8. (Optional) Enter any specific URLs or URL patterns (such as internal addresses) that you wish to bypass the proxy in the **Bypass** field.


9. If your Proxy Server requires authentication, select the **Need Authentication** check box. Additional fields appear.
 - a. Enter the Proxy username in the **Proxy Username** field. This may be case sensitive for some proxy servers.
 - b. Enter the Proxy password in the **Proxy Password** field. This is case sensitive for proxy servers.

Setting up a Proxy server using a wired network connection

1. Tap **Settings**.



2. Tap **Wired (Ethernet)** in the Device & Network section.
3. Select either **DHCP** or **Static IP**.
4. If you select DHCP, tap on the drop-down arrow next to Proxy Setting and select **Manual**.

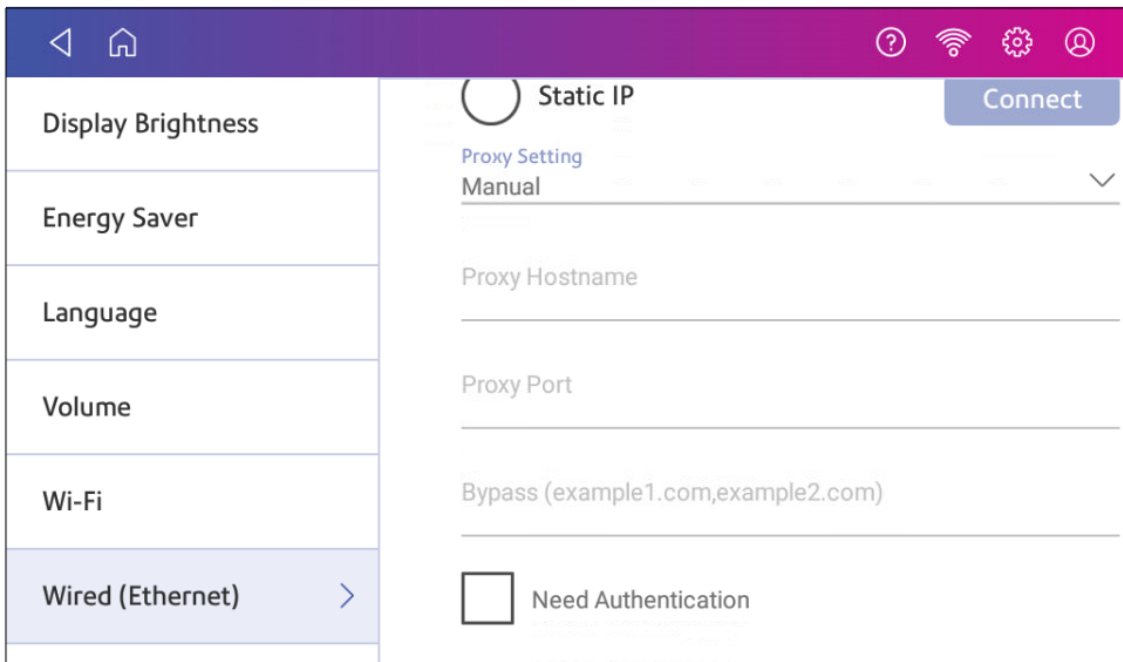

5. Enter the IP address, HTTP or HTTPS proxy address of your proxy server in the **Proxy Hostname** field.
6. Enter the port number for the proxy server in the **Proxy Port** field.

7. (Optional) Enter any specific URLs or URL patterns (such as internal addresses) that you wish to bypass the proxy in the **Bypass** field.
8. If your Proxy Server requires authentication, select the **Need Authentication** check box. Additional fields appear.
 - a. Enter the Proxy username in the **Proxy Username** field. This may be case sensitive for some proxy servers.
 - b. Enter the Proxy password in the **Proxy Password** field. This is case sensitive for proxy servers.

3 - Managing your Device

In this section

Creating or disabling the security PIN.....	62
Adjusting time zone and scale location code.....	63
Adjusting display brightness.....	63
Adding favorite apps.....	64
Setting up the Energy Saver.....	65
Using USPS Informed Delivery.....	65
Installing a scale.....	65
Uploading system logs.....	66

Creating or disabling the security PIN

Create a security PIN to prevent unauthorised use of your device.

If you created a security PIN when you installed your device, you must enter it when you turn your device on or after it enters sleep mode.

Create a security pin

1. Tap **Settings**.



2. Tap **Security PIN** in the Device & Network section.
3. Tap **Create PIN**.
4. Enter a 4-digit numeric PIN using the keyboard on the display.
5. Verify your PIN by entering it again.

Change or disable the security PIN

1. Tap **Settings**.




2. Tap **Security PIN** in the Device & Network section.
3. Tap **Change PIN** or **Turn OFF Security PIN**.
4. Enter the current security PIN for either option.

Manually lock your device

1. Tap the user profile image.



2. Tap **Lock this device**. The screen saver displays shortly after the Device is Locked screen appears.

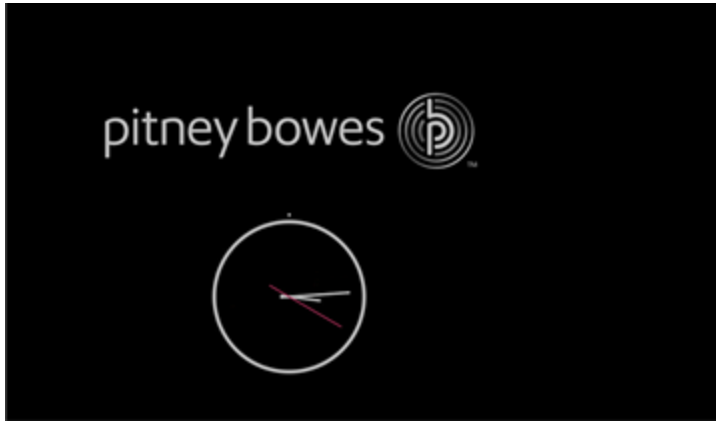

If you forget your Security PIN, tap on the **Forgot PIN?** link to get help.

Adjusting time zone and scale location code

When you move your device to a new location or install a new scale, you must modify the location code and time zone value.

1. Tap **Settings**.



2. Tap **Location & Time Zone**.
3. Enter the new location code.
4. Enter the time zone.
5. Tap **Apply**.

Adjusting display brightness

Set the brightness of the display to suit your work space.

1. Tap **Settings**.




2. Tap **Display Brightness** in the Device & Network section of the screen.
3. Move the slider to adjust the brightness.
4. Tap the **back arrow** or **Home** to exit the Settings screen.

Adding favorite apps

Add your favorite apps to make them easy to find on the Home screen.

1. Tap **SendPro Apps** on the Home screen. All the available apps display.
2. Tap **Edit Favorites** and a star appears next to each app.
3. Tap the star next to an app to make it a favorite.

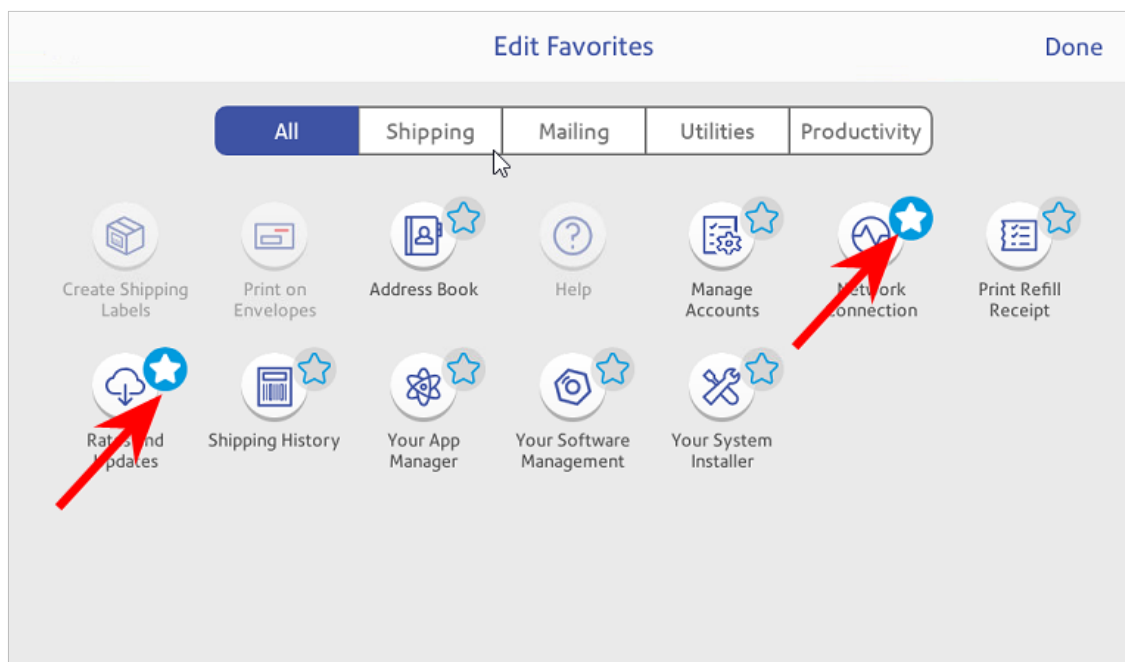

4. Tap **Done** when complete.

Setting up the Energy Saver

Use the energy saver to reduce energy usage. The energy saver turns your device off after a period of inactivity.

1. Tap **Settings**.



2. Tap **Energy Saver** in the Device & Network section.
3. Tap in the **Time after inactivity to turn off** field.
4. Select the amount of time you want your device to remain inactive before it shuts down. The shorter the time you select, the more energy you save.

Using USPS Informed Delivery

USPS Informed Delivery allows you to preview your mail and manage your packages. Informed Delivery allows you to:

- View grayscale images of the exterior, address side of letter-sized mailpieces.
- Track packages in one app.

For more information on USPS Informed Delivery, go to the USPS Informed Delivery website.

1. To access USPS Informed Delivery:
 - Tap **SendPro Apps** on the Home screen, then tap **USPS Informed Delivery**.
2. Enter your USPS.com username and password.
 - If this is the first time you are using Informed Delivery on your device, you need to verify your USPS account. Follow the prompts to complete the verification process.

Installing a scale

Install a scale if you did not install one when you installed your device. Your device contains step-by-step installation instructions for compatible scales.

1. Tap **Settings**.



2. Scroll to the Advanced Device Options section at the bottom of the Settings screen, then tap **Scale Installation Guides**.
3. To view all the available scales, swipe to the left on the screen.



4. Tap to select the appropriate scale, then tap **Continue**.
5. Follow the instructions on the screen. To advance to the next step, swipe the screen to the left.


Uploading system logs

Your device creates system logs that monitor operations on your device. If you need to upload system logs to a Pitney Bowes support representative, you can find them in the Advanced Device Options section under Settings.

1. Tap **Settings**.



2. Scroll down to the Advanced device Options section.
3. Tap **System Log Upload**.
4. Select the logs you want to upload.
5. Tap **Upload Selected Logs**.

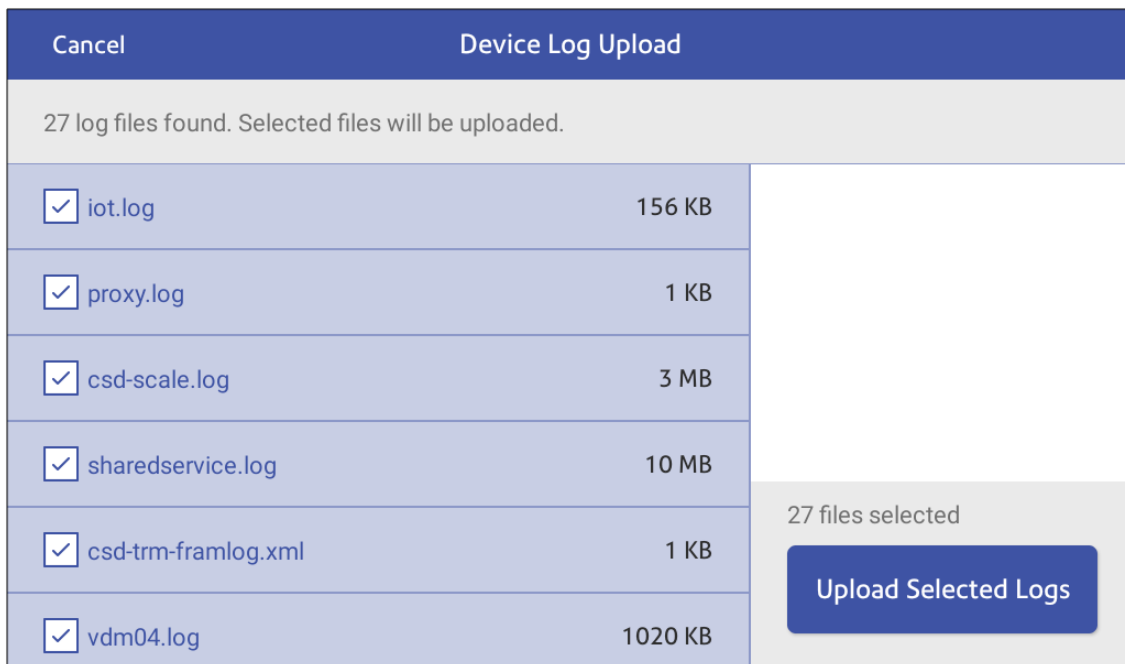

6. The message **Sending Log Files** appears. Once the upload is complete, the message **Upload Complete** appears.
7. Tap **Got It** to return to the Home screen.

4 - Printing Shipping Labels

In this section

Signing in to and out of the Create Shipping Labels app.....	69
Printing a shipping label.....	69
Comparing rates when printing a shipping label.....	75
Creating a new sender address for shipping labels.....	81
Editing the sender address for shipping labels.....	82
Printing an international shipping label.....	82
Printing a USPS return shipping label.....	92
Printing a USPS scan form.....	93
Reprinting a USPS, UPS or FedEx shipping label.....	94
Canceling a UPS or FedEx shipping label.....	94
Getting a USPS refund for a shipping label.....	95

Signing in to and out of the Create Shipping Labels app

In order to create and print shipping labels you need to sign in to your shipping labels account. You can also prevent unauthorised printing of labels by signing out of your account when you are away from your device.

Please note that the shipping application for the SendPro C devices does not support Single Sign On for PitneyShip Pro users.

Signing in

Tap **Create Shipping Labels** on the Home screen to sign in to the Create Shipping Labels app. You need to enter a name and password.

Signing out

1. Tap the user profile icon in the upper right corner of the toolbar to sign out of shipping labels.




2. Select **Sign out**.


Printing a shipping label

Use Create Shipping Labels to get the best pricing, free tracking, and detailed delivery history for USPS package services. You can also send via UPS® or FedEx®. The packaging options and benefits are almost identical.


1. Tap **Create Shipping Labels** on the Home screen.
2. Tap the carrier you wish to use.

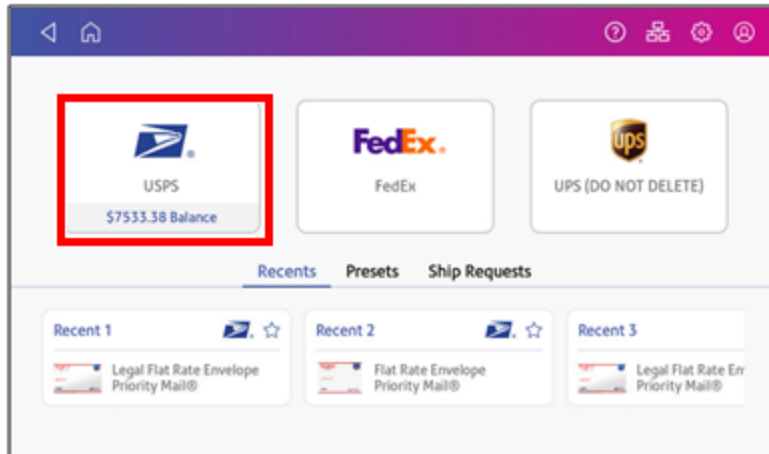

3. Verify that the sender address is correct. If not, tap on the **Sender** field and select a new address.

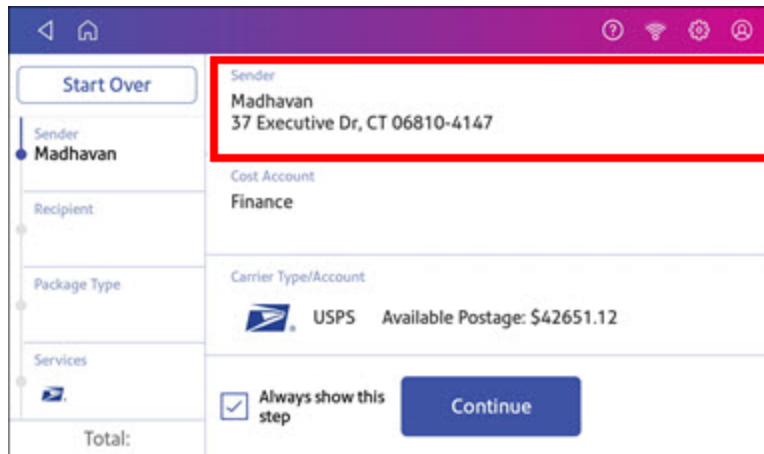

4. Select an account if cost accounts are enabled. Verify the selected cost account. Tap **Cost Account** and select an account to change or add the account..

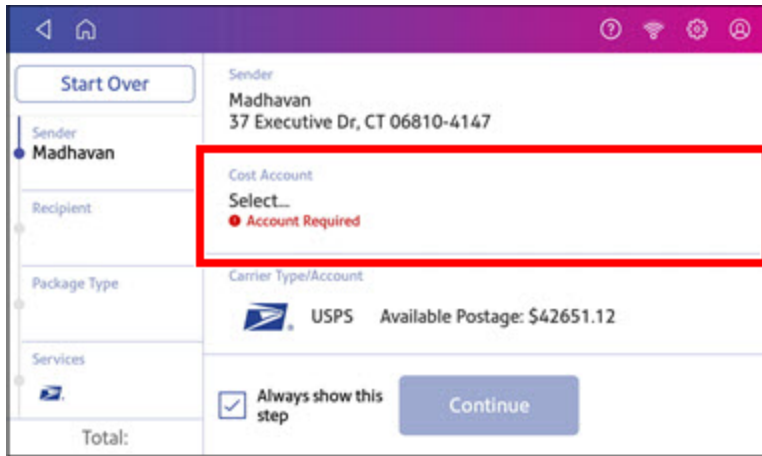


The screenshot shows a mobile application interface for creating a shipping label. The top bar is purple with navigation icons. The main content area is divided into sections: 'Sender' (Madhavan, 37 Executive Dr, CT 06810-4147), 'Cost Account' (Select... with a red error message 'Account Required'), 'Carrier Type/Account' (USPS, Available Postage: \$42651.12), and 'Services' (Always show this step, checked). A 'Continue' button is at the bottom right. A red rectangle highlights the 'Cost Account' section.

Start Over	Sender Madhavan 37 Executive Dr, CT 06810-4147
Sender Madhavan	Cost Account Select... Account Required
Recipient	
Package Type	Carrier Type/Account USPS Available Postage: \$42651.12
Services	<input checked="" type="checkbox"/> Always show this step
Total:	Continue


5. Tap **Continue**.

6. Enter the recipient address manually or tap **Address book** to select one from the address book.

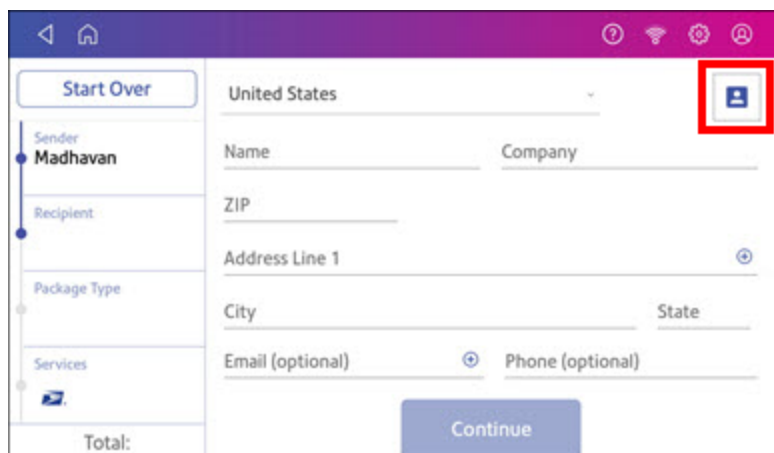

The screenshot shows a mobile app interface for creating a shipping label. On the left is a vertical sidebar with a 'Start Over' button at the top and a list of steps: 'Sender' (Madhavan), 'Recipient', 'Package Type', 'Services', and 'Total:'. The 'Recipient' step is currently selected. The main area is titled 'United States' and contains fields for 'Name', 'Company', 'ZIP', 'Address Line 1', 'City', 'State', 'Email (optional)', and 'Phone (optional)'. A blue 'Continue' button is at the bottom right. A red box highlights an 'Address book' icon (a person silhouette) in the top right corner of the main area.

7. Tap **Continue**.
8. Tap a package type.

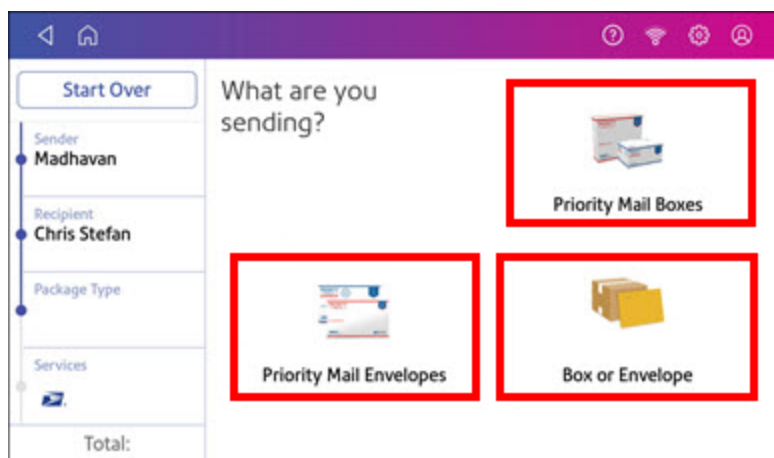

The screenshot shows the same mobile app interface, but now the 'Package Type' step is selected in the sidebar. The main area is titled 'What are you sending?' and displays three options, each with an icon and a label, all enclosed in red boxes: 'Priority Mail Boxes' (top right), 'Priority Mail Envelopes' (bottom left), and 'Box or Envelope' (bottom right). The sidebar and 'Total:' section remain the same.

9. Enter the dimensions and weight of the package:
 - Tap each dimension and enter a value. Tap the green check mark when done.
 - If you have an attached scale, place the package on the scale and tap **Weight**. Tap **Scale** and the weight appears. Tap **Apply**.
 - If you do not have a scale, tap **Weight** and enter the weight, then tap **Apply**.

The screenshot shows the USPS shipping label creation app. On the left, a sidebar lists the steps: Sender (Madhavan), Recipient (Chris Stefan), Package Type (Large Package), and Services. The main area shows the package type as 'Box or Envelope' with a 'Change' button. Below this, there are three tabs: 'Box', 'Envelope', and 'Irregular'. The 'Box' tab is selected. In the center, there is a 3D illustration of a brown cardboard box. To the right of the box, the dimensions are entered as 6 in. x 5 in. x 5 in. Below the dimensions, the weight is entered as 5 lb 0 oz. At the bottom right, there is a blue 'Continue' button.

10. Tap **Continue**.
11. Tap the service you wish to use.

The screenshot shows the USPS shipping label creation app after tapping 'Continue'. The sidebar on the left now includes 'Services' with 'Priority Mail®' selected. The main area shows a table of shipping services with their arrival dates and prices. The 'Priority Mail®' service is highlighted with a red box. Below the table, there is a green 'Print' button and a 'Total: \$7.41' label.

Service	Arrival Date	Price
Library Mail®	Monday, September 24, 2018	\$4.45
Media Mail®	Monday, September 24, 2018	\$4.70
Priority Mail®	Thursday, September 20, 2018	\$7.41
Add additional services		
Parcel Select Ground™	Monday, September 24, 2018	\$7.41
Priority Mail Express™	Thursday, September 20, 2018	\$22.98

- To add additional services, tap **Add additional services**. If you are not adding any extra services, go to step 14.

Sender	Service	Arrival Date	Price
Madhavan	Library Mail®	Monday, September 24, 2018	\$4.45
Recipient: Chris Stefan	Media Mail®	Monday, September 24, 2018	\$4.70
Package Type: Large Package	Priority Mail®	Friday, September 21, 2018	\$7.41
Services: Priority Mail®	Add additional services		
Total: \$7.41	Parcel Select Ground™	Monday, September 24, 2018	\$7.41
	Priority Mail Express™	Thursday, September 20, 2018	\$22.98

- Select the desired services and tap **Apply**.


Service	Selected
Signature Confirmation™	<input checked="" type="checkbox"/>
Insurance	<input type="checkbox"/>
Registered Mail™	<input type="checkbox"/>
Registered Restricted Delivery	<input type="checkbox"/>
Registered Insured Restricted Delivery	<input type="checkbox"/>
Fragile	<input type="checkbox"/>
Collect on Delivery	<input type="checkbox"/>

Priority Mail®
Total: \$9.96

[Apply](#)

- To print the label, tap **Print**.

- On the Label Options screen, tap **Format** and select the printer format.

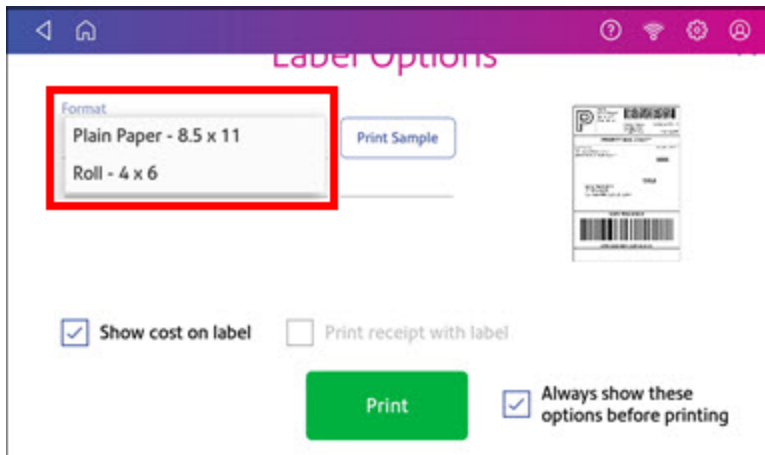


- (Optional) Tap **Print Sample** to print a sample label.
- Tap **Print** again and the label prints.
 - You may need to enter the Sender and Recipient's phone number, as it is required for some services.
- The carrier screen reappears.

Comparing rates when printing a shipping label

If you have SendPro application software version 2.0.061R or later, your system allows you to compare the shipping rates of different carriers for every mailpiece or package.

- Tap **Create Shipping Labels** on the Home screen.
- Tap the carrier you wish to use.

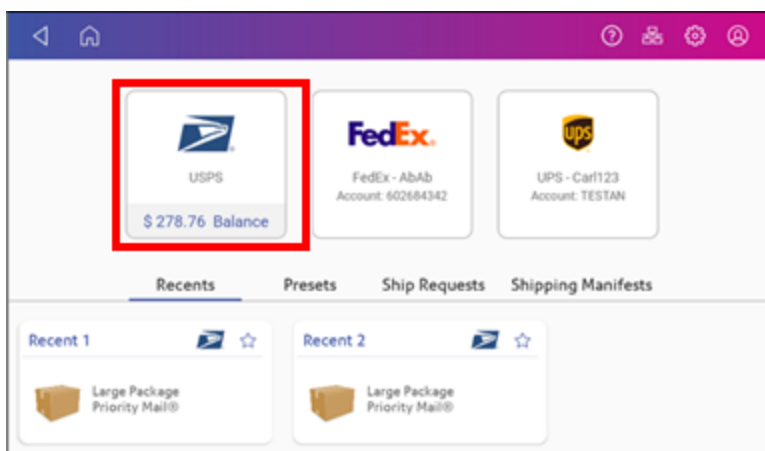

3. Verify that the sender address is correct. If not, tap on the **Sender** field and select a new address.


The screenshot shows a mobile application interface for creating a shipping label. On the left is a vertical sidebar with a 'Start Over' button at the top and a list of steps: 'Sender', 'Recipient', 'Package Type', and 'Services'. The 'Sender' step is currently selected. The main content area displays the 'Sender' information: 'Abe Maybruch' and '37 Executive Dr, Danbury, CT 06810-4147'. This entire section is enclosed in a red rectangular box. Below the sender information, the 'Cost Account' is listed as '8987654434'. Further down, the 'Carrier Type/Account' section shows the USPS logo and 'Available Postage : \$ 278.76'. At the bottom, there is a checkbox labeled 'Always show this step' which is checked, and a blue 'Continue' button.

4. If cost accounts are enabled, you must select an account. If an account is already present, verify that it is correct. To change or add the account, tap **Cost Account** and select an account.

This screenshot is similar to the previous one, showing the same shipping label creation interface. However, in this view, the 'Cost Account' field, which displays '8987654434', is highlighted with a red rectangular box. The 'Sender' information remains visible above it, and the 'Carrier Type/Account' section and the 'Continue' button are visible below it.


5. Tap **Continue**.

6. Enter the recipient address manually or tap **Address book** to select one from the address book.

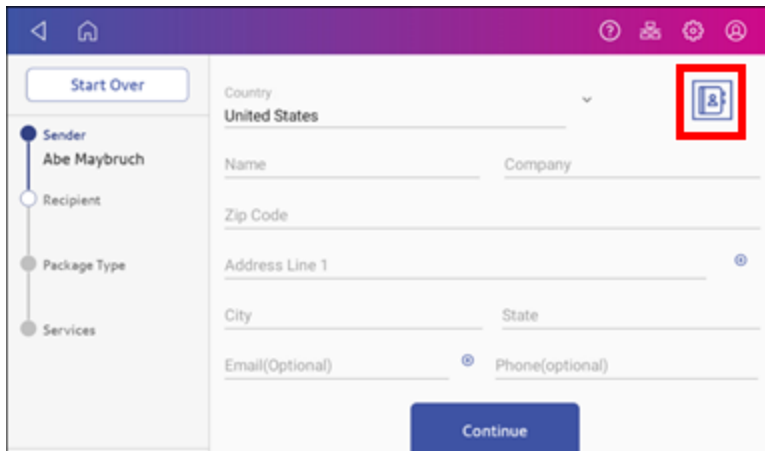


The screenshot shows a mobile application interface for creating a shipping label. On the left, a vertical progress bar indicates the steps: Sender (Abe Maybruch), Recipient (current step), Package Type, and Services. The main form area has a purple header with navigation icons. Below the header, there's a 'Start Over' button. The form fields include: Country (United States), Name, Company, Zip Code, Address Line 1, City, State, Email(Optional), and Phone(optional). A blue 'Continue' button is at the bottom right. A red box highlights the 'Address book' icon (a blue square with a white person icon) in the top right corner of the form area.

7. Tap **Continue**.

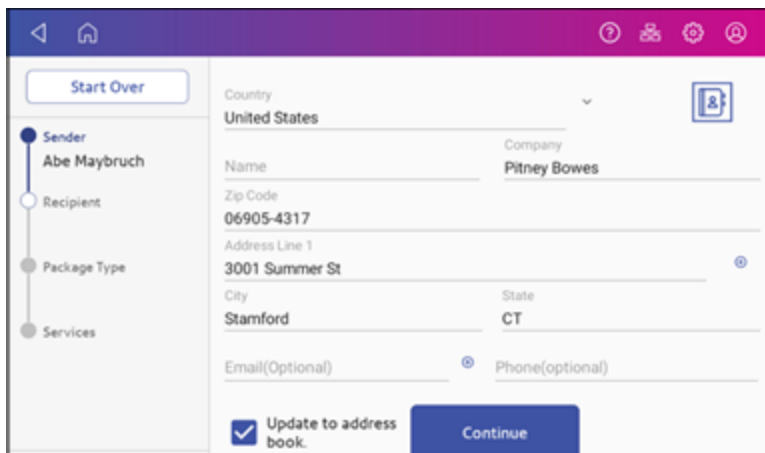


The screenshot shows the same mobile application interface as the previous one, but now the address fields are populated. The 'Address book' icon is still highlighted with a red box. The filled-in fields are: Country (United States), Company (Pitney Bowes), Zip Code (06905-4317), Address Line 1 (3001 Summer St), City (Stamford), and State (CT). The 'Email(Optional)' and 'Phone(optional)' fields are empty. A checkbox labeled 'Update to address book.' is checked. The blue 'Continue' button is still at the bottom right.

8. Tap a package type.

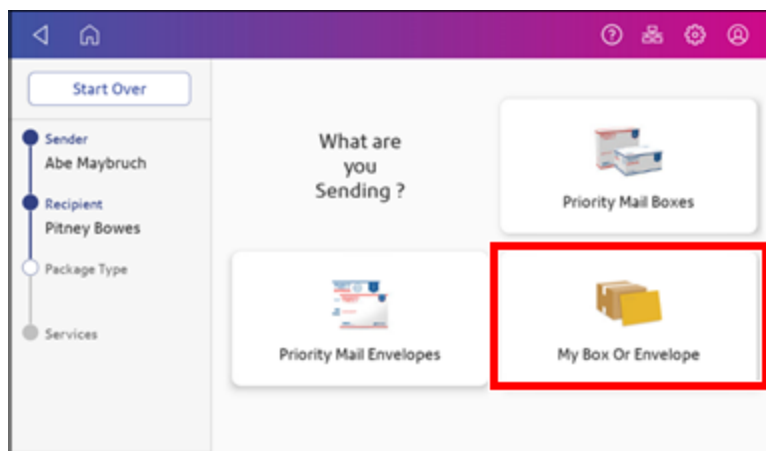


9. Enter the dimensions and weight of the package:
 - Tap each dimension and enter a value. Tap the green check mark when done.

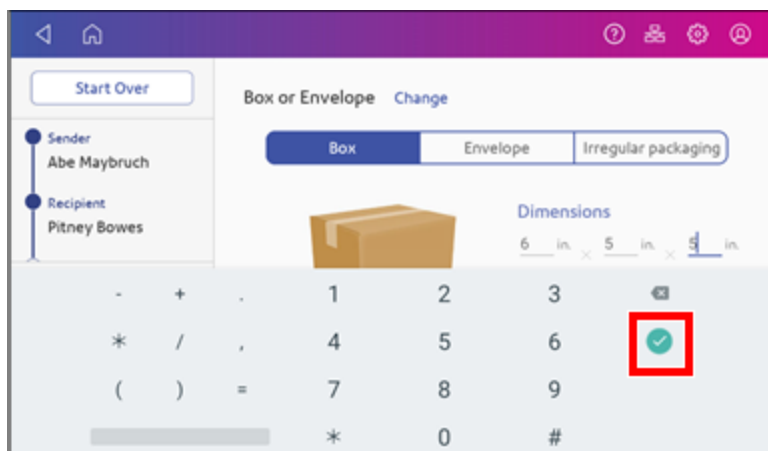


- If you have an attached scale, place the package on the scale and tap **Weight**. Tap **Scale** and the weight appears. Tap **Apply**.
- If you do not have a scale, tap **Weight** and enter the weight, then tap **Apply**.


10. Tap **Continue**.

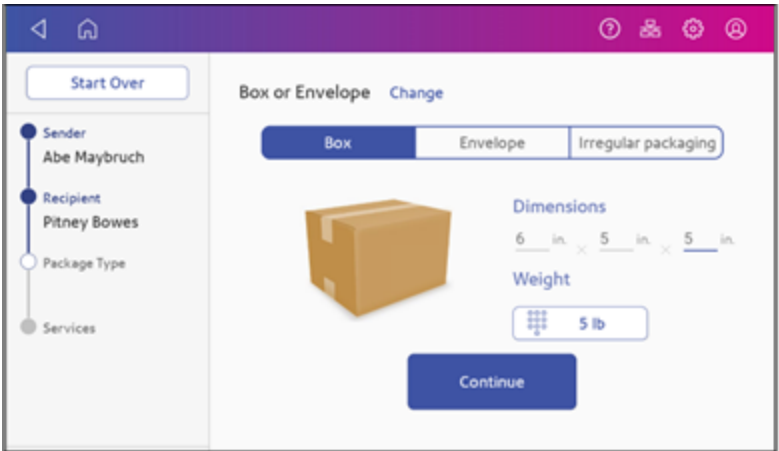

The system displays a list of the available carriers along with their estimated delivery dates and the total cost to send the package. Scroll down the screen to view all the carriers and their rates.

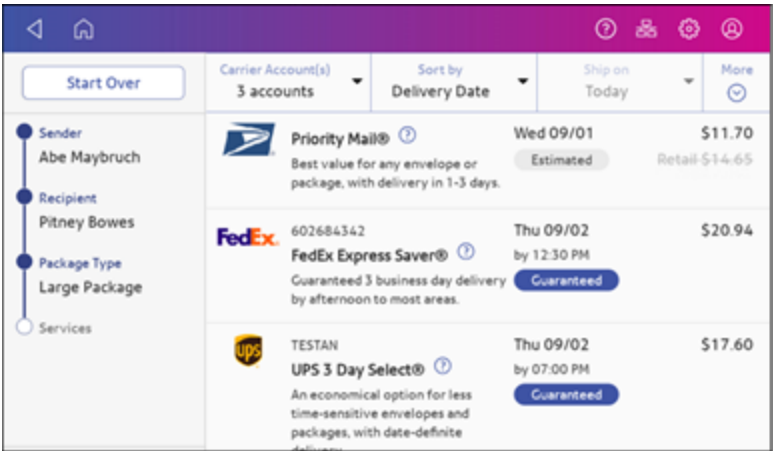

11. Tap the carrier you want to use. This example uses Priority Mail.

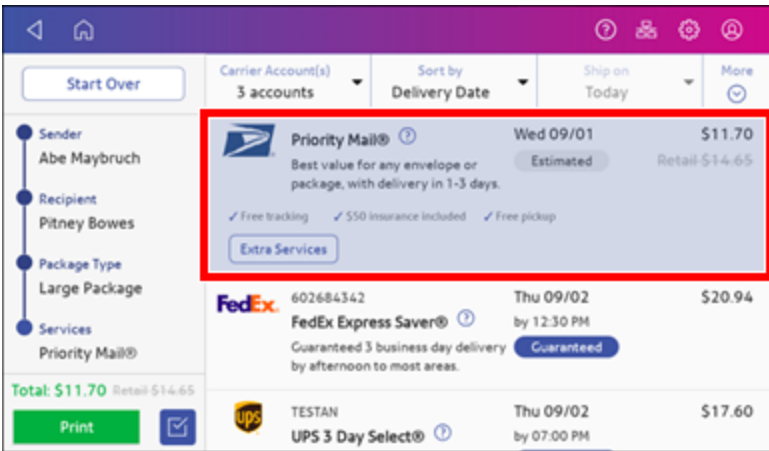

- To add additional services, tap **Extra Services**. If you are not adding any extra services, go to step 14.

The screenshot shows a shipping label creation interface. On the left, a sidebar lists the steps: Sender (Abe Maybruch), Recipient (Pitney Bowes), Package Type (Large Package), and Services (Priority Mail®). The main area displays three shipping options:

- Priority Mail®**: Wed 09/01, \$11.70 (Estimated). Retail \$14.65. Features include Free tracking, \$500 insurance included, and Free pickup. The **Extra Services** button is highlighted with a red box.
- FedEx Express Saver®**: Thu 09/02 by 12:30 PM, \$20.94. Guaranteed 3 business day delivery by afternoon to most areas.
- UPS 3 Day Select®**: Thu 09/02 by 07:00 PM, \$17.60.

At the bottom, the total cost is \$11.70 (Retail \$14.65). A green **Print** button and a blue envelope icon are visible.

- Select the desired service or services.


The screenshot shows the 'Extra Services' selection screen. It lists several services with checkboxes and their respective costs:

- ☐ **Insurance** (Provides coverage against loss or damage up to \$500.00)
- ☒ **Signature Confirmation™** (\$2.90) (Get proof of delivery with a required signature of the recipient)
- ☐ **Registered Mail™** (\$12.90) (Get maximum security for your valuable items)
- ☐ **Registered Restricted Delivery** (\$18.30) (Specify the person who can sign for and receive your item)
- ☐ **Registered Insured Restricted Delivery**


On the right, the total cost for the selected services is shown as **Priority Mail® Total: \$14.60**. A blue **Apply** button is at the bottom right.

- Tap **Apply**. The system displays the total cost including the additional service.

15. Tap **Print** to print the label.

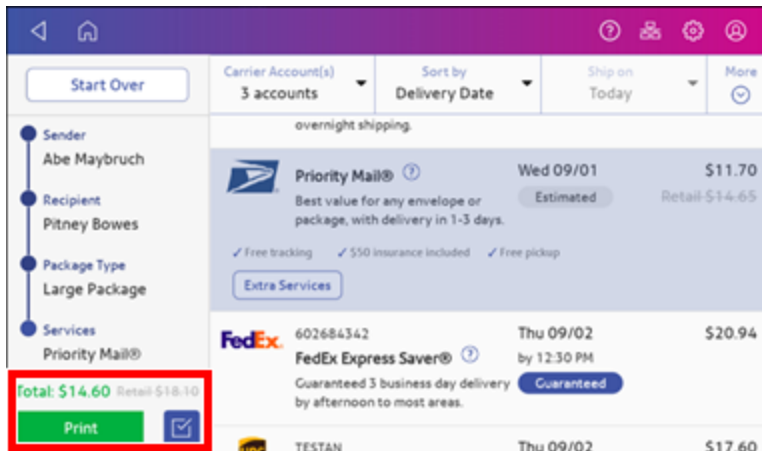

16. Tap **Format** and select the label size.

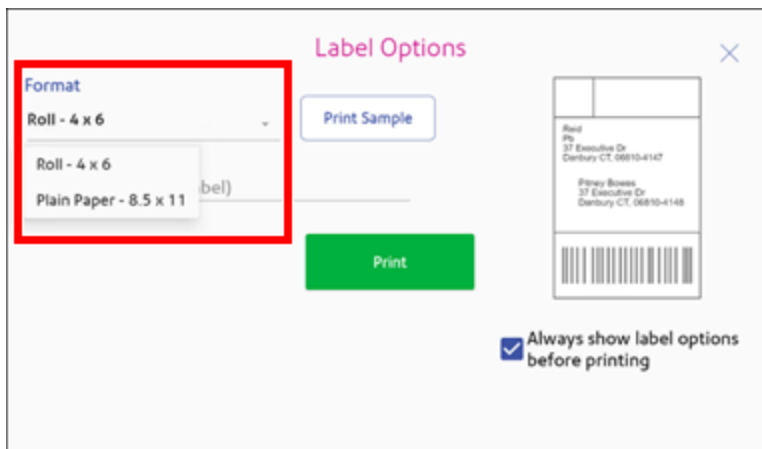

17. (Optional) Tap **Print Sample** to print a sample label.
18. Tap **Print** again and the label prints.
 - You may need to enter the Sender and Recipient's phone number, as it is required for some services.

Creating a new sender address for shipping labels

If you need to ship from more than one address, you can add additional sender addresses to the Address Book.

1. Open the Address Book screen:
 - Tap **Address Book** at the bottom of the Home screen, or
 - Tap **SendPro Apps** on the Home screen, then tap **Address Book**.
2. Tap **Recipients** and select **Senders**.
3. Tap **+**.
4. Enter the sender information.
5. When complete, tap **Save**.

Editing the sender address for shipping labels

If you need to change a sender address, you can edit it in the address book.

1. Tap **SendPro Apps** on the Home screen, then tap **Address Book**.
2. Tap **Recipients** and select **Senders**.
3. Select the sender you wish to edit.
4. Tap **Edit**.
5. Make your changes and tap **Save**. The address book appears.

Printing an international shipping label

Printing an international shipping label is similar to printing a domestic shipping label. The main difference is adding the information required for customs purposes. You must declare package contents for U.S. customs when shipping internationally and to military mail.

To print a shipping label, follow the steps in each section below.

1. *Before you begin*
2. *Select the carrier*
3. *Add the sender and recipient addresses*
4. *Select the package type and enter the dimensions*
5. *Enter the type of items in the shipment*
6. *Select Exemption type*
7. *Add Customs information*
8. *Select the shipping services required*
9. *Print the shipping label*


1 Before you begin

In order to print an international shipping label with customs form from your device, you need to connect it to an 8.5 x 11 1E50 or 1E60 laser printer.

If you do not have a 1E50 or 1E60 laser printer, you print an international label from your PitneyShip account using any 8.5 x 11 printer.


2 Select the carrier

1. Tap **Create Shipping Labels** on the Home screen.
2. Tap the carrier you wish to use.

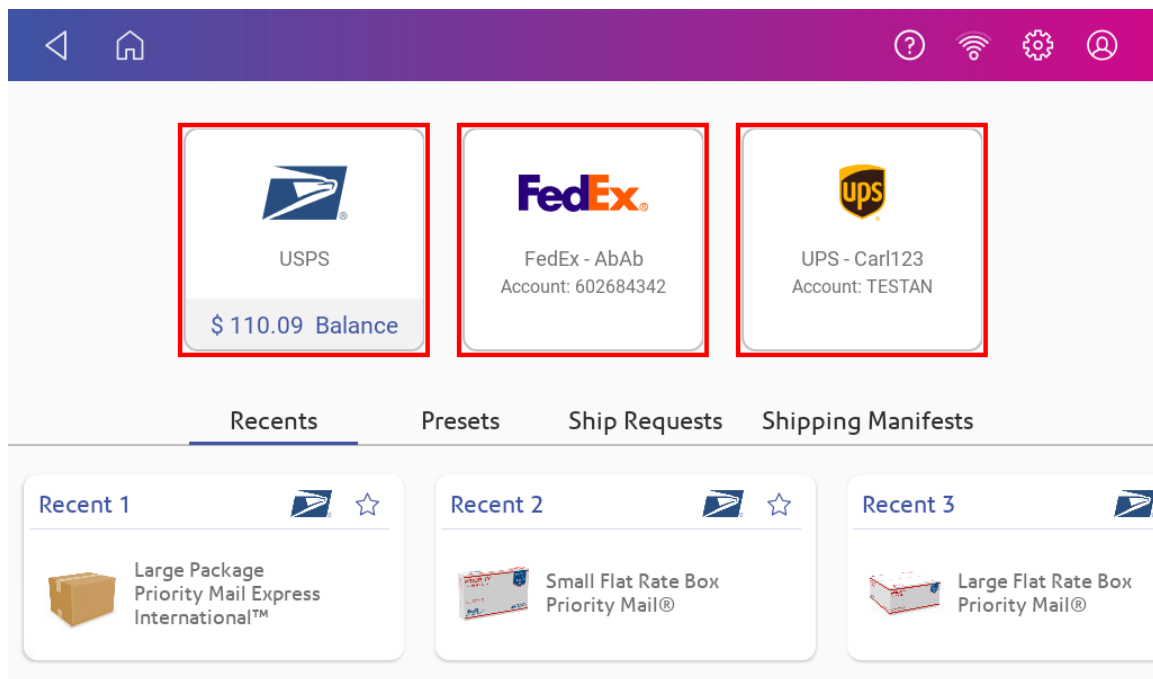

3 Add the sender and recipient addresses


1. Verify that the sender address is correct. If not, tap on the **Sender** field and select a new address.

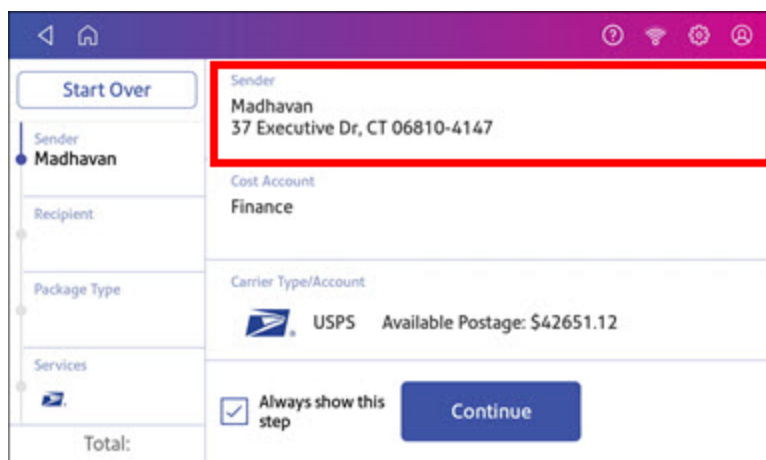

The screenshot shows the 'Start Over' screen of a shipping label creation app. On the left is a vertical menu with options: Sender, Recipient, Package Type, and Services. The 'Sender' option is selected. The main area displays the following information:

- Sender:** Madhavan, 37 Executive Dr, CT 06810-4147 (This field is highlighted with a red rectangular box).
- Cost Account:** Finance
- Carrier Type/Account:** USPS, Available Postage: \$42651.12
- Services:** A checkbox labeled 'Always show this step' is checked.
- Buttons:** A blue 'Continue' button is at the bottom right.

2. Select an account if cost accounts are enabled. Verify the selected cost account. Tap **Cost Account** and select an account to change or add the account.

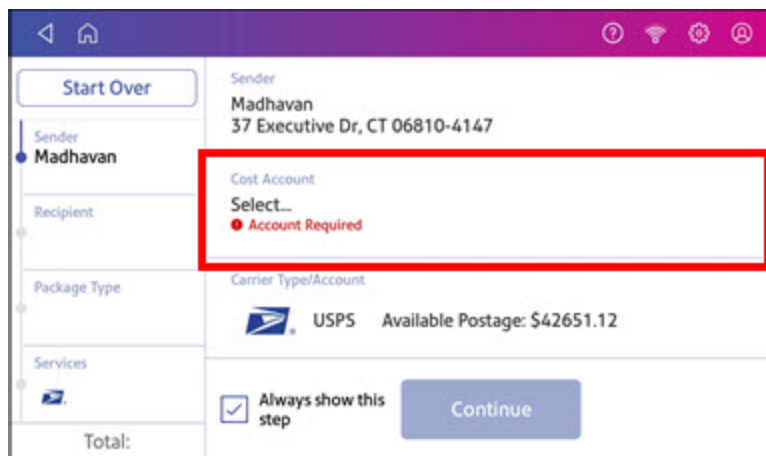

This screenshot shows the same 'Start Over' screen as the previous one, but with the 'Cost Account' field highlighted by a red rectangular box. The 'Cost Account' field now displays 'Select...' and a red error message 'Account Required' below it. All other elements, including the Sender address, USPS carrier information, and the 'Continue' button, remain the same.

3. Tap **Continue**.

4. Enter the recipient address manually or tap **Address book** to select one from the address book.

The screenshot shows a mobile app interface for creating a shipping label. On the left is a vertical sidebar with a 'Start Over' button at the top and a list of steps: Sender (Madhavan), Recipient, Package Type, Services, and Total. The main area is titled 'United States' and contains input fields for Name, Company, ZIP, Address Line 1, City, State, Email (optional), and Phone (optional). A 'Continue' button is at the bottom right. A red box highlights the 'Address book' icon in the top right corner of the main area.

5. Tap **Continue**.

4 Select the package type and enter the dimensions

1. Select the package type.

The screenshot shows the 'What are you sending?' screen in the app. The sidebar on the left is updated with 'Chris Stefan' under the Recipient step. The main area displays three selectable options, each with an icon and a red border: 'Priority Mail Boxes' (top right), 'Priority Mail Envelopes' (bottom left), and 'Box or Envelope' (bottom right).

2. Enter the dimensions and weight of the package:
 - Tap each dimension and enter a value. Tap the green check mark when done.
 - If you have an attached scale, place the package on the scale and tap **Weight**. Tap **Scale** and the weight appears. Tap **Apply**.
 - If you do not have a scale, tap **Weight** and enter the weight, then tap **Apply**.

The screenshot shows a mobile app interface for creating a shipping label. On the left is a vertical sidebar with a progress indicator and labels: 'Sender: Madhavan', 'Recipient: Chris Stefan', 'Package Type: Large Package', and 'Services'. The main area has a 'Start Over' button at the top left. Below it, 'Box or Envelope' is selected with a 'Change' link. Three options are shown: 'Box' (selected), 'Envelope', and 'Irregular'. To the right, 'Dimensions' are entered as 6 in. x 5 in. x 5 in. Below that, 'Weight' is entered as 5 lb 0 oz. A 3D box icon is shown next to the weight field. At the bottom right is a 'Continue' button.

3. Tap **Continue**.

5 Enter the type of items in the shipment

1. Enter the type of items included in your shipment, in this example Documents.

The screenshot shows the next step in the app. The sidebar now includes 'Customs: Documents, 2 items'. The main area has a 'Start Over' button. A message states: 'International shipments require additional details for customs. What kind of items are in your shipment?'. Below this, 'Documents' is selected in a dropdown menu. Further down, it asks 'If shipment cannot be delivered?' with two radio button options: 'Abandon it' (selected) and 'Return to Sender'. A 'Continue' button is at the bottom right.

2. Select either **Abandon it** or **Return to Sender** if the item cannot be delivered.
3. Tap **Continue**.

4. Tap **Add an Item**.

The screenshot shows a mobile application interface for creating a shipping label. On the left, there is a vertical list of steps: Sender (Abe Maybruch), Recipient (Hotel Regina Louvre), Package Type (Large Package), Customs, and Services. The 'Package Type' step is currently selected. At the top right, there is a blue button labeled '+ Add an Item'. Below this, there is a table with columns: Description, Made in, Quantity, Total Weight, and Total Value. The table is currently empty, with a message in the center stating 'No items added here. Add an item to continue'. At the bottom right, there is a blue button labeled 'Continue'.

5. Enter a description of each item, including the quantity, weight, value and where the item was made.

The screenshot shows a mobile application interface for adding an item. The title is 'Add Item' in pink. There are four main input fields: 'Item Description' with the value 'Documents', 'Quantity' with the value '1', 'Weight of each' with a dropdown menu showing '4 lb', and 'Where was this item made' with a dropdown menu showing 'United States'. There is also an optional field for 'HS Tariff # (Optional)'. At the bottom, there are two blue buttons: 'Save' and 'Save & Add'.

6. If appropriate, enter optional HS Tariff information.

7. To add additional items, tap **Save and Add**.

8. Tap **Continue**.

6 Select Exemption type

1. Tap **Select Exemption Type** and select the appropriate value.

AES Exemption

Select Exemption Type

☐ By checking this box I certify that all shipment information provided is correct and I agree to adhere to the [USPS Privacy Act Statement](#) and all other country-specific requirements.

Continue

For further information, refer to the [USPS.COM Postal Explorer](#).

2. Tap on the checkbox to agree to the USPS Privacy Act Statement.

AES Exemption

NOEEI 30.37(a) - Value of each class of goods is \$2,500 or less

☒ By checking this box I certify that all shipment information provided is correct and I agree to adhere to the [USPS Privacy Act Statement](#) and all other country-specific requirements.

Continue

3. Tap **Continue**.

7


Add Customs information

1. (Optional) Add any additional customs information you have in the fields provided.
2. Tap **Continue** when done.

European Union (EU)

If you are shipping to a country that is part of the EU, you can collect, declare, and pay the import VAT tax to the authorities instead of making the recipient pay the import VAT tax when the items are imported into the EU.

If you have registered with the Import One-Stop Shop (IOSS) portal you can include your IOSS number with your additional customs information. Your device must have SendPro application software version 2.0.061R or later to use this feature.

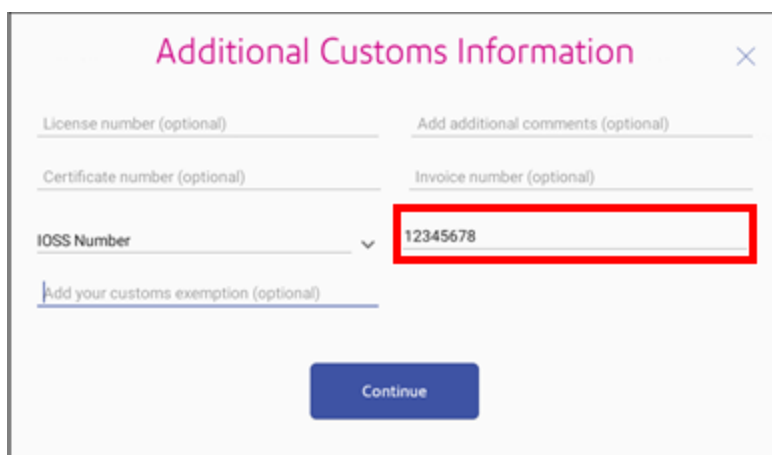

Additional Customs Information ✕

License number (optional) Add additional comments (optional)

Certificate number (optional) Invoice number (optional)

IOSS Number ▼ 12345678

Add your customs exemption (optional)

Continue

For more information about the IOSS, visit the [IOSS page](#).

8 Select the shipping services required

1. Tap the service you wish to use.

Start Over

Sender

ABC Company

Recipient

Mr Smith

Package Type

Large Package

Customs

Gifts

1 item

Services

Carrier/Account

USPS

Sort by

Delivery Date

Ship on

Today

More

⌵

Priority Mail Express International™ ⓘ

Sun 04/10

\$66.93

Fastest USPS service with delivery in 3-5 business days.

Estimated

Retail \$68.95

Priority Mail International® ⓘ

Fri 04/15

\$49.59

Best value for any envelope or package, with delivery in 6-10 business days.

Estimated

Retail \$52.20

First-Class Package International Service™ ⓘ

Tue 04/19

\$15.34

Most economical way to send lightweight packages, with delivery in 1-3 weeks.

Estimated

Pitney Bowes Operator Guide July 2024

90

2. To add additional services, tap **Extra Services**.

Start Over

Sender

ABC Company

Recipient

Mr Smith

Package Type

Large Package

Customs

Gifts

1 item

Total: \$66.93 Retail-\$68.95

Print

Carrier/Account

USPS

Sort by

Delivery Date

Ship on

Today

More

Priority Mail Express International™

Fastest USPS service with delivery in 3-5 business days.

Extra Services

Sun 04/10

Estimated

\$66.93

Retail \$68.95

Priority Mail International®

Best value for any envelope or package, with delivery in 6-10 business days.

Fri 04/15

Estimated

\$49.59

Retail \$52.20

First-Class Package International Service™

Tue 04/19

\$15.34

3. Enter the value of the item. Tap **Apply** when complete.

Enter Value

1

2

3

4

5

6

7

8

9

Del

0

\$ 1

Apply

4. Select the desired services and tap **Apply**.

← Extra Services

☒ Insurance ⓘ Included

Provides coverage against loss or damage up to \$1.00.

Value \$1.00

Priority Mail International®

Total: \$49.59

Apply

9 Print the shipping label

1. To print the label, tap **Print**.
2. (Optional) On the Label Options screen, tap **Print Sample** to print a sample label.
3. Tap **Print** again and the label prints. You may need to enter the Sender and Recipient's phone number, as it is required for some services.
4. The carrier screen reappears.

Printing a USPS return shipping label

If you need to provide a USPS return label for someone to ship something back to you, you can print a return label.

1. Tap **SendPro Apps** on the Home screen, then tap **Shipping History**. All of the shipping labels appear by date. The most recent date appears first in the list.

2. Find your label in the list or by using the search box.
3. Tap on the shipment.
4. Tap **Create Return Label**.
5. Tap **Continue** through the screens to confirm the Sender and Recipient name and address.
6. If necessary, confirm the size and weight of the item.
7. Continue with Printing a shipping label.

Printing a USPS scan form

The purpose of USPS Shipment Confirmation Acceptance Notice (SCAN) Form 5630 is to save time. Without SCAN Form 5630, the USPS needs to scan each individual shipping label. This can be time consuming if there are a large number of shipping labels. Instead of scanning each individual shipping label, USPS scans the SCAN Form 5630 once and uploads every shipping label from that day to the USPS systems. The SCAN form must be enabled prior to printing any shipping labels that need to be included on a SCAN form.

In order to print USPS SCAN forms, you must enable the USPS SCAN Form Printing on your device.

Enabling USPS SCAN Form Printing on your device

1. Tap **Settings**.




2. Scroll down to Shipping Settings, then tap **Label Options**.
3. Scroll down to the SCAN Form and Manifest Printing section and tap on the **Enable SCAN form printing** box.
 - If you have an 8 1/2 x 11 1E50 Laser Report Printer that is either attached to one of the USB ports on the back of your device or connected through Wi-Fi, you can print the report from your device. Refer to [Printing from your device](#).

Printing from your device

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. From the Carrier Home screen, tap **Shipping Manifests**.
3. Tap **USPS SCAN Form**. The number of shipments included in the manifest appear.

4. A preview of the manifest appears.

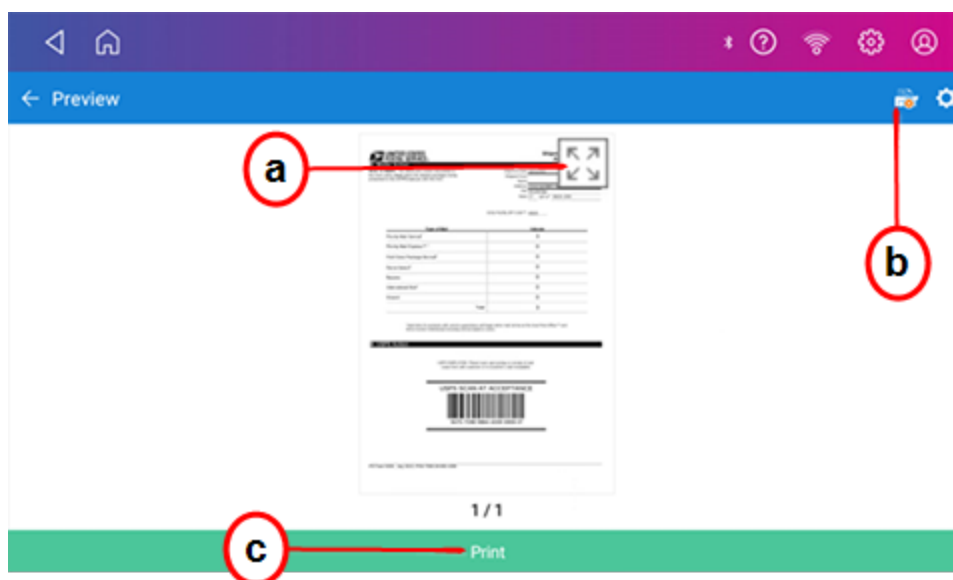

- a. To expand the view of the manifest, tap the expand icon.
- b. To change or select the printer, tap the device icon.
- c. To print the manifest, tap **Print** on the green bar at the bottom of the screen.

Reprinting a USPS, UPS or FedEx shipping label

If a label does not print correctly, you can print it again.

1. Tap **SendPro Apps** on the Home screen, then tap **Shipping History**. All of the shipping labels appear by date. The most recent date appears first in the list.
2. Locate your label in the list. To sort by a different column, tap that column heading. To reverse the sort order, tap the same column heading again.
3. Tap on the shipment.
4. Tap **Reprint Label**.

Canceling a UPS or FedEx shipping label

You can cancel a UPS or FedEx shipping label to stop the postage appearing on your UPS or FedEx invoice.

1. Open the Shipping History screen:
 - Tap **SendPro Apps** on the Home screen, then tap **Shipping History**.
2. All of the shipping labels appear by date. The most recent date appears first in the list.
3. Locate your label in the list. To sort by a different column, tap that column heading. To reverse the sort order, tap the same column heading again.
4. Tap the shipment to open the details screen.
5. Tap **Void Label**. Select the box to confirm that you will not be using the label, then tap **Continue**.

Getting a USPS refund for a shipping label

If your international package was returned by USPS due to COVID-19 restriction, you can request a refund through PitneyShip within 45-days of the label creation date.

The refund process can take up to 20 days because USPS wishes see if it can detect your shipment in its mailstream before crediting your account.

Important: When you cancel a UPS or FedEx label, the credit will appear on your UPS or FedEx invoice.

1. Tap **SendPro Apps** on the Home screen, then tap **Shipping History**. All of the shipping labels appear by date. The most recent date appears first in the list.
2. Locate your label in the list. To sort by a different column, tap that column heading. To reverse the sort order, tap the same column heading again.
3. Tap on the shipment.
4. Tap **Request Refund**.
5. Select the box to agree to the conditions, then tap **Continue**.

Important: Labels for First-Class Large Envelope do not bear a tracking barcode. You cannot request a refund for them via the SendPro C Auto. Sign in to PitneyShip to request a refund for these transactions.

If your international package was returned by USPS due to COVID-19 restrictions, you cannot request a refund through PitneyShip. You must file a claim directly through USPS. Go to the [USPS International Claims](#) page and click on Create an Inquiry to file a claim. If approved, USPS will send you a check for the postage cost.

5 - Managing Shipping Labels

In this section

Using the Address Book.....	97
Enabling Cost Accounts for shipping labels.....	97
Changing the default refill amounts for shipping labels.....	97
Turning on address autofill for shipping labels.....	98
Adding new addresses to the shipping labels Address Book.....	98
Refilling postage for shipping labels.....	99
Setting an alert when shipping label postage refill is pending.....	100
Setting up your FedEx account.....	101
Setting up your UPS account.....	103
Setting up default printing options.....	103
Managing email notifications for shipping labels.....	104
Setting the default address for USPS return labels.....	105
Determining how you spend your shipping labels postage.....	106
Removing funds.....	106

Using the Address Book

The Address Book app allows you to add, edit, and delete addresses for everyone you ship to. Once you add an address to the Address Book app, you can select it when you print shipping labels.

To open the Address Book:

- Tap **SendPro Apps** on the Home screen, then tap **Address Book**.

Enabling Cost Accounts for shipping labels

Cost Accounts help you keep track of where you're spending your money on postage by allowing you to assign shipping label costs. You can also assign a Cost Account for postage refills.

The Cost Accounts feature is enabled via the PitneyShip shipping solution. Please access the PitneyShip web application on your computer where you can also view Cost Accounts information.

Changing the default refill amounts for shipping labels

Change the default refill amount for shipping labels to store an amount you want to refill your device with.

1. Tap **Settings**.



2. Scroll to Shipping Settings.
3. Tap **Shipping Refills**.
4. Tap **Auto-refill Postage**.
5. Tap the box under **Default refill amount for trackable labels**.
6. Enter the amount.
7. Tap **Apply**.

Turning on address autofill for shipping labels

Autofill automatically fills in the address fields as you start to enter an address. This makes it easier to enter addresses when creating shipping labels.

1. Tap **Settings**.



2. Scroll down to **Shipping Settings**.
3. Tap **SendPro Experimental Features**.
4. Tap on the check box for **Use Geosearch**.

Adding new addresses to the shipping labels Address Book

Use the Address Book app on your device to add single addresses. Use PitneyShip to import multiple addresses.

Adding a single address

1. Tap **SendPro Apps** on the Home screen, then tap **Address Book**.
2. Tap the **+** icon to add a new address and enter the contact information.
3. Tap **Save** when done.

Important: The maximum number of addresses that the Address Book can store is 1000.

Adding multiple addresses

To import multiple addresses to the Address Book on your device, sign in to PitneyShip in your web browser using your SendPro C Auto user ID.

Refilling postage for shipping labels

Your device uses two separate postage accounts. One is for shipping labels and one is for Envelope Printing or Print on Envelopes. You cannot use the shipping label funds for Envelope Printing or Print on Envelopes and vice versa.

Before you begin:

Check that your device is connecting to the internet.

- If you have a wired network connection, you will see the following connection icon in the toolbar:



- If you have a wireless connection, you will see the following connection icon in the toolbar:




To refill your shipping labels postage account:

1. Tap **Settings**.



2. Scroll down to **Shipping Refills**.

3. Tap **Shipping Refills**.

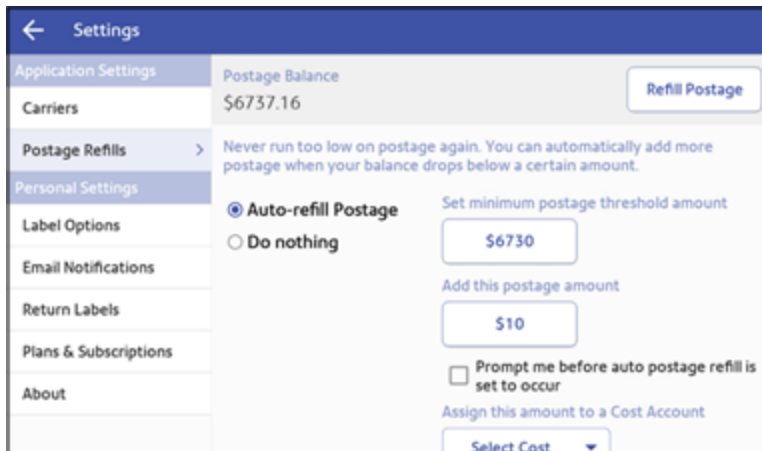

4. If you have enabled cost accounts for shipping labels, you must select a cost account. Tap **Select Cost** and choose an account from the drop-down list.
5. Tap **Refill Postage** on the upper right corner of the screen.
6. Use the numeric keypad to enter the amount you wish to refill.
7. Tap **Refill Postage**. When complete, the updated shipping label postage amount appears.
8. Tap **Home** to return to the Home screen.

Setting an alert when shipping label postage refill is pending

Arrange to have your device alert you when a shipping label postage refill is pending.

In order to set up the alert you must also define a minimum postage threshold amount.

To refill your shipping labels postage account:

1. Tap **Settings**.



2. Scroll down to **Shipping Refills**.

3. Tap **Shipping Refills**. The shipping label postage refill screen appears.

The screenshot shows the 'Settings' screen with a left sidebar containing 'Application Settings', 'Carriers', 'Postage Refills', 'Personal Settings', 'Label Options', 'Email Notifications', 'Return Labels', 'Plans & Subscriptions', and 'About'. The 'Postage Refills' section is active, displaying a message: 'Never run too low on postage again. You can automatically add more postage when your balance drops below a certain amount.' Below this, there are two radio buttons: 'Auto-refill Postage' (selected) and 'Do nothing'. To the right of the 'Auto-refill Postage' option, there are two input fields: 'Set minimum postage threshold amount' with a value of '\$6730' and 'Add this postage amount' with a value of '\$10'. Below these fields, there is a checked checkbox for 'Prompt me before auto postage refill is set to occur'. Underneath the checkbox is a dropdown menu labeled 'Assign this amount to a Cost Account' with 'Select Cost' chosen. At the bottom of the screen is a blue 'Save' button.

4. Scroll down on the screen until the Save button is visible.
5. Check that the minimum postage threshold amount is correct. If not, tap on the amount and enter the correct value.
6. If you have enabled cost accounts for Create Shipping Labels, you must select a cost account. Tap **Select Cost** and choose an account from the drop-down list.
7. Tap the **Prompt me before auto postage refill is set to occur** box.
8. Tap **Save**.
9. Tap the back arrow to return to the Home screen.

Setting up your FedEx account

Use PitneyShip to set up your FedEx account. You must do this before you use FedEx for shipping labels.

You cannot set up a FedEx account on your SendPro C Auto. In your web browser, sign in to PitneyShip using your SendPro C user ID and password to set up your FedEx account.

Once you have set up your FedEx account using PitneyShip, you can view and modify your account information on your device.

You can also take advantage of FedEx SmartPost®. This is a delivery service provided by FedEx for low-weight packages that allows you to select a USPS facility for the final delivery by a postal carrier.

Important: Be sure to contact FedEx to see if this service is available for your FedEx account.

1. Tap **Settings**.



2. Scroll down to **Shipping Settings**.
3. Tap **Carrier Settings**.
4. Tap **Manage** next to FedEx on the right side of the screen. The Manage FedEx Account screen appears.

A screenshot of the 'Manage FedEx Account' screen. The title is 'Manage FedEx Account' in pink. Below it, the 'Account Number : 602684342' is displayed. There is a text input field for 'Account Nickname' containing 'Fedex US' and a 'Delete Account' button. Below this, the 'FedEx Technical Support: 1-800-463-3339' is shown. Two checkboxes are present: 'Make this my default FedEx account' (unchecked) and 'My account includes SmartPost' (unchecked). At the bottom, there is a 'Cancel' button and an 'Apply' button. A FedEx logo and a disclaimer are at the very bottom.

5. Tap the **Make this my default FedEx account** box to use this as your default FedEx account.
6. Tap the **My account includes SmartPost** box if your account includes SmartPost and you wish to use this service.

A screenshot of the 'Manage FedEx Account' screen, showing updates. The 'Make this my default FedEx account' checkbox is now checked. The 'My account includes SmartPost' checkbox is also checked. A new 'Hub Id' section has appeared with a dropdown menu labeled 'Select Hub Id'. The 'Delete Account' button and the 'Apply' button at the bottom remain.

7. Tap **Select Hub Id** and select the appropriate carrier location from the drop-down list.

8. Tap **Apply** to confirm and save your selection.

Setting up your UPS account

Use PitneyShip to set up your UPS account. You must do this before you use UPS for shipping labels.

You cannot set up a UPS account on your SendPro C Auto. In your web browser, sign in to PitneyShip with your SendPro C Auto user ID and password.

Once you have set up your UPS account using PitneyShip, you can view your account information on your device:

1. Tap **Settings**.



2. Scroll down to **Shipping Settings**.
3. Tap **Carrier Settings**.
4. Tap **Manage** next to UPS.

Setting up default printing options

Define the print options for your shipping labels. This includes the label size and whether to print the cost on the label. You can also choose to print a receipt or enable scan form and manifest printing.

1. Tap **Settings**.



2. Scroll down to **Shipping Settings**.
3. Tap **Label Options**.
4. To enable print preview and label options before printing, tap the check box for **Always show label options before printing**.
5. To print a receipt with the label, tap the check box for **Print receipt with label**.
 - Only available with 8.5 x 11 format

6. To select the print format, tap **Format** and select one of the following:
 - Plain Paper - 8.5 x 11 (report printer only)
 - Roll - 4 x 6
7. To enable USPS scan form and manifest printing, tap the check box for **Enable scan form printing**. Enter the ZIP code for the location from where you are shipping on the line provided.

Managing email notifications for shipping labels

You can use email notifications to track shipments and to advise of delivery. You can also receive a notification when a shipping label refund has been issued.

There are three types of notifications:


- **Tracking Number Email:** Emails a tracking number for each new shipping label automatically.
- **Shipment Delivery Email:** Emails a delivery confirmation for each new shipping label automatically.
- **Refund notifications:** Emails a confirmation each time your postage balance receives a credit through a label refund.

1. Tap **Settings**.



2. Scroll down to **Shipping Settings**.
3. Tap **Automated Emails**.
4. Tap the required check boxes in the Tracking Number Email and Shipment Delivery Email sections to enable tracking number and delivery confirmation emails to senders or recipients.

5. To receive an email when your postage balance receives a credit through a label refund:
 - Scroll down and enter the email address in the Email Confirmation for Postage Refund section.

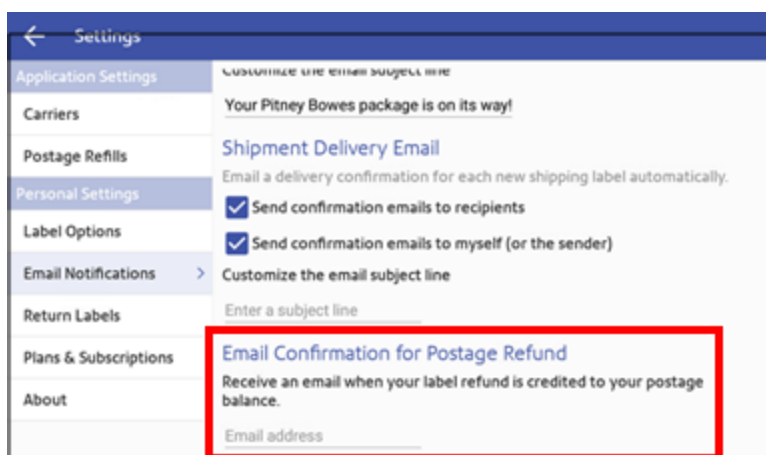

6. (Optional) To customize the subject for each email type, enter the subject in the Customize the email subject line field.

Setting the default address for USPS return labels

You can set the recipient's address as a default address for all of your USPS return labels.

1. Tap **Settings**.



2. Scroll down to **Shipping Settings**.
3. Tap **Return Labels**.
4. Tap the check box for **I wish to use the same recipient address for all of my return labels**.
5. Enter the address in the fields provided using the keypad on the screen. Tap the green check mark when done.

Determining how you spend your shipping labels postage

View the Shipment report to see how much postage you are spending. The report includes a list of all the shipping labels you have printed along with their carriers and the amounts of postage.

1. Tap **Settings**.



2. Scroll down to **Shipping Settings**.
3. Tap **Shipment Reports**.
4. To list by cost accounts, tap **Menu** next to All Shipments column. Tap **Summary by Cost Account**.

Removing funds

Important: Once you take your device out of service you will no longer be able to print postage on envelopes. The withdraw device button is disabled (greyed out) if the ink cartridge is not present. If the ink cartridge is not present, install it before taking the device out of service.

1. Tap **Settings**.



2. Tap **Withdraw device**.
3. Enter code **6184**.
4. Tap **Withdraw Device**.


Before returning your device please remove the ink cartridge:

1. Tap **Settings**.



2. Tap **Envelope Printer Maintenance**.

3. Tap **Install Ink**.
4. Open the top cover.
5. Open the ink door and remove the ink cartridge.

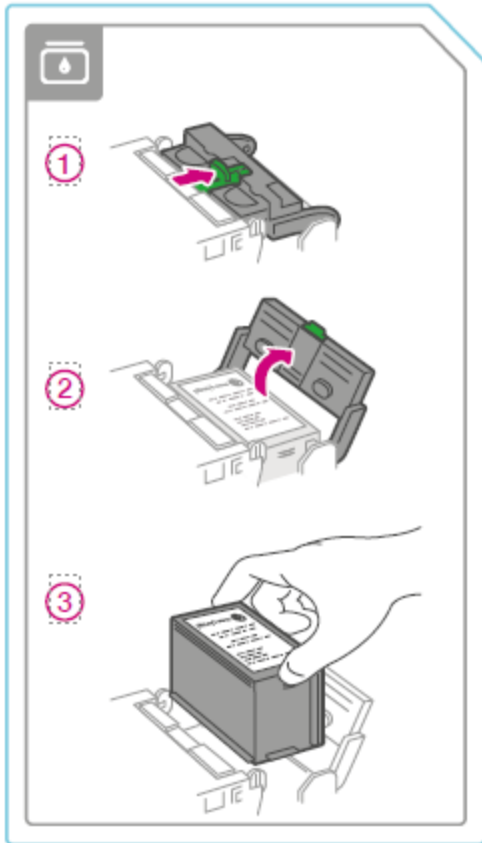

6. Close the ink door and close the top cover.

Follow the instructions in your return kit to properly package and return your device.

If you need to remove funds from your shipping account, please chat with us.

Important: If your device is inoperable or you are unable to withdraw or transfer your funds back to their original funding source, please chat with us.

6 - Printing on envelopes

In this section


Navigating the Envelope Printing or Print on Envelopes app.....	109
Printing postage on tapes.....	110
Checking the available funds for printing postage.....	111
Adding or refilling postage for printing on envelopes..	112
Sending a First-Class Mail envelope.....	113
Sending a large First-Class® envelope.....	114
Sending Certified Mail.....	115
Sending an international letter.....	116
Sending mail using a Certificate of Mailing.....	116
Advancing the date.....	118
Printing postage without a date for pre-printed mailpieces.....	118
Printing additional postage.....	119
Re-dating your mail.....	120
Using USPS special services.....	121
Entering the weight manually when printing postage..	121
Using the scale when printing postage.....	122
Sealing envelopes without printing postage.....	123
Sealing envelopes and printing postage.....	124
Zeroing the scale.....	125
Using Differential Weighing.....	126
Editing the Differential Weighing threshold.....	128
Adding insurance to your mail.....	129
Adding a graphic to your envelope or tape.....	130
Sending mail using Electronic Return Receipt (ERR) ..	130
Getting a USPS refund for damaged or incorrectly printed mail.....	131

Creating a custom text message for your mail.....	132
Adding a custom text message to your envelope or tape.....	134
Editing or deleting a custom text message.....	135
Printing a graphic without printing postage.....	137
Adding an inscription.....	138
Printing only the date and time.....	138
Presort features.....	140
Creating a PresortXtra letter preset.....	140

Navigating the Envelope Printing or Print on Envelopes app

The Envelope Printing or Print on Envelopes app is the starting point for printing postage on an envelope or a tape. It also allows you to change what you print.

To open the Envelope Printing or Print on Envelopes app, tap **Envelope Printing or Print on Envelopes**.

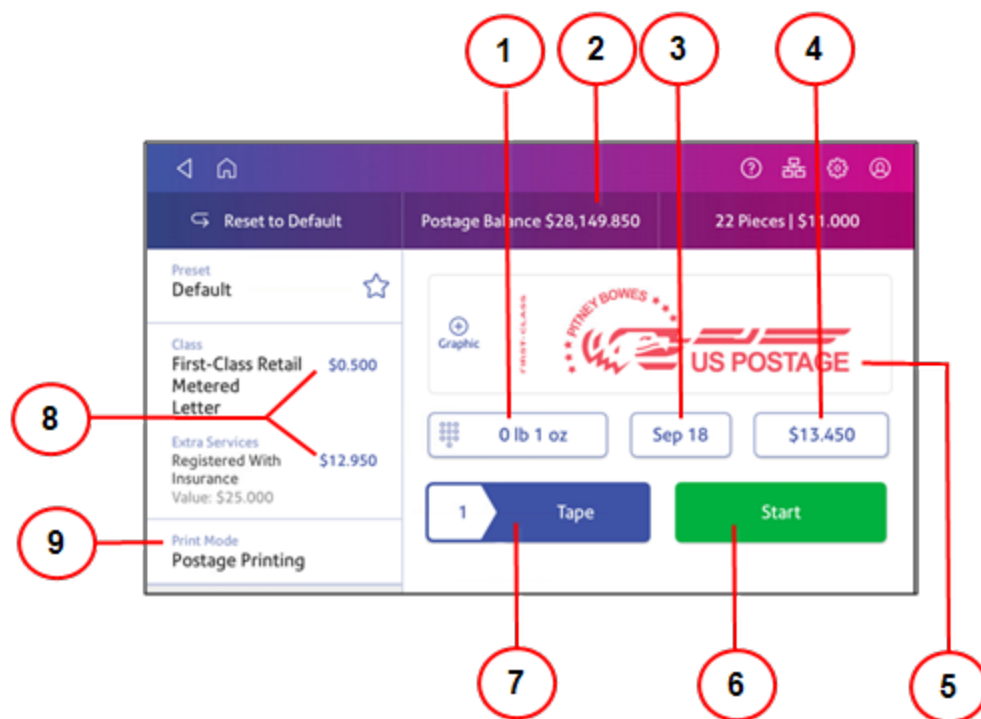

On this screen, you can:

1. Tap the weight to view the weighing options. You can enter the weight manually or use a scale.
2. View the balance of funds you have remaining in your device.
3. Tap the date to view the date options.
4. View the total postage amount.
5. Preview or add graphics.
6. Tap **Start** to begin feeding and printing postage on the envelopes loaded on the feed deck. The **Start** button is only present on SendPro C models equipped with an automatic feeder.
7. Tap **Tape** to begin printing postage on tape. To print more than one tape, tap the number next to **Tape** and enter the number of tapes. **Tape** is only present on SendPro C models equipped with an automatic feeder.
8. Tap **Class** to view the class and any extra services.
9. Tap **Print Mode** to access the Print Mode screen. This provides you with different printing modes such as adding graphics to your envelope, adding more postage, or making corrections to the date. You can also choose to seal envelopes without printing postage.

Printing postage on tapes

If it is not possible to print postage directly onto your envelope, you can print it onto a tape. You can then apply the tape to the envelope.

1. Push the tape lever to the right and hold it there (a). Drop a stack of strip tapes down into the slot (b). Make sure that the printable side faces to the right (toward the touchscreen).




2. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
3. Select the postage mode and settings (account, class and special service, weight).
4. For a single tape, tap **Tape**. The default value is set to 1 tape.
 - For multiple tapes, tap the number on the tape field and use the keypad to enter the number of tapes.

Checking the available funds for printing postage

Check your funds for printing postage on your device at any time.

Viewing the amount available in your device

- 1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
- 2. The **Postage Balance** shows the available funds in your device.

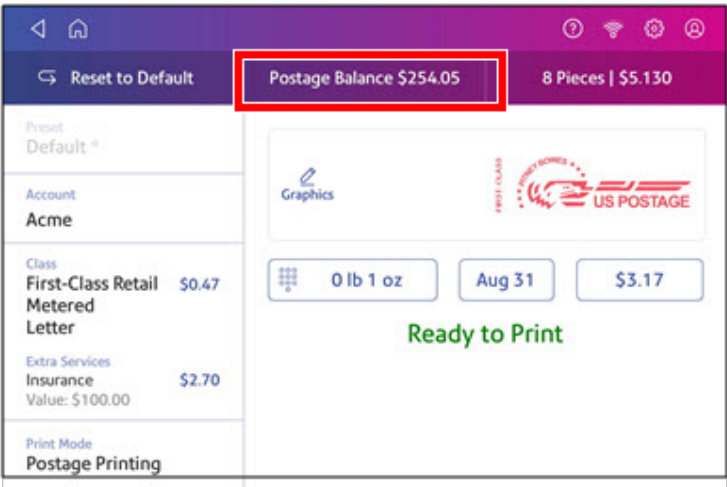

Viewing the amount available in your postage account at Pitney Bowes

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap **Postage Balance**.
3. Tap **Settings**.
4. The balance in your postage account appears.

The screenshot shows the Pitney Bowes postage account settings interface. On the left is a sidebar with options: 'Change or Retain Class', 'Change or Retain Destination', 'Postage Refills' (selected), 'Weight Hold', 'Mailer ID', and 'Default Preset Timer'. The main content area is divided into sections. The 'Default refill amount' is set to \$200.00, and the 'Low postage threshold' is \$5.00. The 'Mail Postage Balance' is \$635.12. A red box highlights the 'Reserve Account (Prepaid) Funds Available' amount of \$30,692,903.970. Below this, the 'Purchase Power® (Bill Me Later) Funds Available' is \$0.00. The last update was on Sep 28 2021 3:25 PM, and there is an 'Update now' button. A 'Refill Postage' button is at the bottom right.

Setting	Value
Default refill amount	\$200.00
Low postage threshold	\$5.00
Mail Postage Balance	\$635.12
Reserve Account (Prepaid) Funds Available	\$30,692,903.970
Purchase Power® (Bill Me Later) Funds Available	\$0.00

Adding or refilling postage for printing on envelopes

Add or refill postage for your Envelope Printing or Print on Envelopes balance as soon as you receive a message that your funds are getting low.

Before you begin

Check that your device is connecting to the internet.

- For wired network connections, the following connection image appears in the toolbar:



- If you have a wireless connection, the following connection image appears in the toolbar:



Add postage for Printing on Envelopes

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap **Postage Balance**.
3. Tap **Refill Postage**.
4. Enter the amount of postage you wish to add.
5. Tap **Refill Mail Postage**.
6. Tap **View Receipt** to view or print a receipt.
7. Tap **Done**.
8. Your updated postage balance appears on the Envelope Printing or Print on Envelopes app.

Sending a First-Class Mail envelope

First-Class Mail is an economical way to send mailpieces through the USPS. You can send standard postcards, letters, and large envelopes and small packages up to 15.99 ounces.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. If you have the accounting feature enabled, tap **Account** and select an account.
3. Tap **Class**.
4. Tap **Start Over** to show a list of all the available classes.
5. Tap **First-Class Retail Metered** for a First-Class Mail envelope.
6. Tap **Letter**.
7. Select any special services you wish to use.

8. Tap **Apply**.
9. Place the envelope on the scale. The weight appears.
10. Place the envelope or envelopes on the feed deck. Depending on the SendPro C model you have, feed the envelopes manually or tap **Start** to feed the envelopes.

Important: Your device will upload transactions if you have previously printed any mail. Once the upload completes, you see the message "Transaction upload status, Upload success" with a check mark. Tap the check mark.


Sending a large First-Class® envelope

Before you select a rate for a large envelope, you need to determine whether the mailpiece you are sending is a letter or large envelope according to the USPS.

If your mailpiece weighs more than 3.5 oz, the device automatically sets the class to Large Envelope regardless of the dimensions. If the mailpiece weighs less than 3.5 oz but has the dimensions of a large envelope, you need to manually select Large Envelope when you choose the class.

Weigh the mailpiece and measure the dimensions

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. If you have the accounting feature enabled, tap **Account** and select an account.
3. Place the mailpiece on the scale. The weight appears. You can also weigh the mailpiece using any other postal scale.

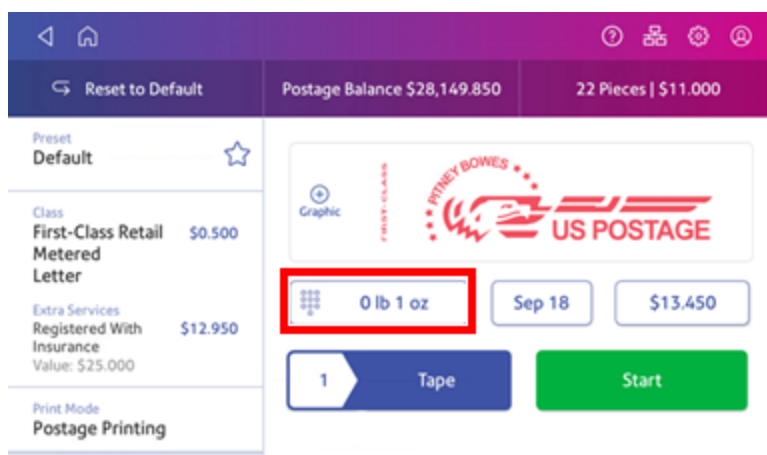

4. Measure and record the dimensions of the mailpiece.
5. Tap **Home** to return to the Home screen.

If the mailpiece is less than 3.5 oz, but has the dimensions of a large envelope:

1. Tap **Home**.
2. Tap **Envelope Printing or Print on Envelopes**.
3. If you have the accounting feature enabled, tap **Account** and select an account.
4. Tap **Class**.
5. Tap **Start Over** to show a list of all the available classes.
6. Tap **First-Class Retail Metered** for a First-Class mail envelope.
7. Tap **Large Envelope**.
8. Select special services, if required.
9. Tap **Apply**.
10. Place the envelope or envelopes on the feed deck. Depending on the SendPro C model you have, feed the envelopes manually or tap **Start** to feed the envelopes.
If the envelope is too thick to go through the feeder, print the postage on a tape and apply the tape to the large envelope or flat.

Sending Certified Mail

Certified Mail is a USPS service that provides you with proof of mailing by sending you a receipt once your mailpiece arrives at its destination.

Not all extra services like Certified Mail are available for all classes and you can only combine certain services.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. If you have the accounting feature enabled, tap **Account** and select an account.
3. Tap **Class**.
4. Tap **Start Over** to show a list of the available classes.
5. Tap a class that you can combine with Certified Mail (for example, First Class or Priority Mail).
6. Tap the mailpiece type (for example, letter or large envelope).
7. Select **Certified** and tap **Apply**.

8. Depending on the type class and type of mailpiece, enter the destination ZIP Code and tap **Apply**.
9. Place the envelope or envelopes on the feed deck. Depending on the SendPro C model you have, feed the envelopes manually or tap **Start** to feed the envelopes.
10. Place the green Certified Mail label (USPS Label 3800) on the mailpiece.

Sending an international letter

Use this process if you need to send mail from the United States to a different country.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. If you have the accounting feature enabled, tap **Account** and select an account.
3. Tap **Class**.
4. Tap **Start Over** to display a list of all the available classes.
5. Tap **First-Class Mail Intl Retail** for a First-Class Mail envelope.
6. Tap **Letter**.
7. Tap in the **Country** field and use the keypad to enter the destination country.
8. Select special services, if required.
9. Tap **Apply**.
10. Place the envelope on the scale. The weight appears.
11. Place the envelope or envelopes on the feed deck. Depending on the SendPro C model you have, feed the envelopes manually or tap **Start** to feed the envelopes.


Important: Your device will upload transactions if you have previously printed any mail. Once the upload completes, you see the message "Transaction upload status, Upload success" with a check mark. Tap the check mark.

Sending mail using a Certificate of Mailing


Purchase a Certificate of Mailing when you need to have proof that you sent a letter or package.

You can only obtain a Certificate of Mailing from the USPS. A Certificate of Mailing is a receipt that provides evidence of the date that you took your mail to the USPS for mailing. You cannot produce this certificate with your device. It is a record of when you turned the mailpiece over to the Post Office and you can only get it from the USPS.

1. Fill out the USPS postal forms [3606-D](#), [3665](#), or [3817](#). Obtain these at the Post Office or online at the [USPS website](#).
2. Calculate the fees for all of the mailpieces. This can include the cost of the Certificate of Mailing fees as well as the total postage amount.
3. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
4. If you have the accounting feature enabled, tap **Account** and select an account. If your device's model number is 8H00 or 9H00 and if you have only a single account, once you select that account the device will remember that account the next time you start Envelope Printing or Print on Envelopes.
5. Scroll down and tap **Print Mode** on the Envelope Printing or Print on Envelopes screen.
6. Tap **Certificate of Mailing**.

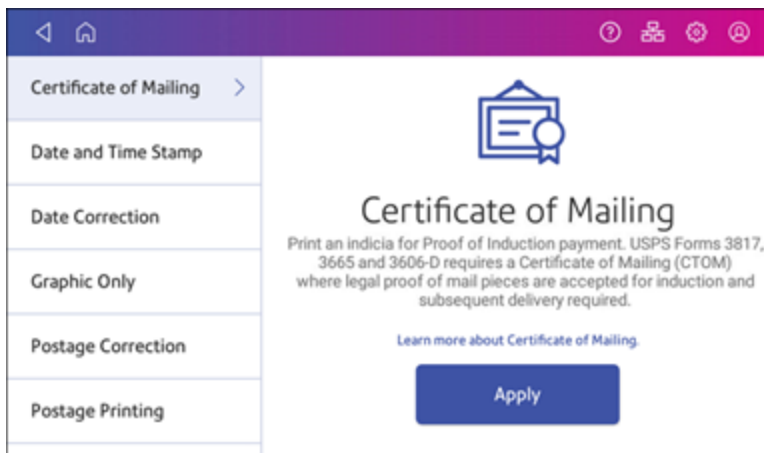

7. Tap **Apply**.

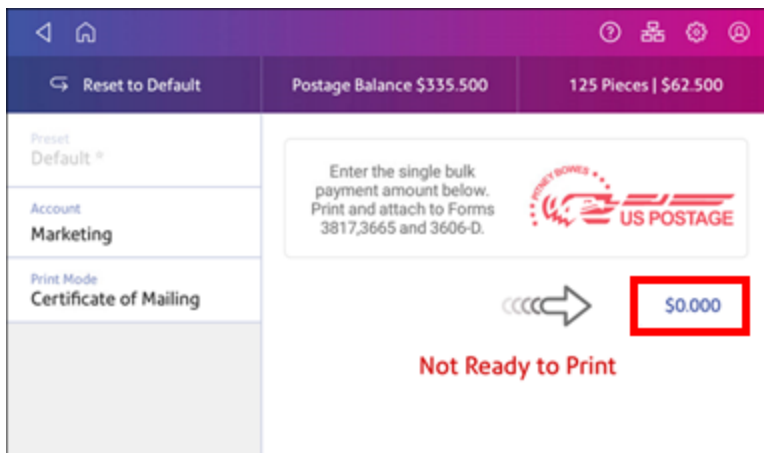

8. Tap on the postage amount and enter the amount you calculated in step 2.

9. Feed the appropriate form (3606-D, 3665, or 3817) through the feeder so that the device stamp prints on the form or on a tape strip that can be applied to the form. Alternatively, you can print the device stamp on each of the mailpieces included in the Certificate of Mailing.
10. Take the mailpieces and the printed form to the Post Office. They will apply a round stamp proof of induction mark that serves as legal proof that your items will enter the USPS.

Advancing the date

Watch this video or follow the instructions below to learn how to advance the date.

Advance the date to print postage up to thirty days before you need to send it.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap the date. The calendar appears.
3. Tap **Tomorrow** or **Another Date**, depending on the date you wish to print.
4. When you see the future date highlighted on the calendar, tap **Apply**.
5. Place the envelope or envelopes on the feed deck. Depending on the SendPro C model you have, feed the envelopes manually or tap **Start** to feed the envelopes.

Important: The date on the postage should match the date when your mail goes to the post office. Your device automatically advances the printed date on the device stamp (as well as its internally held date) when the device time reaches 5:00 PM. You cannot change this time.


Printing postage without a date for pre-printed mailpieces

If you wish to use a pre-printed return envelope, card, or label on which the postage is prepaid, you must print the postage without a date.

This feature is only available for Meter Reply Mail with First-Class Retail Metered classes that include Letter, Non-Machinable Letter, Large Envelope, and Postcard.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap **First-Class Retail Metered Letter**.

3. On the Class & Extra Services screen, scroll down and tap the **Restricted Use Return Mail** box.

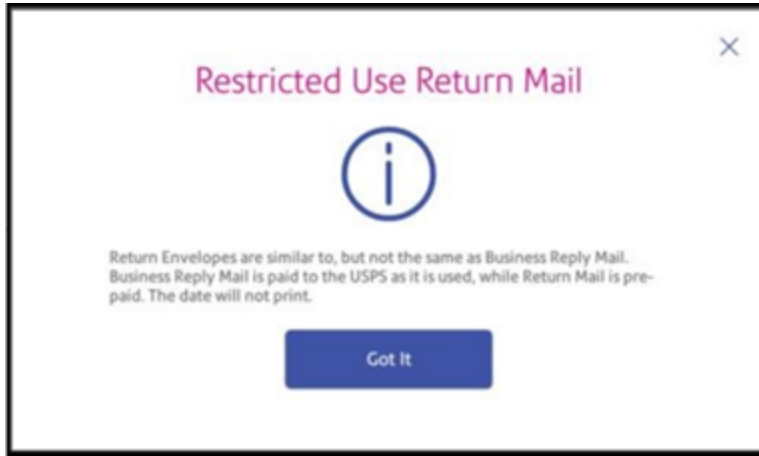


4. A message informs you that no date will print. Tap **Got it**.
5. Tap **Apply**.
6. **Restricted Use Return Mail** appears in the Extra Services box on the Envelope Printing or Print on Envelopes screen.

Printing additional postage

If you do not have enough postage on an envelope, you can add more postage directly on a blank area on your envelope or you can print the additional postage on a tape.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Scroll down and tap **Print Mode**.
3. Tap **Postage Correction**.
4. Tap **Apply**.

5. Tap the postage amount.

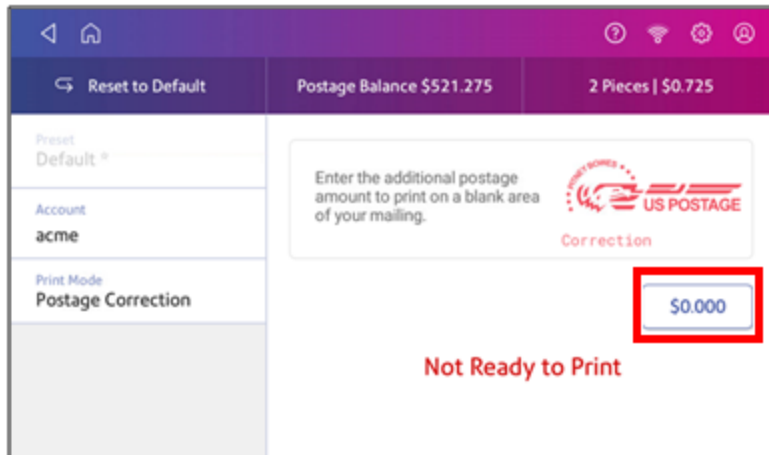

6. Use the keypad to enter the additional postage amount.
 7. Tap the check mark when done.
 8. Turn your envelope over to the blank side.
 9. Place the envelope or envelopes on the feed deck. Depending on the SendPro C model you have, feed the envelopes manually or tap **Start** to feed the envelopes.
- The word "Correction" appears on the postage mark:



Re-dating your mail

Watch this video or follow the instructions below to learn how to redate your mail.

If you already printed today's date and postage on an envelope, but you missed your mail pickup, you can re-date the mail. You must print a future date on the back of the envelope before you can mail it. You can only re-date one envelope at a time, even if you are feeding envelopes automatically.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Scroll down and tap **Print Mode**.
3. Tap **Date Correction**.
4. Tap **Apply**.
5. Tap on the date.
6. Tap **Tomorrow** or **Another Date**, depending on the date you need.
7. Tap **Apply** after you select the new date.
8. Turn the envelope over to the blank side.
9. Place the envelope on the feed deck. Depending on the SendPro C model you have, feed the envelope manually or tap **Start** to feed the envelope. The word "Redate" appears on the newly printed print on the back of the envelope.

Using USPS special services

You can select additional services for your mail. These include Certified Mail, Insured Mail, Delivery Confirmation, Registered Mail and more. The number and types of services available depend on the class of mail.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap **Class**.
3. Tap **Start Over** to see a list of the available classes.
4. Tap the class you wish to use. Sub-classes appear when available for the selected class.
 - For some classes, you must select the type of mailpiece. For example, if you select First-Class Retail Metered, you must select either Letter, Large Envelope, or Package.
5. Select any special services you wish to use.
6. Enter a ZIP code if required.
7. For some classes, you need to either scan or manually enter the Electronic Certified barcode from your label. Then, attach your label to your envelope or package.
8. Tap **Apply**.

Entering the weight manually when printing postage

Enter the weight of a mailpiece when you know its weight and are not using the scale.

1. Tap **Envelope Printing** or **Print on Envelopes** on the Home screen.
2. Tap **Weight**.

The screenshot shows the Pitney Bowes postage printing interface. At the top, there's a navigation bar with a back arrow, a home icon, and status icons for signal, Wi-Fi, battery, and user. Below this is a header bar with a 'Reset to Default' button, 'Postage Balance \$636.650', and '8 Pieces | \$13.350'. The main content area is divided into sections: 'Preset Default' with a star icon, 'Account DVT', 'Class First-Class Retail Metered Large Envelope' with a price of '\$2.800', and 'Extra Services None'. A red box highlights the weight input field showing '0 lb 9.8 oz'. To the right, there are buttons for 'Feb 10' and '\$2.800'. The bottom of the screen shows 'Print Mode Postage Printing' and a green 'Ready to Print' button.

3. Tap **Manual**.
4. Enter the **pounds** and **ounces**.
5. Tap **Apply**.
6. Tap **Class**.
7. Tap **Start Over** to see all the class options.
8. Select the class and any special services required.
9. Tap **Apply**.
10. Place the envelope or envelopes on the feed deck. Depending on the SendPro C model you have, feed the envelopes manually or tap **Start** to feed the envelopes.

Using the scale when printing postage

Use the scale to weigh your mail and calculate the correct postage for you.

1. Tap **Envelope Printing** or **Print on Envelopes** on the Home screen.
2. Tap **Weight**.

3. Tap **Scale**.
4. Place the envelope on the scale. You must do this before the next step or else the **Apply** button remains inactive.
5. Tap **Apply**.
6. Tap **Class**.
7. Select **Start Over** to show the class options.
8. Tap the class you want.
9. Select special services, if required.
10. Tap **Apply**.
11. Place the envelope or envelopes on the feed deck. Depending on the SendPro C model you have, feed the envelopes manually or tap **Start** to feed the envelopes.
12. The scale retains the weight of the mail for approximately 70 seconds. Add another mailpiece to the scale if you want to override the weight.

Sealing envelopes without printing postage

Use Seal Only mode to seal envelopes without printing anything.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap **Print Mode**. You may need to swipe up on the screen to see this option.
3. Swipe up on the Print Mode screen and tap **Seal Only**.
4. Tap **Apply**.
5. Load the envelopes onto the feeder with the flap side facing down and the top edge against the rear wall.
6. Tap **Seal Only** to continue.

Sealing envelopes and printing postage

Use the moistener on your device to seal your envelopes before you print postage.

1. Check the level of sealing solution by checking the sight window on the front of the feeder deck.



2. Place the envelopes with the flap side facing down and the top edge against the rear wall.

3. Make sure that the seal/no seal lever is set to the seal position (all the way to the left).



4. Place the envelopes on the feed deck. Tap **Start** on the Envelope Printing or Print on Envelopes app.


If the moistener tank is full and your envelopes do not seal correctly, clean or replace the moistener brush and wick.

Zeroing the scale

Zero the scale to set the weight to zero.

Make sure there is nothing on the scale when you zero it.

1. Tap **Envelope Printing** or **Print on Envelopes** on the Home screen.
2. Tap **Weight**.

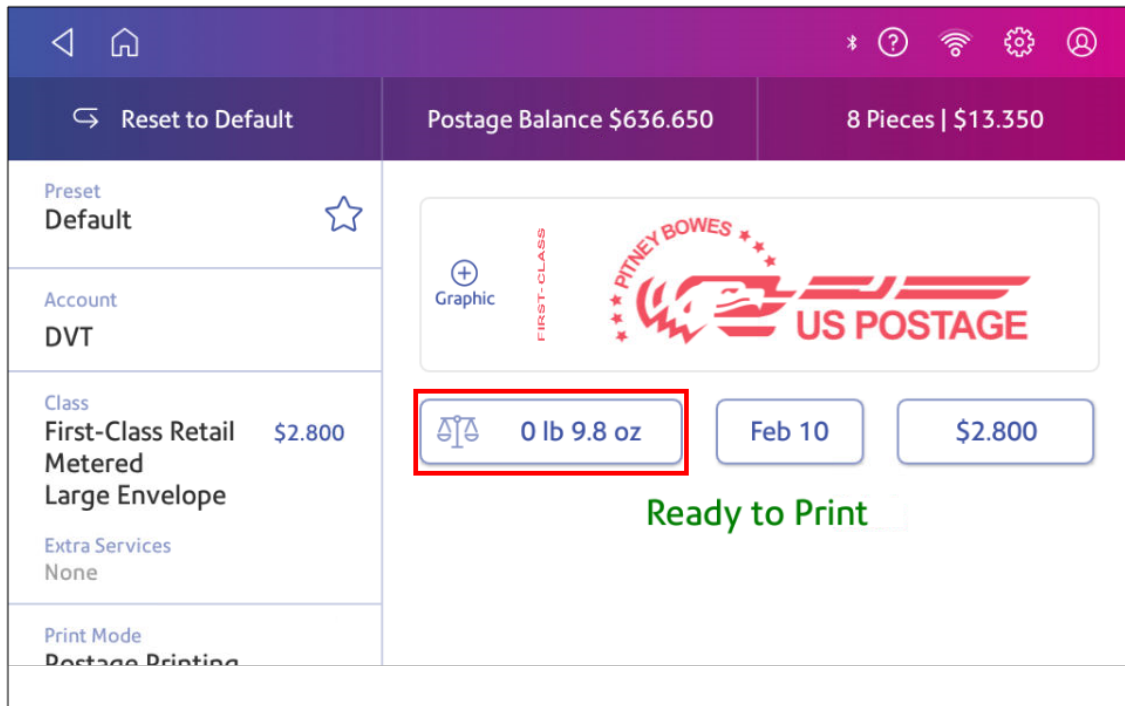


3. Tap **Scale** on the weighing method screen.
4. Tap **Zero Scale**.
5. Tap **Cancel** to return to the Envelope Printing or Print on Envelopes app.

Using Differential Weighing


You can use Differential Weighing to process items of different weights more efficiently. Your device calculates the correct weight and price as you remove each mailpiece from the scale.

Differential Weighing is a feature that is optional and needs enabling if you want to use it. Contact your Pitney Bowes Sales Representative for information about options and pricing.

1. Tap **Envelope Printing** or **Print on Envelopes** on the Home screen.
2. Tap **Weight**.

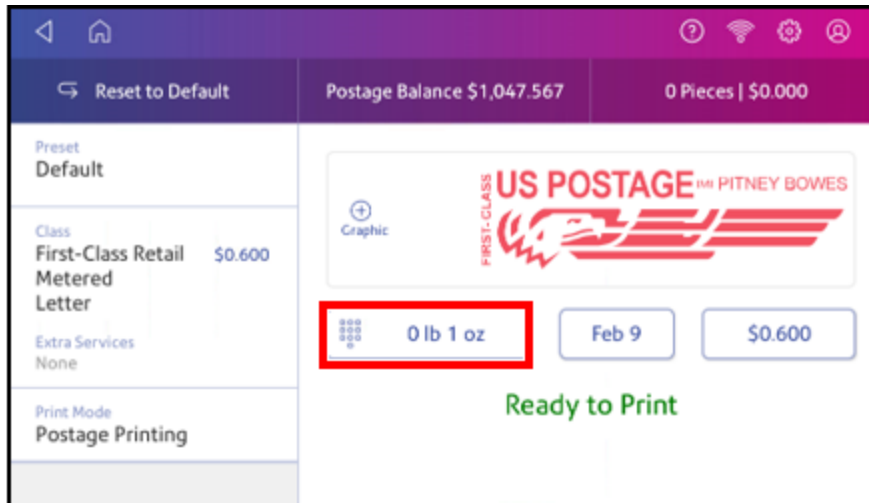


3. Tap **Differential**.

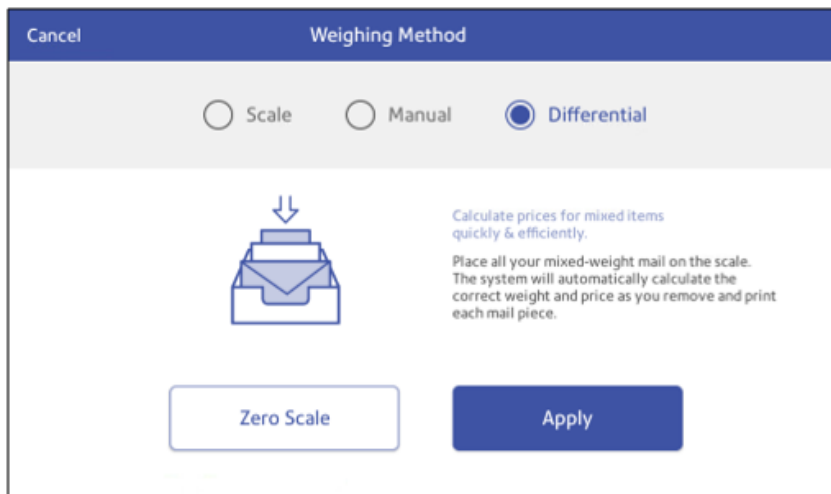

4. Tap **Apply**.
5. Place all the mail on the scale. Use a container, if necessary.
6. Tap **Class**.
7. Select **Start Over** to show the class options.
8. Tap the class you want.
9. Select special services, if required.
10. Tap **Apply**.

11. Remove a mailpiece from the scale and insert it into the device. The device then prints the postage.
12. Continue removing mail from the scale until you reach the last mailpiece. When you remove the last mailpiece or container from the scale, the device asks you if you wish to print postage for the last item removed. Tap **Yes** if the item is a mailpiece. Alternatively, tap **No, not a mailpiece**.

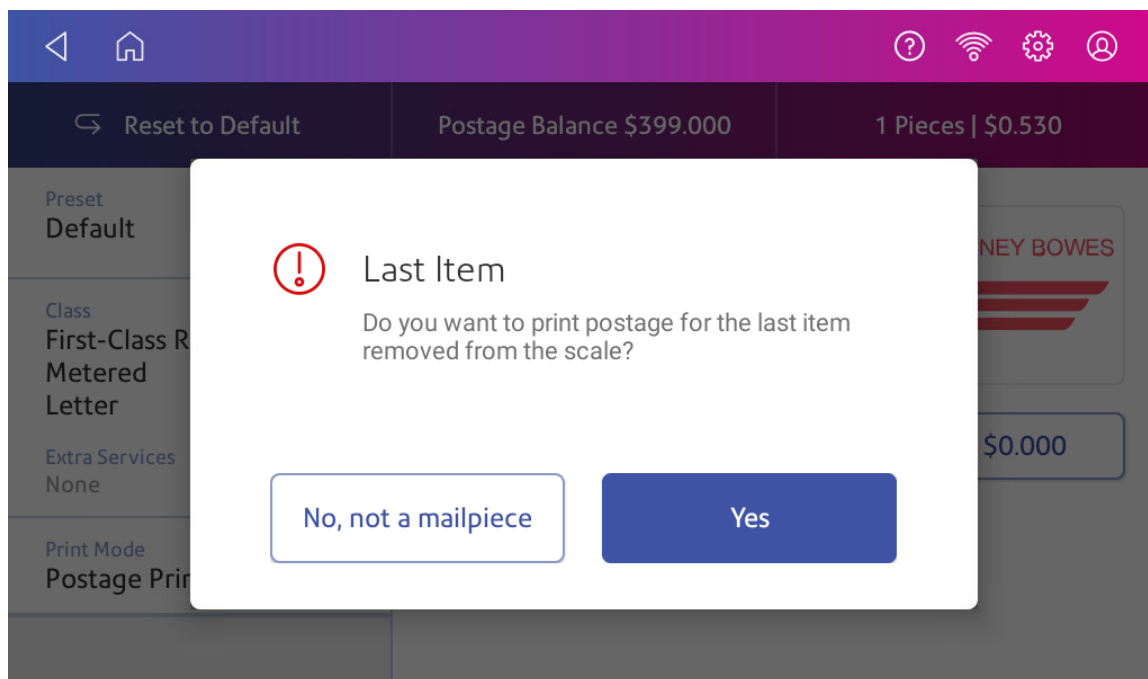

13. If necessary, insert the mail into the device. The device then prints the postage.

Editing the Differential Weighing threshold


To edit the minimum weight each mailpiece must weigh while using Differential Weighing, you can set the Differential Weighing Threshold.

You can set the threshold weight in multiples of 0.1 ounces up to 8.8 ounces. For example, 0.1, 0.2 or 0.3.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap **Settings**.



3. Tap **Mailer ID**.
4. Tap **Differential Weighing**.
5. Select the desired weight from the Threshold menu.

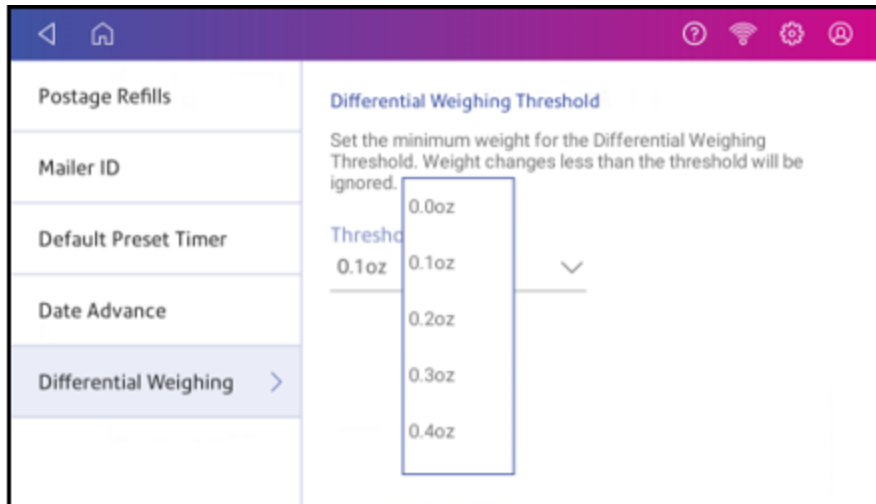

6. Tap the back arrow to return to the Envelope Printing or Print on Envelopes app.

Adding insurance to your mail

You can purchase insurance for your mailpiece to protect against loss, damage or missing contents. The insurance covers only the actual value of the mailed contents.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap **Class**. If this is the class you need, tap the **Insurance** box, enter the amount, and tap **Apply**. If you need another class, go to step 3.
3. If you need a different class:
 - a. Tap **Start Over** and select a new class and any special services you need. Tap **Apply** after adding special services.
 - b. Tap the **Insurance** box, enter the amount, and tap **Apply**.
4. To confirm, tap **Apply**.
5. Place the envelope or envelopes on the feed deck. Depending on the SendPro C model you have, feed the envelopes manually or tap **Start** to feed the envelopes.

Adding a graphic to your envelope or tape

Your device comes with a set of standard graphic images that you can add to your envelopes or tapes when you print your postage. Graphic ads are also known as ads, slogans or logos. Examples include PLEASE OPEN IMMEDIATELY, RECYCLE, and Season's Greetings.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Weigh your envelope, select a class, and select any special services required.
3. Tap the **Graphics** icon on the Envelope Printing screen.
4. Select the graphic you wish to use.
5. Tap **Apply**.
6. Place the envelope or envelopes on the feed deck. Depending on the SendPro C model you have, feed the envelopes manually or tap **Start** to feed the envelopes.

To remove a graphic:

1. Tap the current graphic to deselect it.
2. Tap **Apply**.

Sending mail using Electronic Return Receipt (ERR)

Tracking services are available when you use the scale or Manual Weight entry method. The following steps are based on using Priority class and the Electronic Certified service with Electronic Return Receipt (ERR).

In order to use ERR, you must submit Form 5053, Bulk Proof of Delivery to the USPS. The USPS then provide you with a 9-digit USPS Mailer ID. You need to enter this number when using ERR. The following procedure is an example of how to use ERR.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Place the envelope or package on the scale.
3. Tap **Class**. If **Priority Mail Retail** is not the current class, tap **Start Over**, then select **Priority Mail Retail** from the list of classes.
4. Tap **Envelope or Package**.
5. Enter the ZIP Code, then tap **Apply**.
6. Tap the **Electronic Certified** box.
7. Tap the **Electronic Return Receipt** box.
8. Tap **Apply**.

9. Enter the barcode number from your USPS PS Form 3800 using the keypad or use the optional barcode scanner. The barcode number should start with a 94.
10. (Optional) Add your Customer Reference Number. Tap **Apply** to confirm.
11. When prompted to apply the barcode label on the envelope, tap **Continue**. The barcode appears in the Class section of the screen.
12. Place the envelope or envelopes on the feed deck. Depending on the SendPro C model you have, feed the envelopes manually or tap **Start** to feed the envelopes.

Getting a USPS refund for damaged or incorrectly printed mail

Once you print an impression, your device deducts the postage amount from the postage funds. This happens even if the printing is illegible. Therefore, it is important to:

- Ensure that the correct value appears before printing postage.
- Ensure that the ink level does not get too low. **Recommended:** Always have a spare ink cartridge available.

For up-to-date refund guidelines, refer to the FAQ page of the USPS website.

Postage device indicia is eligible for a refund if it is complete, legible, valid, unused and printed on unmailed envelopes, wrappers, or labels made in accordance with USPS DMM 604.9.3.4. This includes:

- Postage printed on the back (versus the front) of a letter
- Only a portion of the postage printed, or postage is not legible
- Too much postage was printed on the item
- Not enough postage was printed on the item
- Incorrect date on the device
- Incorrect information (street name, street number, city, etc.)

Your refund request must include:

- a completed USPS Form 3533
- proof that the person requesting a refund is an authorized user of the device
- unused meter indicia

You must submit your refund request within 60 days from the date shown on the mail to your local Post Office.


For all indicia except those produced by PC Postage systems, you must submit the indicia to the licensing Post Office.

- The Postal Service™ refunds 90% of the face value on the indicia if the total is \$500 or less.
- If the total face value is more than \$500, the charge is \$50 per hour for the actual hours to process the refund, with a minimum charge of \$50.


Creating a custom text message for your mail

You can create a custom text message for your mailpiece. The message can be up to 5 lines with each line containing a maximum of 20 characters. You can leave any of the 5 lines blank. The message is centered on the envelope or tape when you print postage.


1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap **Print Mode**.
3. Tap **Graphic Only**.
4. Tap **Apply**.
5. Tap **+ Graphic**.

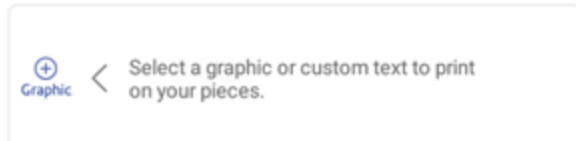


6. Tap **Custom Text**.
7. Tap **+ Add**.

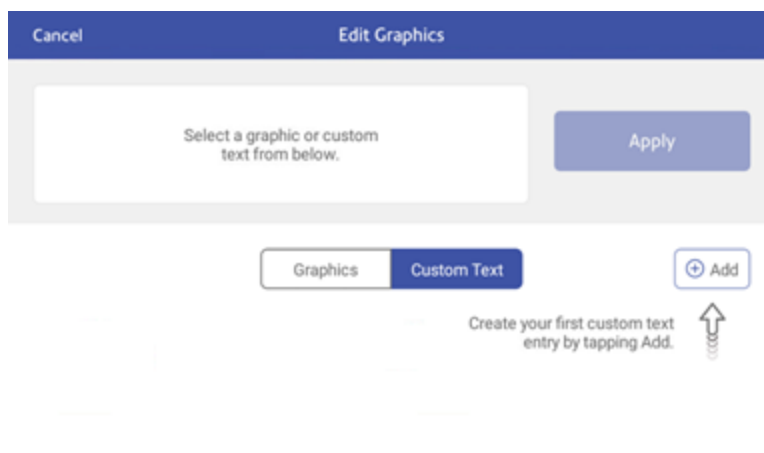

8. When creating a message, a message appears to inform you that you must comply with Postal rules. Tap **Accept & Continue** to agree.
9. Enter a name for the text message, then tap **Save**

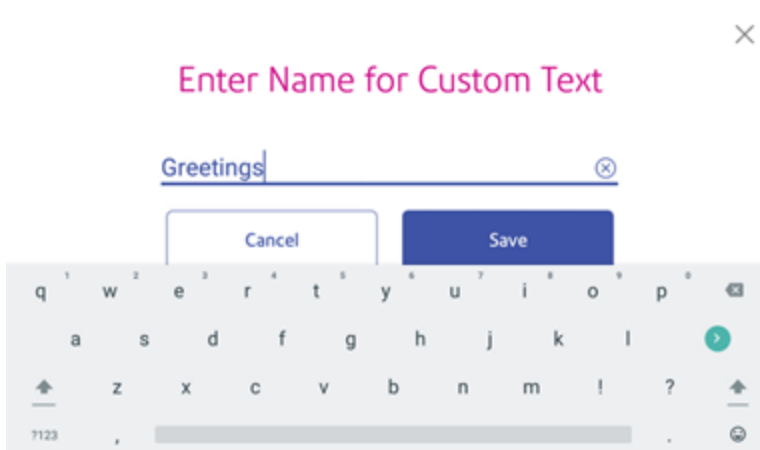

10. Enter the text on any or all the lines, with a maximum of 20 characters per line.

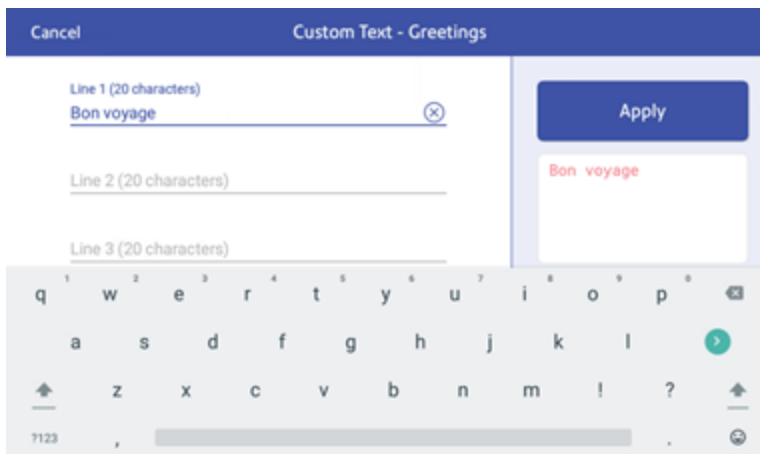


11. When finished, tap **Apply**. The screen displays the message as it will appear on your envelope or tape.
12. Tap **Apply** again. The custom text message is now available when you print postage.
13. Tap the back arrow to return to the Home screen.


Adding a custom text message to your envelope or tape

Your SendPro C Auto allows you to add a custom text message to your mail. This can be a return address, for example. Your message can be up to five lines, with 20 characters per line. The message prints on the left side of the print.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Weigh your envelope, select a class and special services, if required.
3. Tap **+ Graphics**.

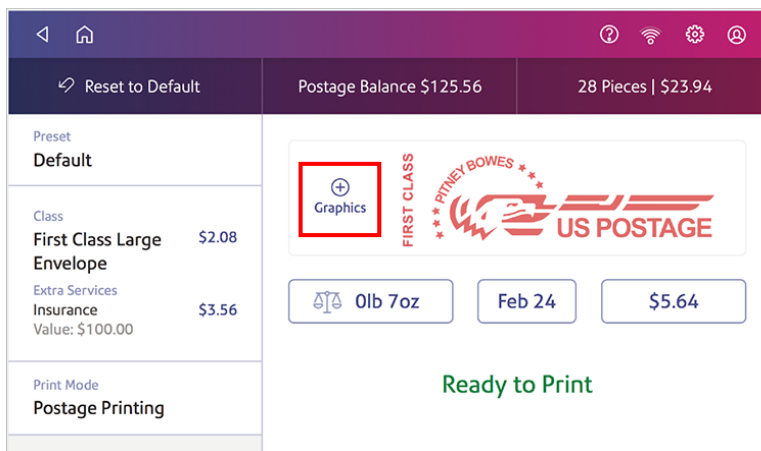


4. Tap **Custom Text**.

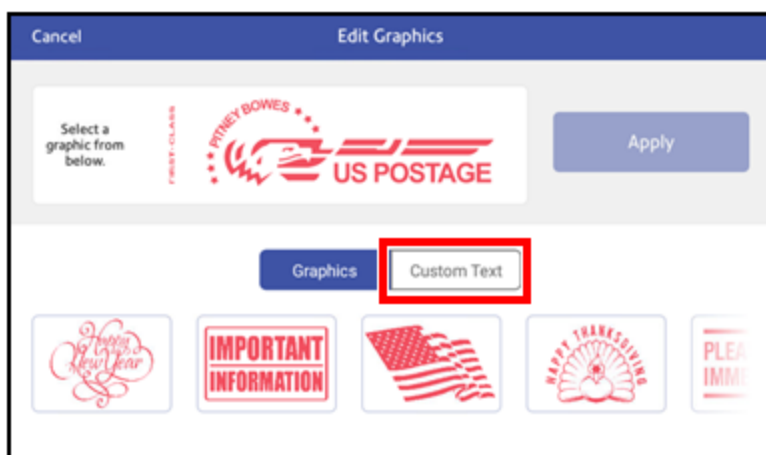

5. Tap on the text message you wish to use. A green check mark appears next to the selected message.



6. Tap **Apply**. The custom text message appears on a preview screen.

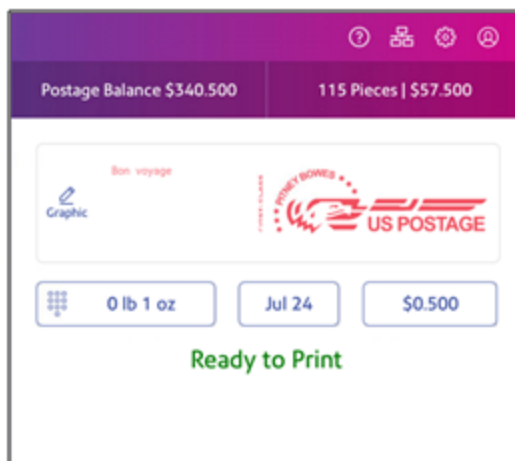


7. Feed the envelope or tape strip through the device.


Editing or deleting a custom text message

Your device allows you to add a custom text message to your mail. You can edit or delete messages you no longer need.


1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap **+ Graphics** on the Envelope Printing or Print on Envelopes screen.

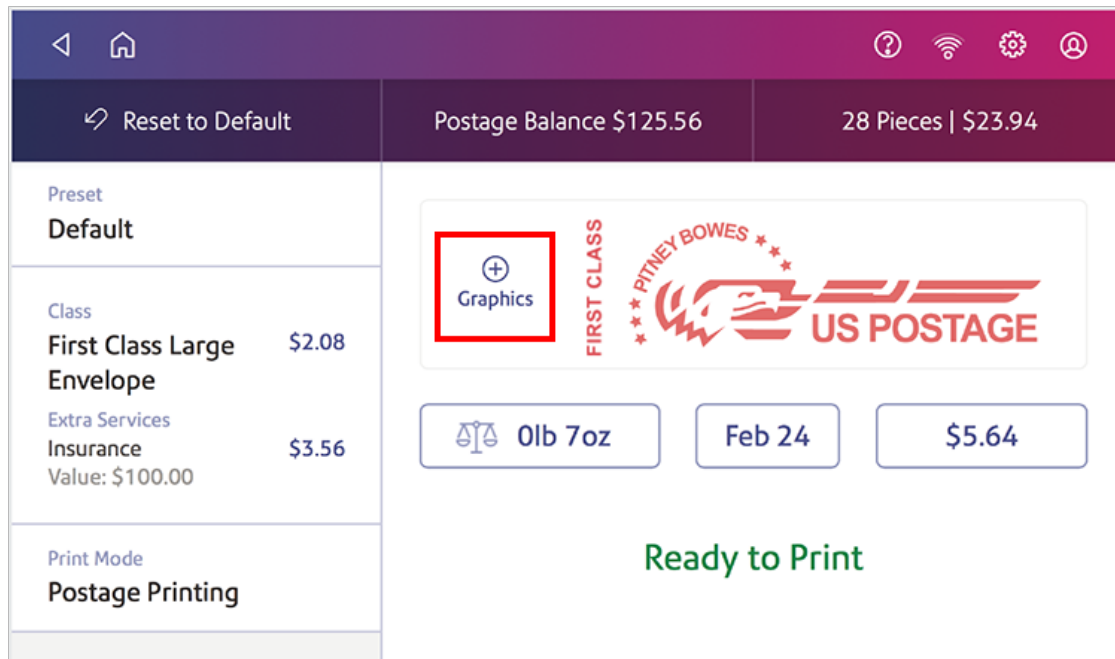

3. Tap **Custom Text**.

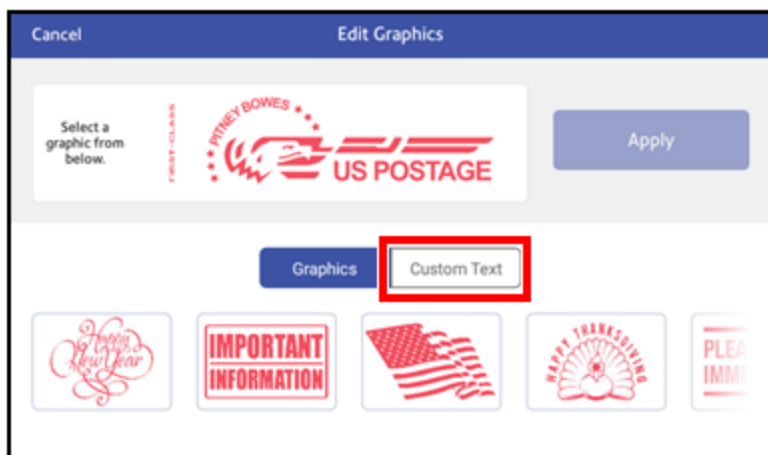

4. Tap on the custom message you wish to edit or delete, then tap **Edit**.

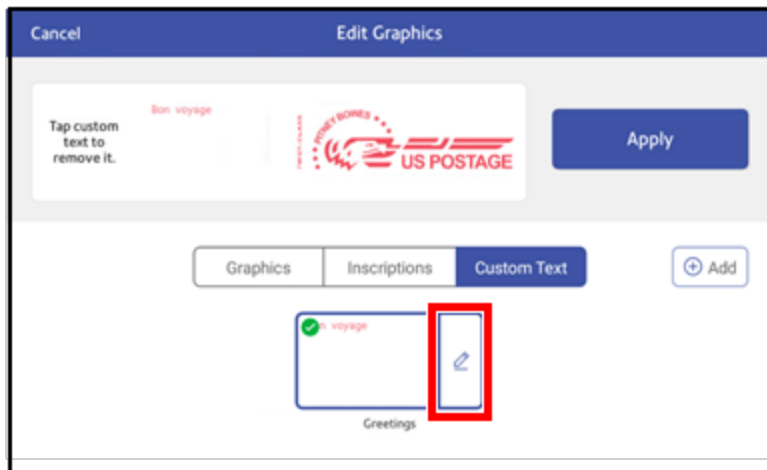

5. Select the appropriate option. You can edit the text message, rename it, or delete it.



6. Tap **Apply**.

Printing a graphic without printing postage

Print a graphic without printing postage, such as the Received graphic on incoming mail.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap **Print Mode**.
3. Select **Graphic Only**.
4. Tap **Apply**.
5. Tap **Graphic**.
6. Tap **Graphics**, then select your graphic.
7. Confirm with **Apply**.
8. Print the graphic on the envelope or tape.

Adding an inscription


Inscriptions appear automatically when you select certain classes of mail. This saves you time and helps you always use the correct inscription.

For example, if you select First Class mail, the First Class inscription prints automatically on your mail.

Printing only the date and time

Print the date and time to keep a record of when you receive incoming mail.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap **Print Mode** (you may have to scroll down to see this).

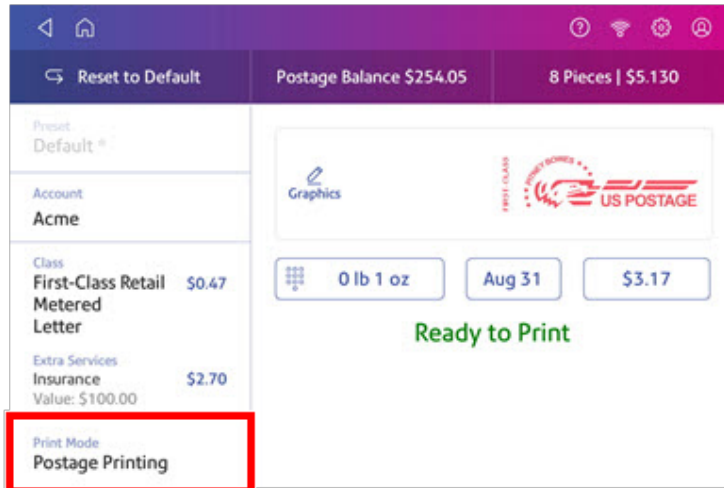

3. Select **Date and Time Stamp**.
4. Tap **Apply**.
5. Place the envelope or envelopes on the feed deck. Depending on the SendPro C model you have, feed the envelopes manually or tap **Start** to feed the envelopes.

Presort features

There are four optional presort features available for SendPro C Auto: Presort Rates, PresortXtra Rates, Marketing Mail, and Marketing Mail Nonprofit.

Presort Rates

A set of common presort rates, First-Class Commercial - Automation and Presorted, are present on the device.

Visit the [203 Basic Postage Statement, Documentation, and Preparation Standards](#) page on the USPS website to learn more about the optional Presort Rates package. This page discusses some of the efforts needed by users to meet USPS requirements for mailing with presort rates.

PresortXtra Rates

You can only use PresortXtra with the following USPS presort rates:

- First-Class Mail® Commercial Letters and Flats
- USPS Marketing Mail™ Letters and USPS Marketing Mail Nonprofit Letters

See our [PresortXtra](#) page for more information if you are not a PresortXtra customer.

Marketing Mail and Marketing Mail Nonprofit

A set of presort rates for Marketing Mail or Marketing Mail Nonprofit are present on the device.

Visit the [USPS Marketing Mail](#) page on the USPS website to learn more about the optional Presort Rates package. This page discusses some of the efforts needed by users to meet USPS requirements for mailing with Marketing Mail.

Creating a PresortXtra letter preset

You can obtain a discount by sorting your mail before it goes to the USPS. The discount is determined using a sliding scale based on services, shape and weight. By defining these conditions in a preset, you can quickly recall the settings when printing postage.

See our [PresortXtra page](#) for more information if you are not a PresortXtra customer. If you need Drop Ship service, but your device is not set up for it, please chat with us.

Follow these steps to set up your PresortXtra First-Class Mail letter preset:

Set the Rate

1. Tap **Print on Envelopes** on the Home screen.
2. Tap **Class**.
3. Tap **Start Over**.
4. Tap **Pitney Bowes Presort Xtra**.
5. Tap **First Class Letter**.
6. Tap **Apply**.

Add Drop Ship Text If Needed

1. Tap **Graphic**.
2. Tap **Custom Text**.
3. Select **Drop Ship**
4. Tap **Apply**.

Save the Preset

1. Tap the star in the **Preset** box.
2. Tap **Save New Preset**.
3. Select **Preset Options**.
4. Select **Create New Custom Preset**.
5. Enter a name, then tap **Save**.

Before running PresortXtra mail, remember to advance the date and set the batch counter to learn the number of mailpieces you have.

Advance the Date

1. Tap the date.
2. Select **Tomorrow**.

3. Tap **Apply**.

Reset the batch counter

1. Tap **x Pieces | \$x.xx**.
2. Tap **Reset Counter to 0**.

7 - Managing Printing on Envelopes

In this section

Confirming your meter update.....	144
Changing the default refill amount for printing postage.....	144
Uploading postage transactions.....	145
Clearing or resetting the number of mailpieces sent ...	146
Updating postal rates or software for printing on envelopes.....	146
Confirm the effective date for postal rates.....	147
Setting the low funds warning for printing postage.....	148
Setting up a mailer ID.....	148
Updating the ZIP code.....	148
What is Accounting.....	149
Turning Envelope Printing or Print on Envelopes account passwords on or off for printing postage.....	150
Adding a Envelope Printing or Print on Envelopes account.....	151
Editing an account.....	152
Making an account inactive.....	152
Deleting an account.....	153
Creating presets for printing postage.....	153
Viewing presets for printing postage.....	155
Selecting a preset for printing postage.....	155
Modifying presets for printing postage.....	155
Setting the default preset timer.....	156

Confirming your meter update

To check if you have the latest rates for Envelope Printing or Print on Envelopes:

1. Locate your Product Code Number (PCN) and 7-digit serial number.
2. Go to the [Confirm your meter update](#) web page.
3. Select your PCN from the menu and enter the serial number in the field provided.
4. Click **Confirm Meter Update**.

Changing the default refill amount for printing postage

Change the default refill amount to store an amount you want to refill your device with.

You can set the default refill amount during installation or change it at later time.

There are two ways to change the default refill amount:

From the Home Screen:

1. Tap **Settings**.



2. Scroll down to the Envelope Printer Settings section.
3. Tap **Postage Refills**.
4. Tap the box under **Default refill amount**.
5. Tap the back key to remove the existing amount. You may need to tap the key multiple times to clear the amount.
6. Enter the new amount.
7. Tap **Apply**.
8. Tap the back arrow to return to the Home screen.

From Envelope Printing or Print on Envelopes:

1. Tap **Envelope Printing or Print on Envelopes** from the Home screen.
2. Tap **Postage Balance**.
3. Tap **Refill Settings**.
4. Tap the box under **Default refill amount**.

5. Tap the back key to remove the existing amount. You may need to tap the key multiple times to clear the amount.
6. Enter the new amount.
7. Tap **Apply**.
8. If necessary, tap the back arrow to return to the Envelope Printing or Print on Envelopes app.

Uploading postage transactions

Automatic upload of your postage transactions

- Your device automatically uploads your postage transactions to the Pitney Bowes Data Center. This occurs at least once during the day and once after hours.
- If you lock your device or turn it off for any extended period, it automatically uploads your transactions when you turn it on again.
- If you see the message "Sync Transaction Data" or "Sync USPS Transaction Data", it means you need to upload your transactions.

Important: If your device had connection issues recently, it may require multiple uploads to upload transactions. If the device prompts you to upload more than three times, please contact technical support.

Manual upload of your postage transactions

1. Tap **Settings**.



2. Scroll down to the Envelope Printer Settings section.
3. Tap **Sync Transaction Data** or **Sync USPS Transaction Data**.
 - A series of messages appear, starting with "Preparing Transaction Data" followed by "Sending Transaction Data."
 - Once the upload is complete, the message "Transaction Data Sent" appears.
 - The message "No Sync Required" appears if there are no new transactions to upload.

Clearing or resetting the number of mailpieces sent

Reset the piece counter to delete the piece count information.

Make certain that you wish to delete the piece count information. Once you do so, you cannot restore the deleted data.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap **Pieces**.
3. Tap **Reset Counter to 0**.

Updating postal rates or software for printing on envelopes

Automatic updates

Your device updates postal rates and software automatically.

Keep your device turned on and connected to your network to get your automatic updates, as the device downloads updates during the evening hours.

Manual postal rate updates

1. Select Rates and Updates:
 - Tap **SendPro Apps**, then **Rates and Updates**.
2. If new rates are available, your device downloads and installs updates.
 - a. If the rates are available today, this message appears:
"New postage rates took effect today. Your device has been updated and new rates are already in effect. To learn more, visit pitneybowes.com/ratesandupdates."
 - b. If the rates took effect already, this message appears:
"New postage rates took effect on [effective date]. Your device has been updated and new rates are already in effect. To learn more, visit pitneybowes.com/ratesandupdates."
 - c. If the new rates are pending, this message appears:
"New postage rates take effect on [future effective date]. Your device has been updated and you'll see the new rates then. To learn more, visit pitneybowes.com/ratesandupdates."
3. To continue tap **Got it**.


Manual software updates

1. Select Rates and Updates:
 - Tap **SendPro Apps**, then **Rates and Updates**.
2. If new rates are available, your device downloads and installs updates.
 - a. If the rates are available today, this message appears:
"New postage rates took effect today. Your device has been updated and new rates are already in effect. To learn more, visit pitneybowes.com/ratesandupdates."
 - b. If the rates took effect already, this message appears:
"New postage rates took effect on [effective date]. Your device has been updated and new rates are already in effect. To learn more, visit pitneybowes.com/ratesandupdates."
 - c. If the new rates are pending, this message appears:
"New postage rates take effect on [future effective date]. Your device has been updated and you'll see the new rates then. To learn more, visit pitneybowes.com/ratesandupdates."
3. To continue tap **Got it**.

Confirm the effective date for postal rates

You can check to see if you have downloaded the latest rates for each postal class on your device.

1. Tap **Envelope Printing or Print on Envelopes**.
2. Tap **Class**.
3. Tap **Start Over** to display a list of all the available classes.
4. Tap the information icon (i) next to the class you wish to check, for example First-Class Retail Metered. The rate change information appears for the class.

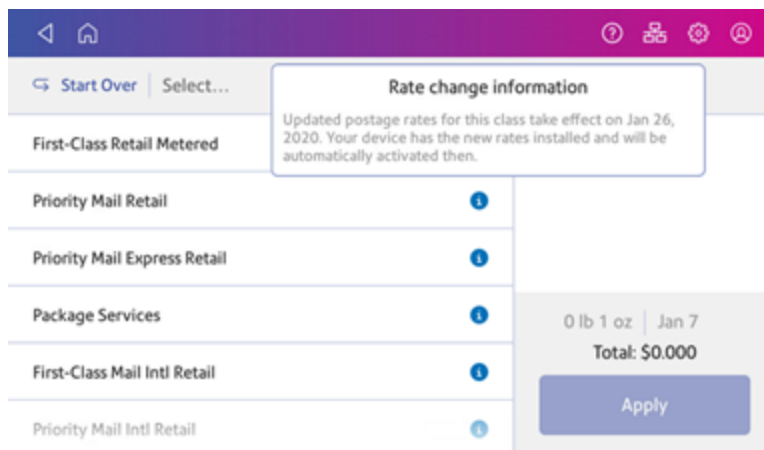

Setting the low funds warning for printing postage

Set the low funds warning to warn you when your available funds for printing postage reaches a certain amount. Use this warning as a reminder to add more postage to your device.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap **Postage Balance**.
3. Tap **Refill Settings**.
4. Tap **Low postage threshold**.
5. Tap **back** on the keypad to remove the existing amount.
6. Enter the new amount.
7. Tap **Apply**.
8. If necessary, tap the back arrow to return to the Envelope Printing or Print on Envelopes app.

Setting up a mailer ID

Your mailer ID is a 9-digit number that you need when using Electronic Return Receipt (ERR). To get your mailer ID, submit Form 5053, Bulk Proof of Delivery to the USPS.

1. Tap **Settings**.



2. Scroll down to the Envelope Printer Settings section.
3. Tap **Postage Refills**.
4. Tap **Mailer ID**.
5. Enter the 9-digit number using the keypad.
6. Tap **Apply**.

Updating the ZIP code

The ZIP code printed by your device should be either your ZIP code or the ZIP code of the post office picking up your mail.

If your device prints an incorrect ZIP code, a Pitney Bowes representative must resolve this issue. Contact technical support for assistance.

What is Accounting

You can use the accounting feature to track the postage that departments or individuals within your organization use.

The accounting feature helps you to understand how your business spends its postage and identify cost-saving opportunities. You can charge postage back to departments or clients and report on postage expenditures.

The Envelope Printing or Print on Envelopes app uses a multi-level account format. It is different from the Create Shipping Labels Cost Accounts.

When you use Envelope Printing or Print on Envelopes accounts to track your postage usage, use sub accounts and sub sub accounts to analyze your usage within an account.

How you create accounts depends on your needs. You can create accounts in single or multiple levels. For example, you can divide a top level department (account) into two additional sub sections (sub accounts and sub sub accounts).

The Envelope Printing or Print on Envelopes accounting structure can have up to a three level hierarchy:

- account (top level of the hierarchy)
- sub account (next possible level of the hierarchy)
- sub sub account (last possible level of the hierarchy)

Important: Only the lowest level of the account hierarchy is chargeable. This means that the lowest level of the account has the transactions applied to them.

- **Account with no sub accounts** - When you create an account with no sub accounts, you charge postage to that account. This is because the account does not have sub or sub sub accounts.
- **Account with sub account or sub sub account** - When you create a sub account or sub sub account, you charge postage to the lowest level (the sub account or sub sub account).

Account hierarchy examples

Top level account

- Engineering

Account with sub accounts

- Engineering; Sub account - Software;
- Engineering; Sub account - Hardware;

Account with sub sub accounts

- Engineering; Sub account - Software; Sub sub account - Graphics and Layout; Sub sub account - Design
- Engineering; Sub account - Hardware; Sub sub account - Quality Approval; Sub sub account - Testing


Turning Envelope Printing or Print on Envelopes account passwords on or off for printing postage

You can protect each account from unauthorized access by turning account passwords on.


1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap **Account**.
3. Tap **Preferences**.



4. Tap **Manage Accounts**.

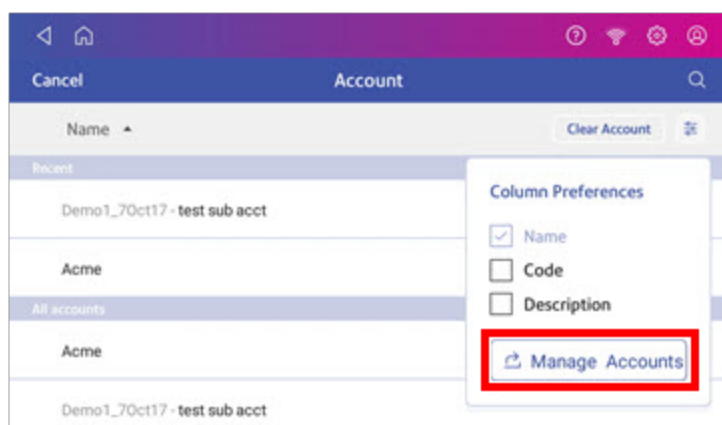

5. The Manage Accounts screen opens.

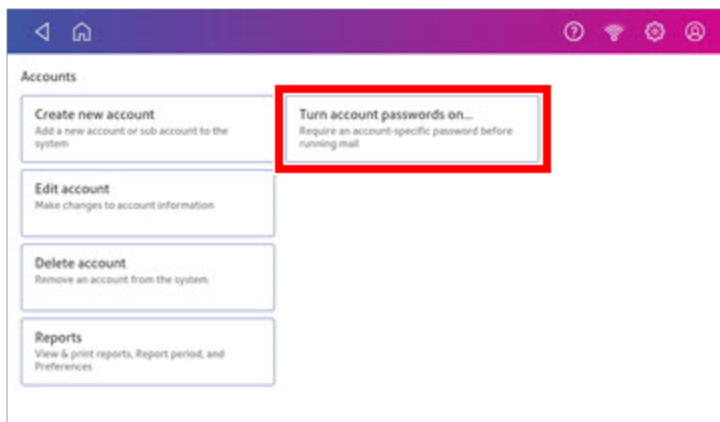

- Tap **Turn account passwords on** if account passwords are off and you wish to turn them on. Tap **OK**.
 - Tap **Turn account passwords off** if account passwords are on and you wish to turn them off. Tap **OK**.
6. Tap the back arrow on the top left side of the screen to return to the list of accounts.
 7. Tap **Cancel** to return to the Mail screen.

Adding a Envelope Printing or Print on Envelopes account

You can add a Envelope Printing or Print on Envelopes account to track your costs for printing postage on envelopes. This is different from your PB account which is used to fund your postage or shipping label costs.

Accounting is a feature that is optional and needs enabling if you want to use it. Contact your Pitney Bowes Sales Representative for information about options and pricing.

1. Tap **SendPro Apps** on the Home screen.
2. Tap **Manage Accounts**.
3. Tap **Create new account**.
4. Tap **Create a new account** for a new account.
5. Enter the account name in the Enter account name field. Account names can be up to 75 characters long.
If the keyboard does not pop up, tap the line in the gray box.

6. Enter a unique code in the Code field to identify each account. Codes can be alphanumeric. Codes help you locate accounts more easily.
7. You can use the optional fields, such as:
 - **Description** - Enter a description of the account up to 150 characters.
 - **Password** - Tap **Password** to add a password for an account.
 - Passwords are case sensitive, can be alphanumeric, and must be four characters in length. If you do set a password, you need to enter it to print mail.
8. Ensure you set the status to active.
9. Tap anywhere on the screen outside of the fields when complete.
10. Tap **OK** to save. The name of the new account appears.
 - Tap **Create New Account** to create another account.
 - Tap **Add a Sub Account to this account** to add a sub account to the account you just created.
 - Tap **Done** if you do not need to create any more accounts.
11. Press the **back arrow** to return to the account list.

Editing an account

Edit an account when you want to change the account name, code, description, status or password.

Important: Once you charge postage to an account, you cannot change the account name or code.

1. Tap **SendPro Apps** on the Home screen.
2. Tap **Manage Accounts**.
3. Tap **Edit account**.
4. Tap the account you want to edit.
5. Select **OK**.
6. Make your changes, such as edit the account name, code, description, status or password.
7. When finished, tap anywhere on the screen outside of the fields.
8. Tap **OK** to return to the Accounts screen.
9. Tap the back arrow to return to the list of accounts.
10. Tap **Cancel** to return to the Envelope Printing or Print on Envelopes screen.

Making an account inactive

Setting the account status to inactive prevents anyone from charging postage against an account.

1. Tap **SendPro Apps** on the Home screen.
2. Tap **Manage Accounts**.
3. Tap **Edit account**.
4. Tap the account you want to make inactive.
5. Select **OK**.
6. Tap the **Inactive** button.
7. Tap **OK** to return to the Accounts screen.
8. Tap the **back arrow** to return to the SendPro Apps screen.
9. Tap **Close** to return to the Home screen.

Deleting an account

If you apply postage to an account, you cannot delete the account. You can only make the account inactive.

Make sure you do not need an account's data before you delete an account. When you delete an account, sub account or sub sub account, you delete its data. You cannot recover that data.

1. Tap **SendPro Apps** on the Home screen.
2. Tap **Manage Accounts**.
3. Tap **Delete account**. The list of available accounts appears.
4. Tap the account you want to delete.
5. Tap **OK**.
6. Tap **Yes, delete account** to confirm.
7. Tap **OK**.
8. Tap the back arrow to return to the SendPro Apps screen.
9. Tap **Close** to return to the Home screen.


Creating presets for printing postage

Create presets to store a group of commonly-used settings. Presets can store settings such as a postage class, an account and a graphic. The maximum number of presets you can have is 21. This includes the default preset.


1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap **Class**, select the class and any special services, messages or graphics.

3. Verify the settings in the Envelope Printing or Print on Envelopes app.
4. Tap the **star** in the Preset box.

Important: You must modify something in the Envelope Printing or Print on Envelopes app for the Preset star to appear.

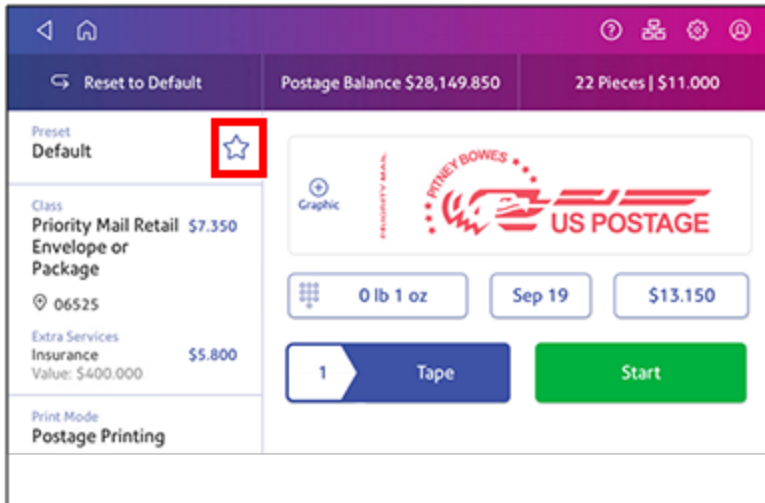

5. Tap **Save New Preset** to save it. If you wish to save it and replace the default setting, tap **Replace Default Preset**.

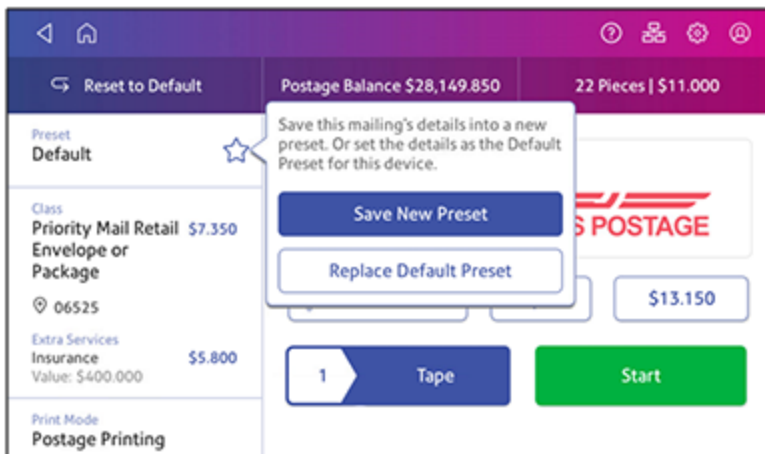

6. For a new preset, enter a name, then tap **Save**.

Viewing presets for printing postage

1. To view the presets, tap the **Preset** box on the Envelope Printing or Print on Envelopes screen.
2. Tap each preset to view its settings.

Selecting a preset for printing postage

Select a preset to quickly apply a group of settings.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap **Preset**.
3. Tap the preset you want to use, then tap **Apply Preset**.


If you select a preset and do not use it within about one minute, the Envelope Printing or Print on Envelopes screen restores the default preset values. The same is true when you switch your device off or it enters sleep mode.

Modifying presets for printing postage

Modify a preset to rename a preset, replace the default preset or delete a preset.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap **Preset**.
3. Tap the preset you wish to modify.

4. Tap **Options**.

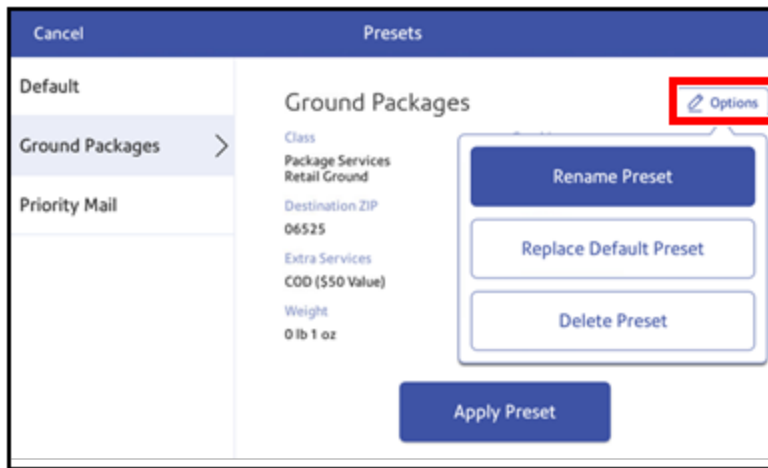

5. Tap the option you want.

Setting the default preset timer


The default preset timer will reset your device to your most commonly-used settings. By default, the preset timer resets your device after one minute of inactivity. You can change this time if necessary.

1. Tap **Settings**.



2. Scroll down to the Envelope Printer Settings section.
3. Tap **Postage Refills**.
4. Tap **Default Preset Timer**.

5. Use the slider to set the time between 1 and 9 minutes.

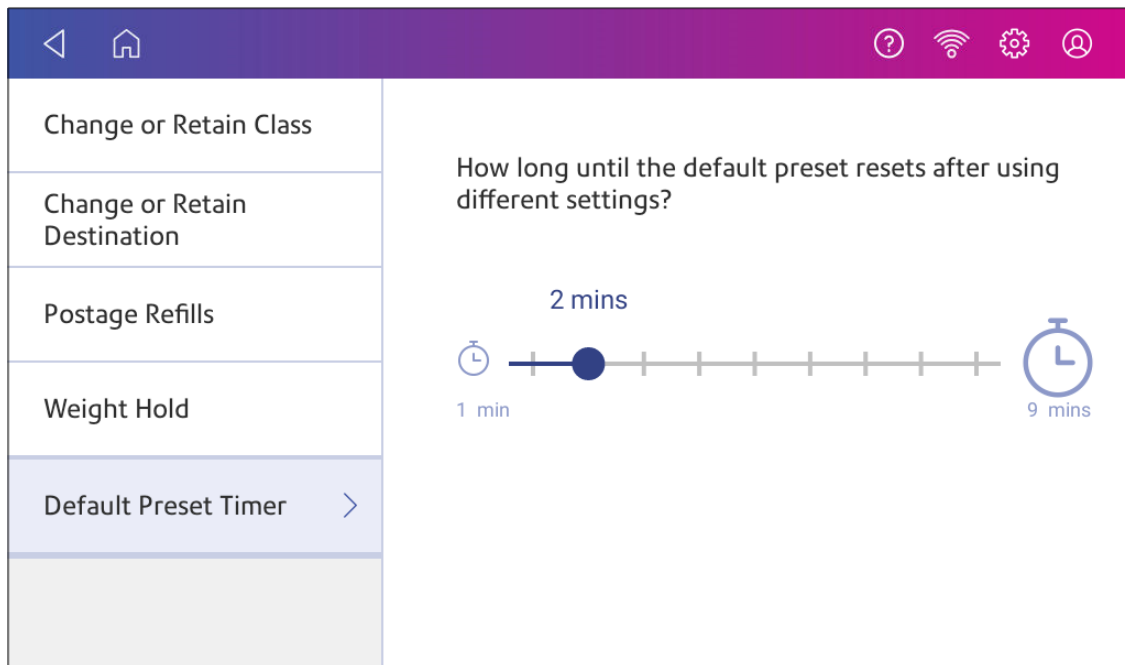

6. To save the value and exit the screen, tap the **back arrow** or **Home**.

8 - View and Print Reports

In this section

Viewing a receipt when refilling postage.....	159
Viewing the total spent on printing postage.....	159
Viewing the refill history for printing postage.....	159
Printing a funds report.....	159
Running account reports.....	160
Emailing an account report.....	161
Setting the report period for an account.....	162
Setting the account report preferences.....	163
Creating a shipping report.....	164
Creating a USPS shipping label refund report.....	164

Viewing a receipt when refilling postage

Use the Print Refill Receipt app to view receipts of previous postage refills.

- Tap **SendPro Apps** on the Home screen, then tap **Print Refill Receipt**.

Viewing the total spent on printing postage

View the total amount you have spent on postage and the total number of pieces printed.

1. Tap **Settings**.



2. Scroll down to the Envelope Printer Settings section.
3. Tap **Postage Refills**.
4. Tap **Advanced** to view the total amount of postage spent and the number of pieces printed.

Viewing the refill history for printing postage

View a report showing all your postage refill history.

1. Open the Refill History screen:
 - Tap **SendPro Apps** on the Home screen, then tap **Print Refill Receipt > Refill History**, or
 - Tap the **History & Reports** icon in the application drawer, then tap **Refill History**.
2. Tap on a postage refill to open a Refill Receipt.

Important: At this time, you can only view the report.

Printing a funds report

Print a funds report if you need a report showing the total number of mailpieces sent.

The funds report provides the following information about your device:

- **Used:** The total amount used over the lifetime of the device.
- **Available:** The amount currently available to print.
- **Total Pieces:** The total number of mailpieces run over the lifetime of the device.
- **Control Sum:** The control sum is the total of the amount used and available.
- **Batch Count:** The current Batch Count.
- **Batch Value:** The current Batch Total.
- **PBP Serial No:** The serial number of the device.
- The date and time the report was printed.

To print a funds report:

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap the piece count in the upper right.
3. Tap **Print Report**.
4. Tap **SendPro C Envelope Printer**.
5. Place the envelope on the feed deck. Depending on the SendPro C model you have, feed the envelope manually or tap **Start** to feed the envelope.
6. Tap the **back arrow** to return to the Envelope Printing or Print on Envelopes app.

Running account reports

Run account reports to show how you spent your postage for a specific account or for all accounts over various time periods.

1. Tap **SendPro Apps** on the Home screen.
2. Tap **Manage Accounts**.
3. Tap **Reports**.
4. If this is the first time you are running a report:
 - a. Tap **Report Period** and set the time range for your reports.
 - b. Tap **Preferences** and set how to you wish to identify the accounts.
5. Set the report period.
6. Tap **View & print reports**.
7. Tap to select a report.
8. Tap **Next**.

9. Choose what to do with the report:
 - To view the report on the screen, tap **View Report**.
 - Tap **Actions** to save the report under a new name, delete, print, or email the report. In order to print a report, you need an optional report printer.

Emailing an account report

Email an account report to keep a record of how much departments or clients have spent on their postage over specific time periods.

1. Tap **SendPro Apps** on the Home screen.
2. Tap **Manage Accounts**.
3. Tap **Reports**.
4. Tap **View & print reports**.
5. Tap the report to select it.
6. Tap **Next**.
7. Tap **Actions** or **View Reports** at the bottom of the screen.
8. Tap **Email Report**.

The screenshot displays the 'View Report' screen. At the top, there is a purple header bar with navigation icons. Below the header, the 'Period:' section shows 'Current Period' with 'Start: 01-05-22' and 'End: 31-05-22'. The 'Meter(PSD):' section shows the ID '1H20-8000018'. At the bottom, there is a white bar with several buttons: 'Save as', 'Save', 'Delete report', 'Print report', and 'Email Report' (highlighted with a red box). The 'Actions' button is also visible at the bottom left.

9. Tap in the **Please enter the recipient mail address** box and enter the recipient's email address. The email address you enter will remain until you turn off then turn on the device.

* Please enter the recipient mail address:

* Attach report as file type:

☐ .xlsx

☐ .csv

☐ .pdf

* Required fields

Cancel Send

10. Tap the file type you wish to send: **xlsx** (Excel), **csv** (comma-separated values), **pdf** (Portable Data Format).
11. Tap **Send**. The report appears from no-reply@pb.com.

Setting the report period for an account

Set the reporting period of an account report by setting its start and end dates.

1. Tap **SendPro Apps** on the Home screen.
2. Tap **Manage Accounts**.
3. Tap **Reports**.
4. Tap **Report period**.

5. Select the calendar image next to the **Start date of fiscal year** field.

Report period defaults

Start date of fiscal year:
01.01.2023

End date of fiscal year:
31.12.2023

Default reporting period:
Calendar month

Calendar month periods for 2023:

Month 1	01.01.2023 to 31.01.2023
Month 2	01.02.2023 to 28.02.2023
Month 3	01.03.2023 to 31.03.2023
Month 4	01.04.2023 to 30.04.2023
Month 5	01.05.2023 to 31.05.2023

< Previous year Next year >

OK

- a. Select a date on the calendar.
 - b. Select **SET**.

The End date of the fiscal year is set based on the start date you enter. You cannot enter this date manually.
6. Select the **Default reporting period** field.
 - a. Select a report period type.
 - b. Select **OK**.
7. (Optional) Tap **Previous year** and **Next year** to view the reporting periods for the previous and next year. Tap **up** and **down** to scroll through the list of reporting periods for the current year.
8. Tap **OK** to return to the Reports screen.

Setting the account report preferences

Set the account report preferences to select the account level you wish to report on (Account, Sub account or Sub sub account).

You can also choose how you want to identify accounts: by Name or by Code.

1. Tap **SendPro Apps** on the Home screen.
2. Tap **Manage Accounts**.
3. Tap **Reports**.
4. Tap **Preferences**.
5. Tap to select how you want to identify accounts: by **Name** or by **Code**.
6. Select the account level you wish to report on: **Account**, **Sub account** or **Sub sub account**.
7. Tap **OK** to return to the Reports screen.

Creating a shipping report

You can view and print a report of the shipping labels you have created on your device using the Shipping History app. This app provides a summary of your past shipping labels with the Date, Recipient, Carrier, Tracking Number (USPS), Status, and Label Amount.


The maximum number of shipping labels you can view for any date range is 200.

1. Tap **SendPro Apps** on the Home screen, then tap **Shipping History**.
2. By default, all the shipping labels you have created appear. Tap **All Shipment** to filter by shipment status. Then, select a status. For example, if you want a report of all delivered packages, select **Delivered**.
3. To view the details of a specific shipping label, tap the shipment.
4. (Optional) To create an email report of all the shipments:
 - a. Tap **Create Report**.
 - b. Enter the email address. Tap the green check mark to confirm.
 - c. Tap **Email Report**.
 - d. You will receive an email with an attached .csv transactions history file.

Creating a USPS shipping label refund report

You can view and print all the USPS shipping label refunds you have requested on your device.

1. Tap **SendPro Apps** on the Home screen, then tap **Shipping History**.
2. Tap **All Shipments** and select **USPS Label Refund History**.

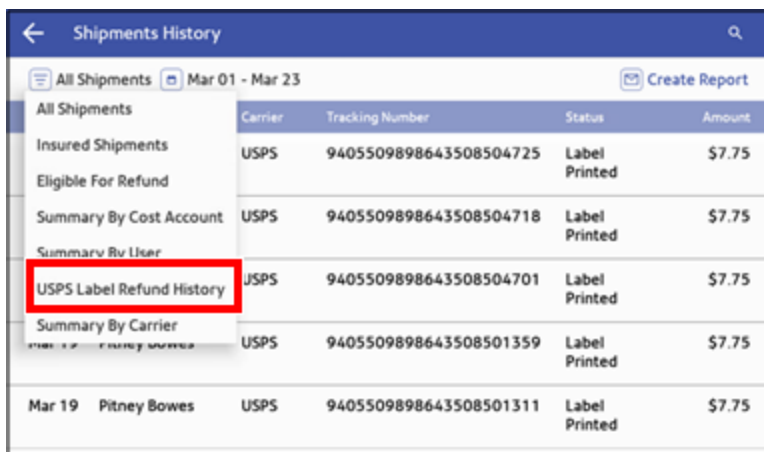

Shipments History				
All Shipments		Mar 01 - Mar 23		Create Report
	Carrier	Tracking Number	Status	Amount
Insured Shipments	USPS	9405509898643508504725	Label Printed	\$7.75
Eligible For Refund				
Summary By Cost Account	USPS	9405509898643508504718	Label Printed	\$7.75
Summary By User				
USPS Label Refund History	USPS	9405509898643508504701	Label Printed	\$7.75
Summary By Carrier	USPS	9405509898643508501359	Label Printed	\$7.75
Summary By Carrier	USPS	9405509898643508501359	Label Printed	\$7.75
Mar 19 Pitney Bowes	USPS	9405509898643508501311	Label Printed	\$7.75

3. All the refunded USPS labels appear on the screen. To view the details of a specific shipping label refund, tap the shipment.
4. (Optional) To create an email report of all the USPS shipping label refunds:
 - a. Tap **Create Report**.
 - b. Enter the email address. Tap the green check mark to confirm.
 - c. Tap **Email Report**.
 - d. You will receive an email with an attached .csv transactions history file.

9 - Maintenance

In this section

Checking the postage print quality.....	167
Printing a test pattern.....	167
Checking the ink level.....	168
Replacing the ink cartridge.....	169
Changing the ink waste pad.....	171
Cleaning the printhead.....	173
Installing the printhead.....	178
Cleaning the moistener brush and wick assembly.....	183
Filling the moistener tank.....	191
Feeding envelopes.....	193
Moving the SendPro C Auto.....	196

Checking the postage print quality

You can make a test print to check the quality of the postage printed on an envelope or tape strip.

1. Tap **Envelope Printing or Print on Envelopes** on the Home screen.
2. Tap **Print Mode**.
3. Scroll down and tap **Test Print**.
4. Tap **Apply**.
5. Feed an envelope or tape strip through the device.
6. Check the print quality.



Printing a test pattern


Print a test pattern to see if the printhead is working properly or if you have enough ink in the cartridge.

1. Tap **Settings**.




2. Scroll down and tap **Envelope Printer Maintenance**.
3. Tap **Print Test Pattern**.
4. Insert the envelope into the device when the message "Print a Test Pattern?" appears.

5. Examine the pattern printed on the envelope:
 - Tap **Done** if the lines are unbroken and match the "Good" test pattern shown on the display.
 - Tap **Clean Print Nozzle** if the test pattern has missing or incomplete lines
 - Once the cleaning operation completes, you must print another test pattern.
 - If this new pattern still has broken or missing lines, you may need to replace the ink cartridge or clean or replace the printhead.
 - If you see no improvement in print quality, do not repeat the cleaning, as cleaning the print nozzles consumes ink.

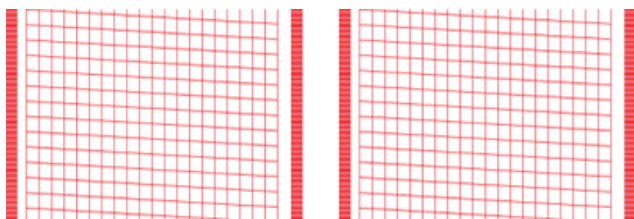

Good Test Pattern

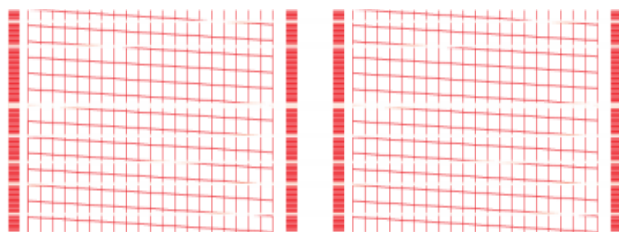

Bad Test Pattern

Checking the ink level

Check the ink level to ensure you have enough ink in your device.

1. Tap **Settings**.



2. Scroll down and tap **Envelope Printer Maintenance**.

3. View the level of remaining ink.



4. Tap **Done** to exit the screen.

Replacing the ink cartridge


Replace the ink cartridge when the low ink warning appears. This ensures your device is in optimal working condition.

1. Tap **Settings**.




2. Scroll down and tap **Envelope Printer Maintenance**.
3. Tap **Install Ink**.
4. Lift the top cover. The ink cartridge moves to the front position.


5. Remove the ink cartridge, as shown on the label next to the cartridge holder.

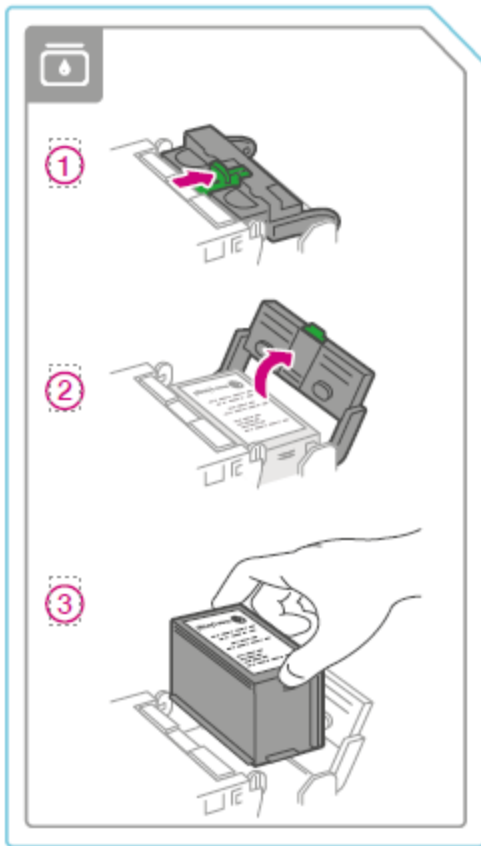

6. Insert the new ink cartridge, then close the ink cartridge guard.

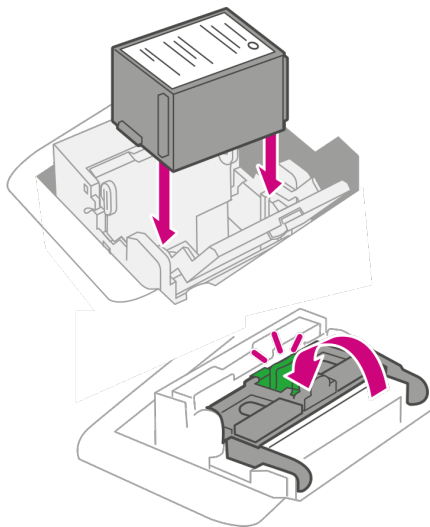

7. Close the top cover.

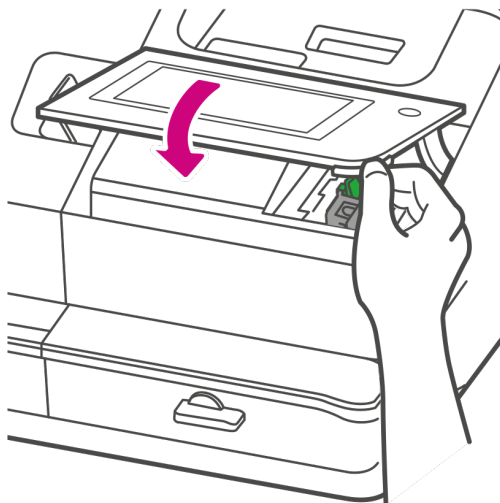


8. The cartridge repositions itself and the Envelope Printer Maintenance screen appears.
9. Print a test pattern to ensure that your ink cartridge installs properly.

Changing the ink waste pad

Your device catches excess ink in a waste tank with a disposable pad. You will receive the following message at the top of the Envelope Printing or Print on Envelopes screen approximately 30 days before the ink waste tank becomes full:

"Ink waste pad is almost full. If you print often, replace it soon to avoid ink overflow."

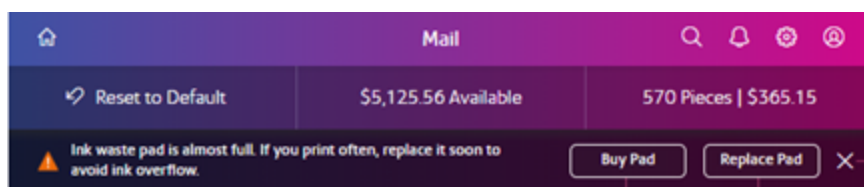

If the message is showing on the screen follow these steps:

To purchase replacement waste pad

Tap **Buy Pad**. The Supplies app appears where you can order a new pad right from the device.

To replace the pad

Before you replace the pad:

- Make sure you have a replacement waste pad available and you have the instruction sheet that comes with the pad. The sheet contains the reset code you will need in order to complete the replacement process.



1. Tap **Replace Pad**.
2. The instructions for replacing the existing pad display on the screen.
3. Follow the steps in each screen. To advance from one screen to the next, swipe to the left on the screen.
4. After you slide the waste tray with the new pad back in place, tap **Reset Ink Waste Counter** to continue.
5. Use the keypad to enter the reset code.
6. After you enter the code, the message "Your Ink Waste Pad is Ready to Use" displays. If you do not see this message, or if you still get a message that the waste tank is full, restart the device. If that fails to clear the message, contact Pitney Bowes support.

If the message no longer appears on the screen follow these steps:

If you need a replacement waste pad, use the Supplies app to purchase the pad.


To replace the pad:

1. Tap **Settings**.



2. Scroll down and tap **Envelope Printer Maintenance**.

3. Tap on **Install Ink Waste Pad**.

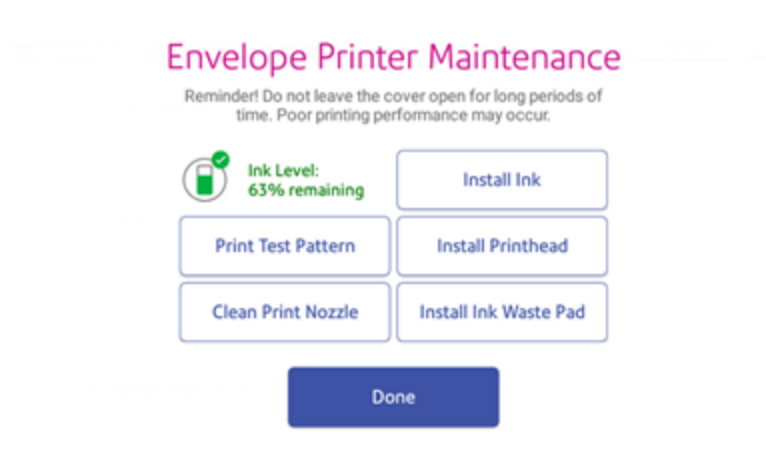

4. The instructions for replacing the existing pad display on the screen.
5. Follow the steps in each screen. To advance from one screen to the next, swipe to the left on the screen.
6. After you slide the waste tray with the new pad back in place, tap **Reset Ink Waste Counter** to continue.
7. Use the keypad to enter the reset code.
8. After you enter the code, the message "Your Ink Waste Pad is Ready to Use" displays. If you do not see this message, or if you still get a message that the waste tank is full, restart the device. If that fails to clear the message, contact Pitney Bowes support.

Cleaning the printhead


If you clean the print nozzle and you still get a bad test print pattern, try cleaning the printhead.

1. Tap **Settings**.




2. Scroll down and tap **Envelope Printer Maintenance**.
3. Tap **Install Printhead**.
4. Lift the cover. The ink cartridge moves to the front position.


5. Flip the ink cartridge cover open.

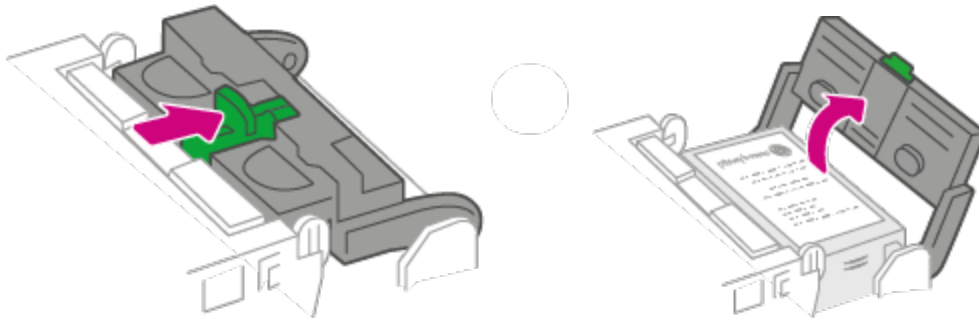


6. Remove the ink cartridge.

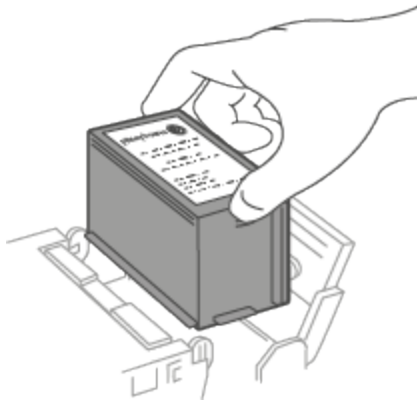

7. Squeeze the tabs on either side of the printhead.

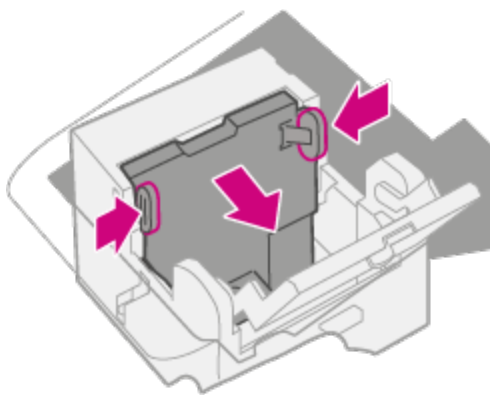


8. While squeezing, lift and tilt to the printhead to the right. The printhead should come up out of the device.

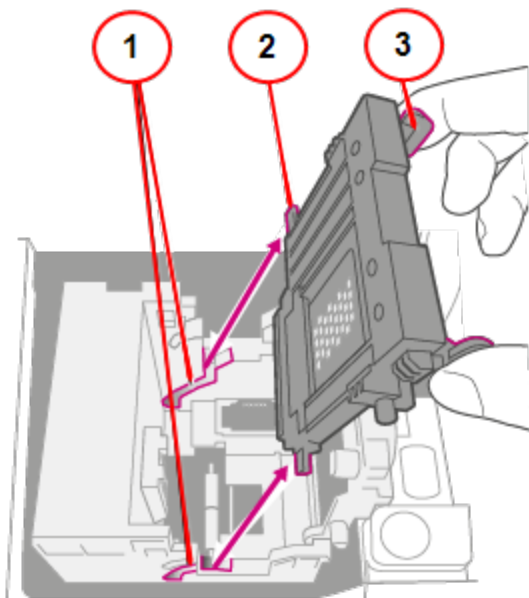


1. Grooves.
2. Peg.
3. Tab.

9. Clean off the printhead by wiping the surface of the printhead with a dry, lint-free cloth or a foam swab.

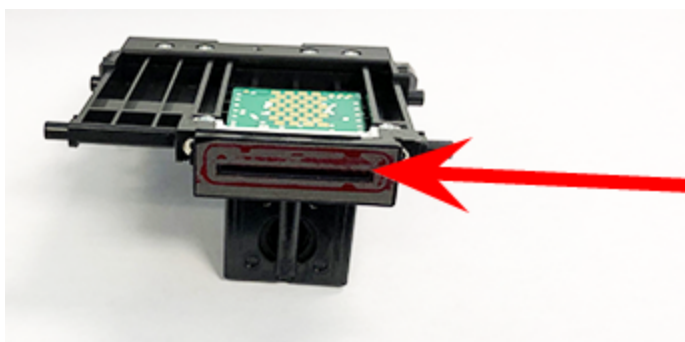


10. Squeeze the tabs and slide the printhead pegs into the lower set of grooves.

Warning: If you do not seat the printhead correctly it can damage the device.

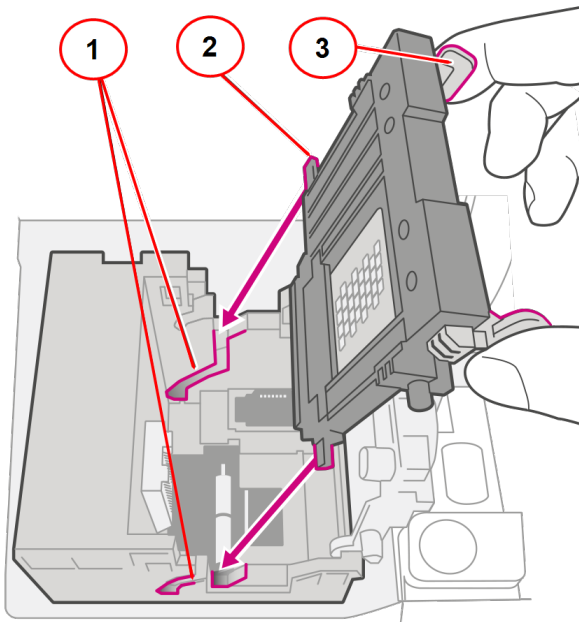


1. Grooves.
2. Peg.
3. Tab.


11. Keep squeezing the tabs and push the printhead flush against the wall. The tabs snap outward when placed correctly.

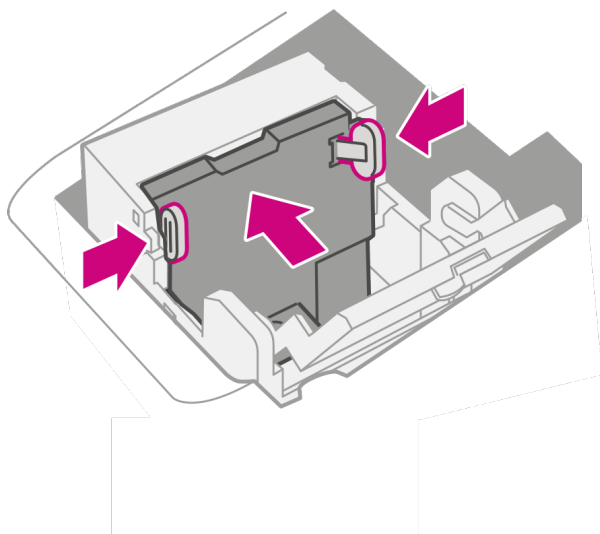

12. Install the ink cartridge and close the guard.

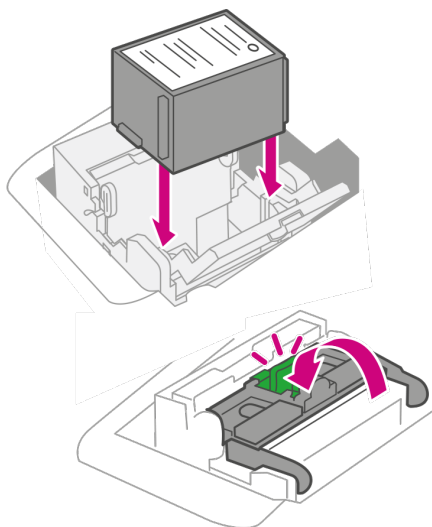

13. Close the cover. The ink cartridge moves back to the original position.

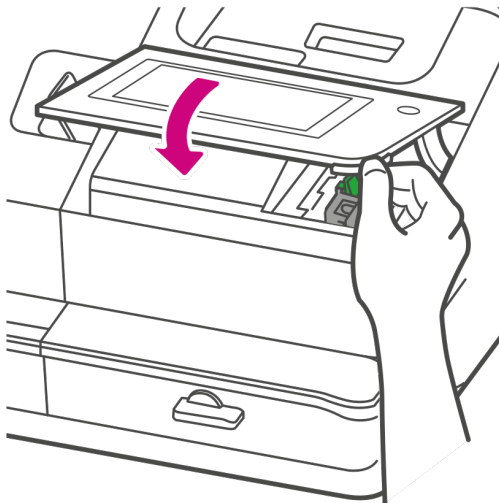

14. Tap **Done**.
15. Print a print test pattern to be sure that your printhead is functioning properly.
16. If the test pattern looks good, tap **Done**.

Installing the printhead


You may need to install a new printhead when the existing printhead is producing poor print quality.

1. Tap **Settings**.




2. Scroll down and tap **Envelope Printer Maintenance**.
3. Tap **Install Printhead**.
4. Lift the cover. The ink cartridge moves to the front position.


5. Flip the ink cartridge cover open.

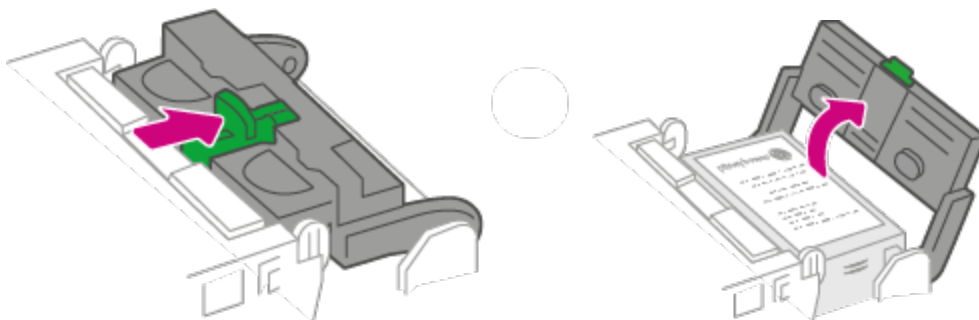


6. Remove the ink cartridge.

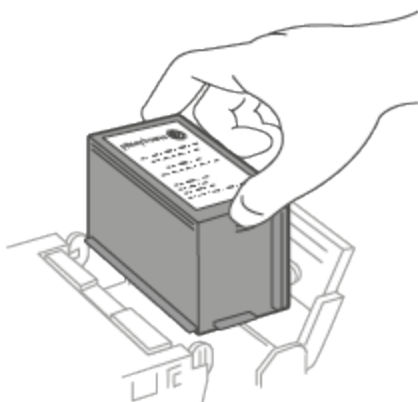

7. Squeeze the two gray tabs on either side of the printhead.

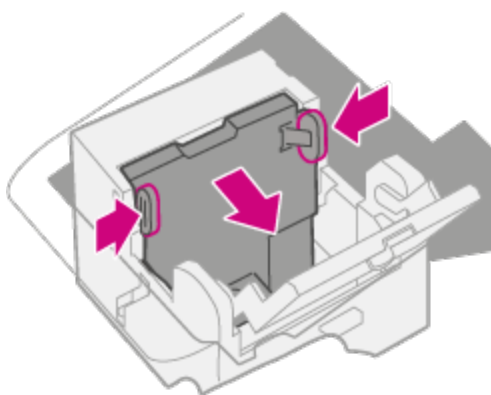


8. While squeezing, lift and tilt the printhead to the right. The printhead should come up out of the device.

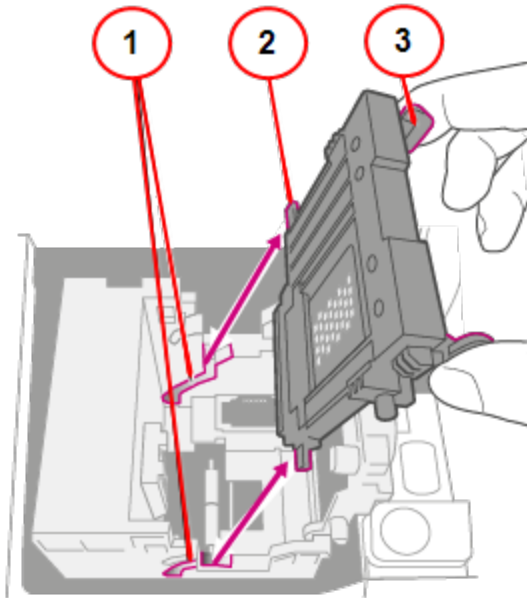


1. Grooves.
2. Peg.
3. Tab.

9. Unwrap the new printhead and remove the protective strip.

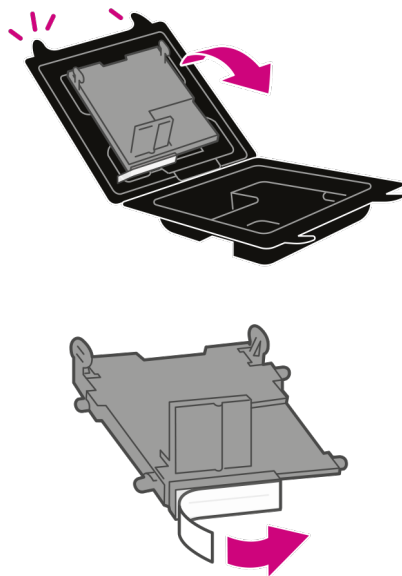


10. Squeeze the tabs and slide the printhead pegs into the lower set of grooves.

Warning: If you do not seat the printhead correctly it can damage the device.

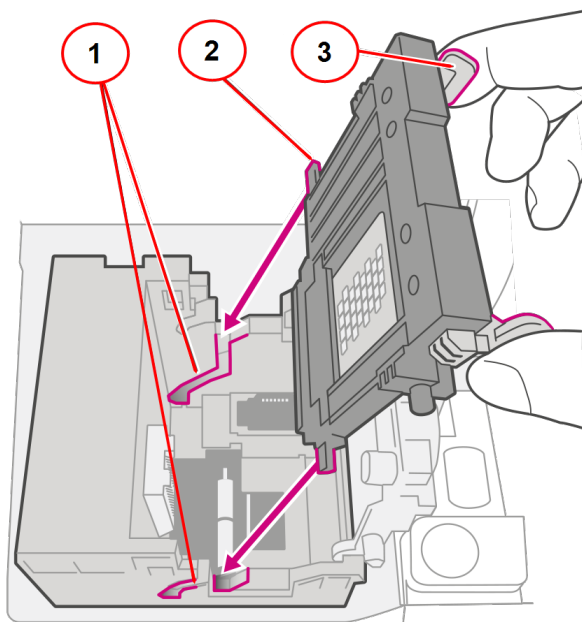


1. Grooves.
2. Peg.
3. Tab.


11. Keep squeezing the tabs and push the printhead flush against the wall. Tabs will snap outward when placed correctly.

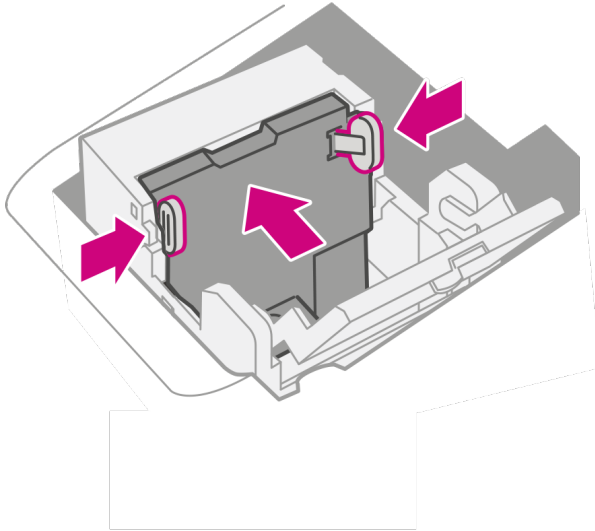

12. Install the ink cartridge and close the guard.

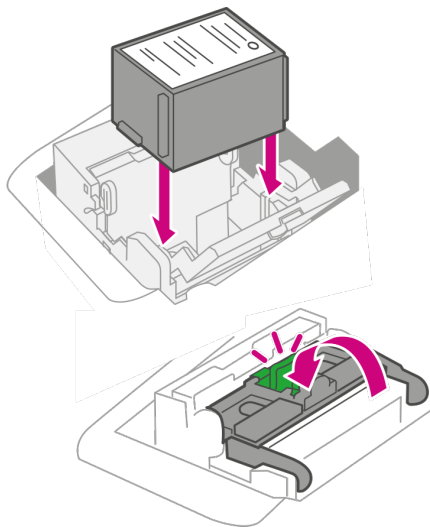

13. Close the cover. The ink cartridge moves back to the original position.

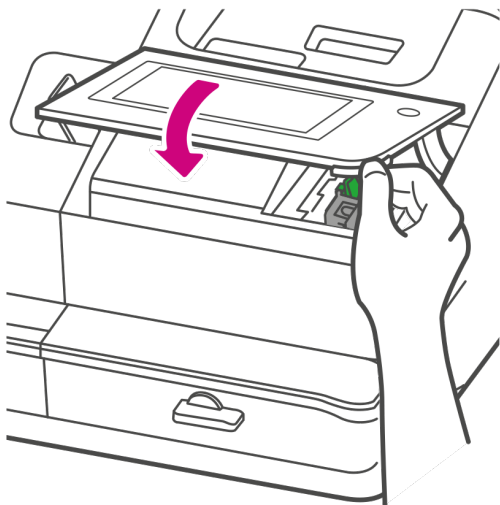


14. Tap **Done**.
15. Print a print test pattern to be sure that your printhead is working properly.


Cleaning the moistener brush and wick assembly

If the moistener tank is full and your envelopes are not sealing properly, clean the moistener brush and wick.


1. Open the feeder cover.

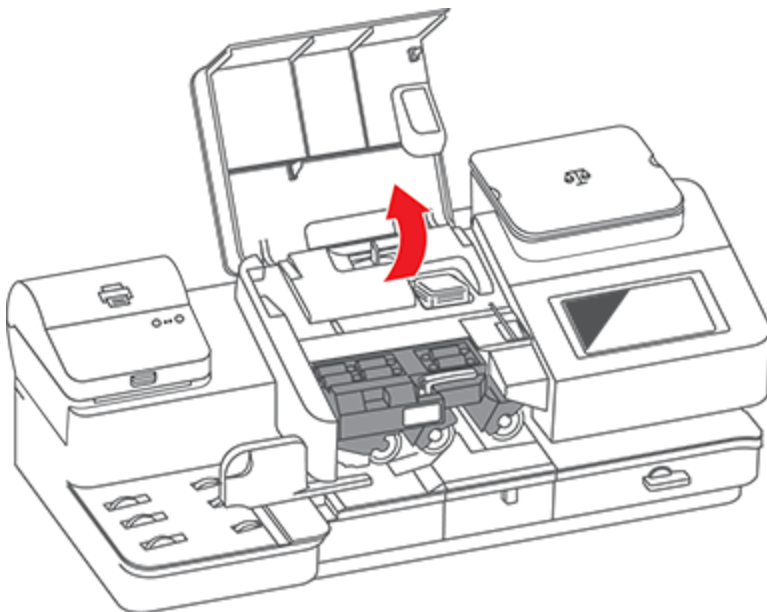


2. Remove the moistener bottle from the device.

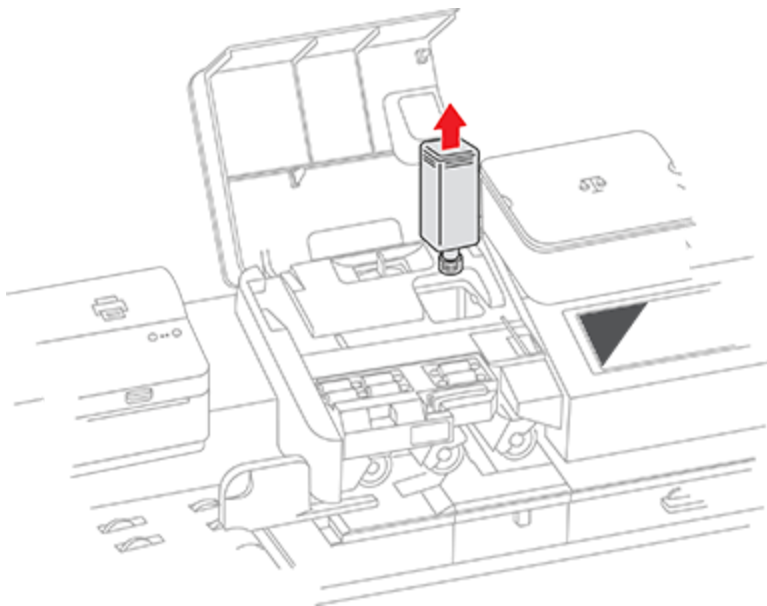


3. Grasp the moistener brush assembly and depress the moistener release button.

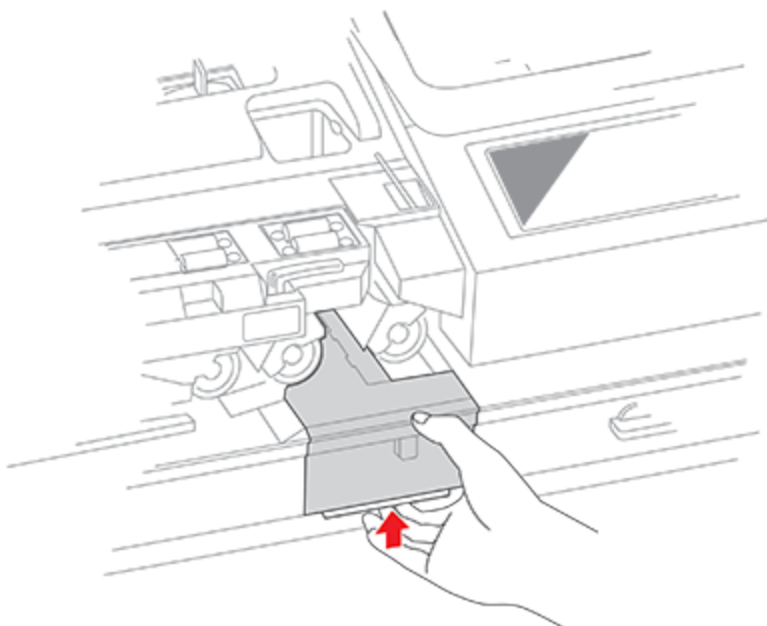


The release button is located on the underside of the moistener assembly.

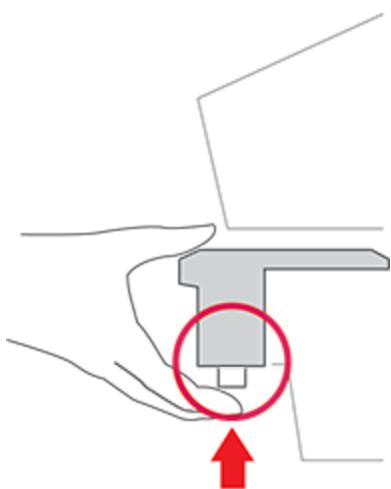


4. While continuing to press the release button, slide the moistener brush assembly straight out toward you.

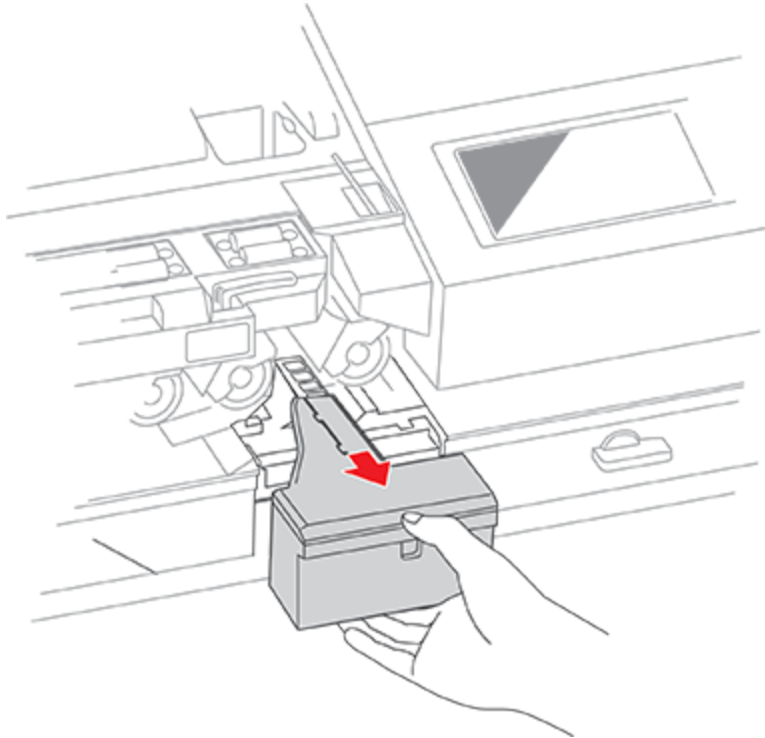


5. Slowly and carefully pull the moistener tank (located under the moistener bottle) out toward you. This may contain EZ-Seal solution.

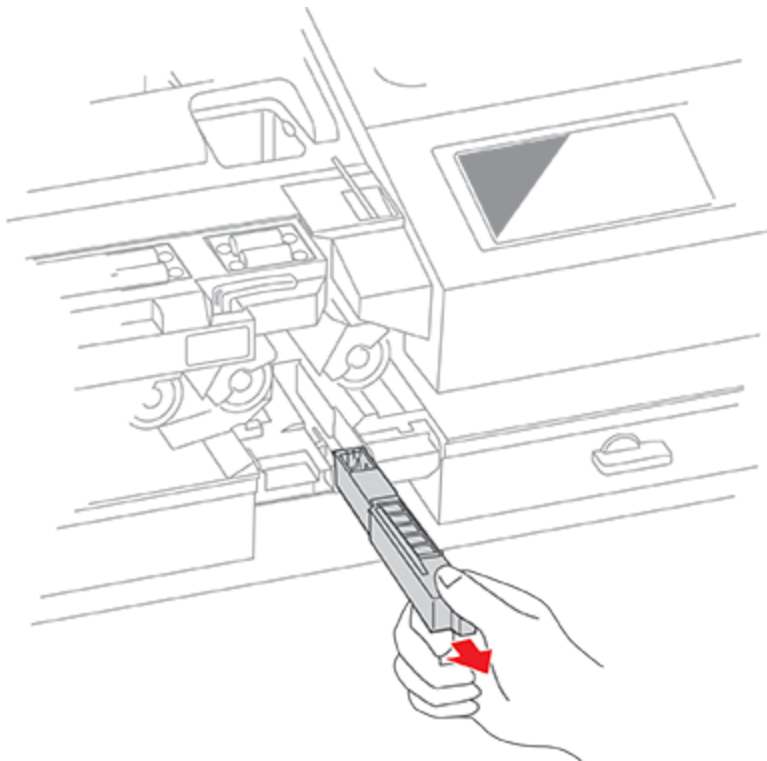


6. Separate the shield from the wick. Clean the wick in plain water and rinse thoroughly. Blot excess water from the wick.

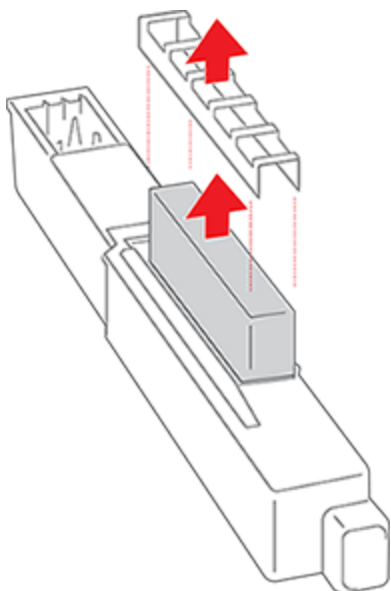


7. Replace the wick and shield.

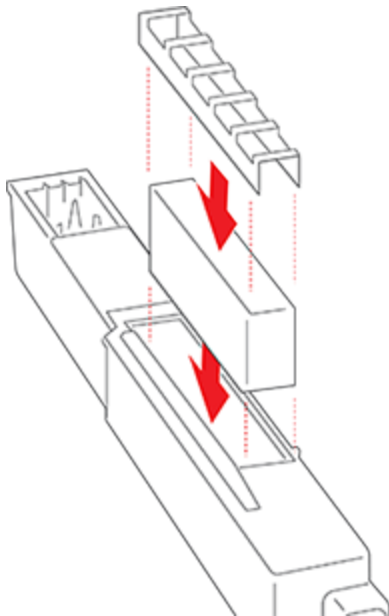

8. Remove the moistener brush by sliding it out of the moistener brush assembly.

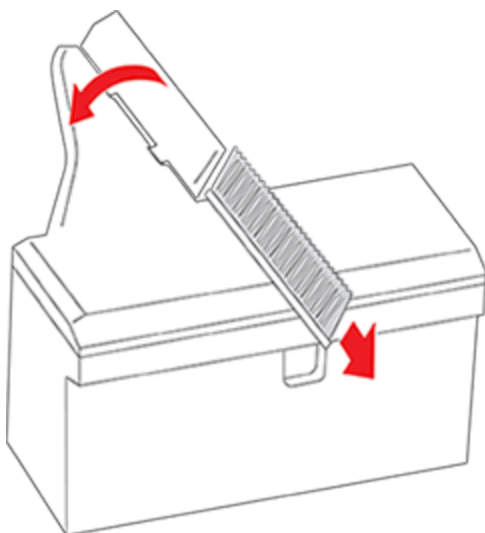


You may need to exert some pressure to remove the brush.

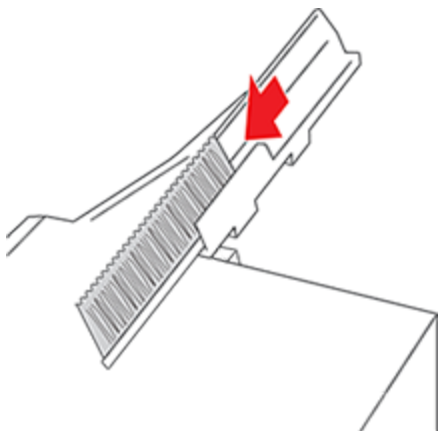


9. Clean the brush by running it under plain water. Blot the excess water from the brush after rinsing it. Replace the brush if you cannot clean it thoroughly.


10. Slide the moistener tank back into the device, followed by the moistener brush assembly.

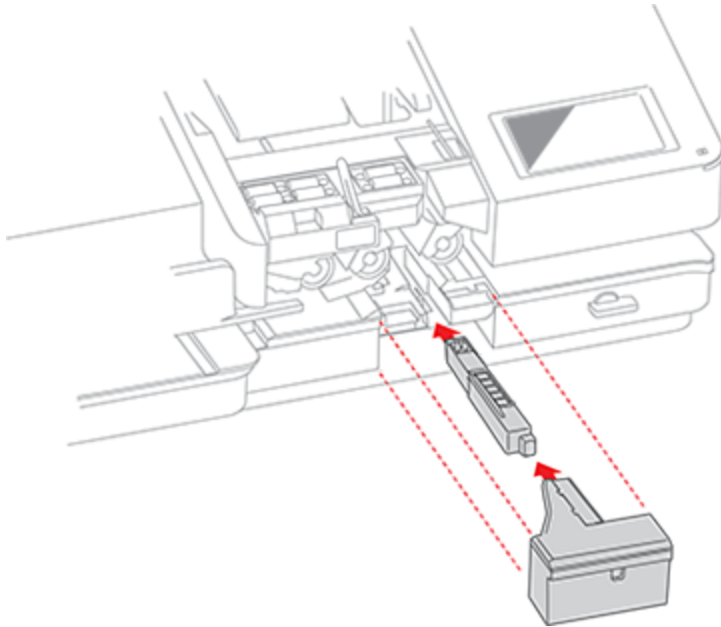

You should hear the moistener brush assembly click into place.

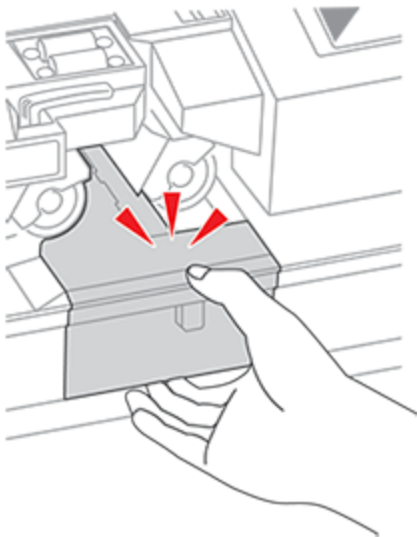

11. Replace the moistener bottle.

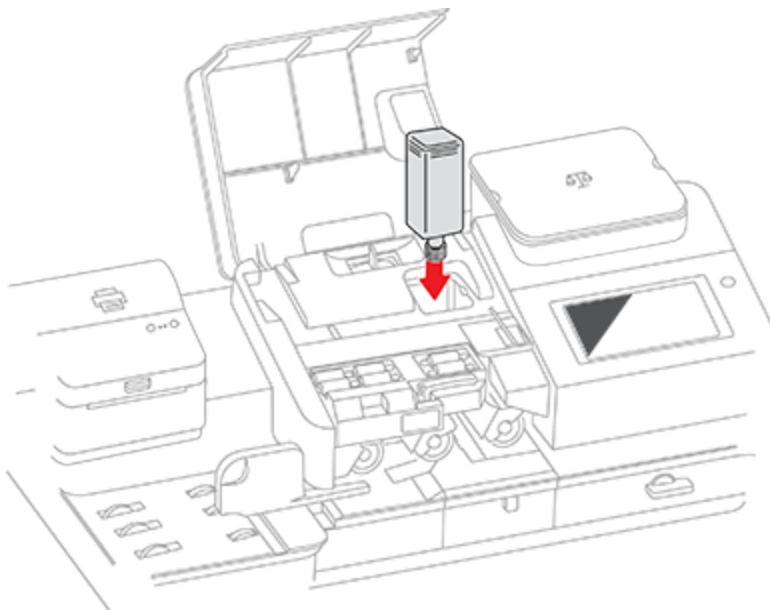

12. Close the feeder cover.


Filling the moistener tank

Your device will need refills of E-Z Seal® in order to seal envelopes. Follow these steps to fill the moistener tank.

1. Check the level of sealing solution in the moistener tank by checking the sight window on the front of the feeder deck.



2. Open the feeder access cover to access the moistener bottle.

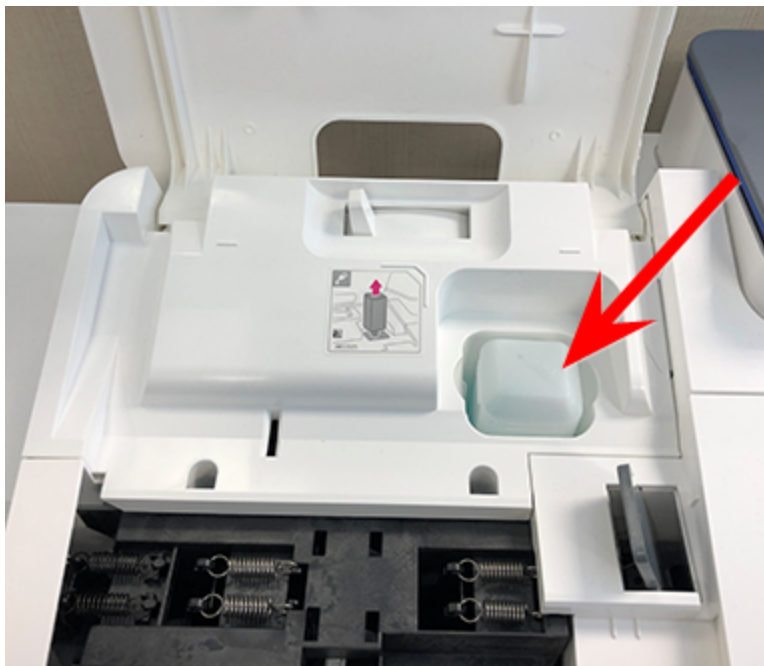

3. Remove the moistener bottle and place it with the cap up on a flat surface.

4. Unscrew the moistener bottle cap and fill it with Pitney Bowes E-Z Seal®. Do not overfill the moistener bottle.



5. Screw the cap back on and place the bottle back in its original site (upside down in the device).
6. Close the feeder access cover.
7. If the tank is empty, allow 30 minutes for the moistener brush and wick to get completely wet.

Feeding envelopes

Your SendPro C Auto can automatically feed a stack of envelopes.

Before you begin

- All envelopes in a single stack must be the same width and thickness.
- All envelopes in a single stack must be sealed or unsealed. Mixing sealed and unsealed envelopes in a stack will cause a jam in the moistener.

Insert the envelopes into the feeder


1. Slant the stack of envelopes as shown so the bottom envelope feeds first.
2. Place the stack of mail on the feed deck. Place the envelopes with the flap side facing down and the top edge against the rear wall.



3. Slide the side guide up to the mail stack. Leave about 1/8" space (about the thickness of 2 quarters) between the stack and the side guide so the envelopes do not drag against the guide.



4. Push the stack into the feeder until you feel resistance. The image shows how far into the feeder you need to position the stack. The side guide is pulled away to show the edge of the envelopes.

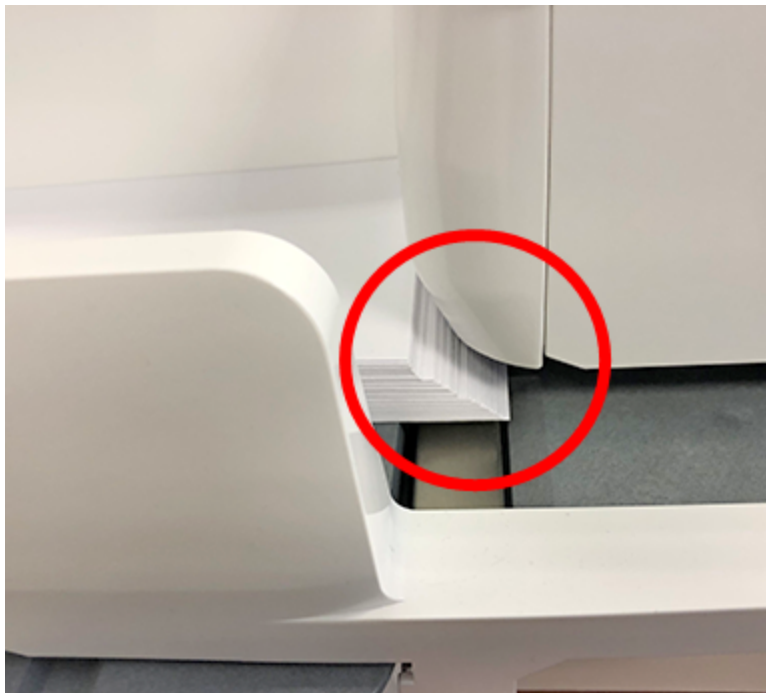

5. Set the desired moistener setting for your envelopes. In this photo "no seal" is selected.



6. Tap **Start** on the Envelope Printing or Print on Envelopes app. The device automatically feeds the envelopes and prints the postage.
 - If you are using a stacker, extend the stacker tray so that the envelopes exit the feeder completely.
 - If you are moistening the envelope flaps, press down on the envelopes after printing to ensure the flaps are securely glued closed.

Moving the SendPro C Auto

Move your device safely, whether you are moving it across the room or to a new facility.

1. If you have a scale, remove it from the device.
2. Remove the moistener assembly. Once you have removed and cleaned the assembly, place it in a zip-top bag to prevent any remaining fluid from leaking.
3. Remove the ink cartridge. Once you get the ink cartridge out, place it in a zip-top bag.
4. Close the top cover.
5. Remove all USB cables and optional peripherals such as printers or scanners. Pack them with the device.
6. Unplug the power cord and pack it with the device.
7. Once in the new location, re-install all USB cables and peripherals.
8. Plug the power cord into the device and power outlet.
9. Re-install the ink cartridge.
10. Re-install the moistener assembly.

If you're moving to a new ZIP Code the device will need to be updated.

10 - Supplies

In this section

Ordering supplies.....	198
------------------------	-----

Ordering supplies

Visit our [supplies website](#) to order supplies for your device.

11 - Device Information

In this section

USPS requirements.....	200
Key in Postage.....	200
Sections of the meter impression.....	200
Finding the SendPro application software version.....	201
Postal Security Device.....	202
Parts of the SendPro C Auto.....	202
Connections on the back.....	204
Specifications.....	204
Material specifications.....	208

USPS requirements

Since your postage device (Postal Security Device) is licensed by the USPS, you must follow a few basic requirements.


- Mail must have the correct date and postage amount in the postage .
- Metered mail must bear the ZIP Code™ location of the post office where the device is registered.
- If you move to another ZIP Code™ location, you must update the ZIP Code. Visit [Pitney Bowes support](#).
- The USPS requires a postal inspection of your device every 120 days. Each time you refill your device through the network, the PB Postage device Payment System computer automatically performs a postal inspection.
- The postage tape you use must meet USPS specifications.

Key in Postage

The USPS requires your postage to be calculated using a scale. This ensures that your mail always has the correct postage, and that you are not overpaying, or having mail returned for insufficient postage. Key in Postage is not available on any of the SendPro C devices.

Sections of the meter impression

The meter impression contains elements that identify the mailer and the type of mail.

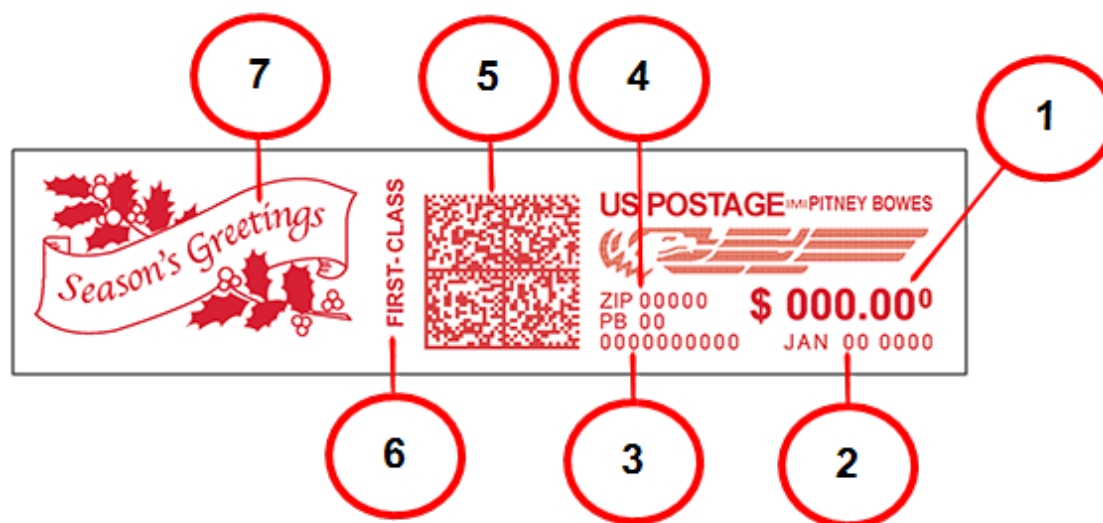

1. Postage amount
2. Date
3. Meter serial number
4. ZIP Code™ of the machine
5. Datamatrix barcode - contains tracking information
6. Optional postal inscription and class.
7. Optional graphic or Postal Endorsement (Postal Endorsements are official USPS instructions that print on the mailpiece).

Finding the SendPro application software version


SendPro is the software that runs many features on your device. If you need to check which version you have, follow these steps.

1. Tap **Settings**.



2. Scroll to Advanced Device Options.
3. Tap **About this Device**.

4. Scroll down to the Applications section and locate the **SendPro™** setting.

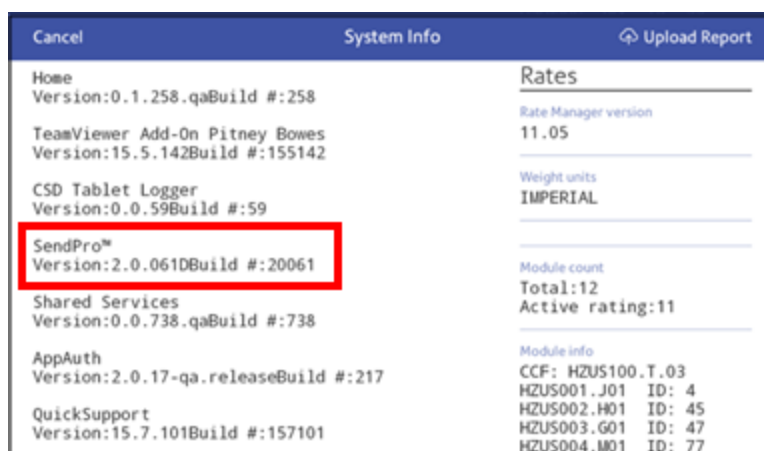

This is the most current software version.

5. Tap **Cancel** to exit the screen.

Postal Security Device

The postage meter on your mailing system is a Postal Security Device (PSD) that secures your postage funds. It includes the latest technology approved by USPS. This technology eliminates the need for USPS to perform physical inspections, thereby making your device easier and more convenient for you to use.

Parts of the SendPro C Auto


Familiarize yourself with the parts of your SendPro C Auto.



1. **Integrated scale** - Weigh envelopes and packages.
2. **Touch Screen Display** - Allows you to enter and set up information on your device.
3. **Postage Printer Cover** - Open to get access to the ink cartridges.
4. **Stacker Tray** - Provides for neat stacking of printed envelopes.
5. **Transport Release Lever** - If a stall occurs on the transport deck, turn this to clear the envelope, post card or tape strip.
6. **Printer Deck** - Envelopes or post cards pass along the printer deck where your device prints the postage.
7. **Moistener** - Applies sealing fluid to the envelope flap. You can seal envelopes or leave them unsealed, depending on the position of the Seal/No Seal lever.
8. **Feed Deck** - Supports your envelope, post card or tape sheet as it passes into the feeder.
9. **Side guide** - The moveable guide at the front of the feed deck. It stabilizes envelope position when feeding.
10. **Label Printer** - Prints shipping labels.
11. **Feeder Cover** - Provides access to the moistener bottle and the feeder release lever. You can use this release lever to disengage the feeder rollers from the feeder deck if you need to clear a stoppage.
12. **Seal or No Seal Lever** - Allows you to turn envelope sealing on and off.
13. **Tape Feeder** - Stores and feeds tape strips for postage printing.

Connections on the back

Familiarize yourself with the ports on the back of your device.

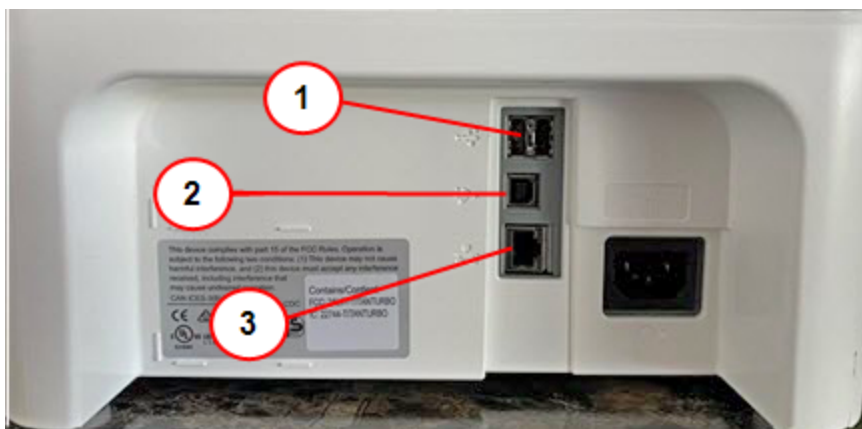

1. **USB port type A host** - Connect a Barcode scanner, external printer or external scale to these ports.
2. **USB port, type B host** - Service personnel use only.
3. **RJ45** - Use for a wired network connection.

Specifications

Review the specifications of your SendPro C Auto including the throughput, ink cartridge yield, and other component details.

Power requirements

100-240 VAC, 50/60 Hz, 2.0 A

Operating Temperature

55°F to 95°F

Sound Level

Less than or equal to 70 dBA re 20 micro Pascal in accordance with ISO 7779, ISO 3744, or ISO 3741.

Dimensions

As shown (cover closed, drop stacker retracted, side guide retracted):



1. Length: 41.75 in
2. Width: 19.25 in
3. Height: 12.5 in

With side guide fully extended:

- 41.75 in L x 24 in W x 12.5 in H

With feeder cover in up position:

- 41.75 in L x 19.25 in W x 22 in H

With drop stacker fully extended:

- 48.5 in L x 19.25 in W x 12.5 in H

Weights

- Weight without scale: 37 lbs
- MP 81 Scale: 2.91 lbs
- MP 82 Scale: 4.1 lbs
- Drop Stacker: 1.23 lbs

Throughput (Letters Per Minute)

70, 95 or 120 letters per minute, depending on option


Actual throughput varies, depending on the material used, machine condition, use of moistener, etc.

Ink Cartridge Life

8,800 imprints or 6 months, whichever comes first with existing 45 ml cartridge (at 88 pieces/day, 21 working days/month, and at 75 °F)

These values are for device imprints only and do not include envelope ads. Actual ink yields vary with usage, graphics printed, and environmental conditions.

Ports

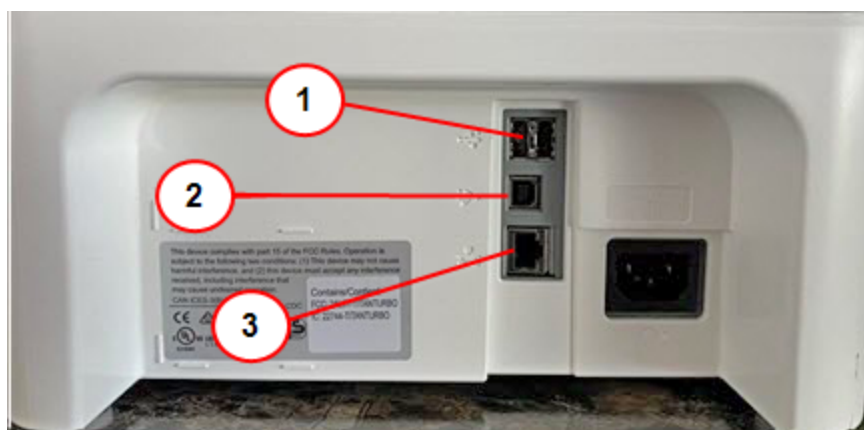

1. **USB port type A host** - Connect a Barcode scanner, external printer or external scale to these ports.

2. **USB port, type B host** - Service personnel use only.
3. **RJ45** - Use for a wired network connection.

Display

7 inch tablet (169 pixels/inch)

Print Resolution

300 H x 600 V DPI

Print Image Area

1 in x 7 in

Tape strips

Self-adhesive, dual tape strip for use on mailpieces that are too large to run in the device. Ideal for adding postage to oversized envelopes, priority mail, and packages.

Postal Inscriptions

Up to 60 inscriptions preloaded on the device.

Graphics

Up to 60 graphic ads on the device.


Connectivity Options

- Wired Ethernet connection.
- Wireless connectivity.
- SendPro Cellular connectivity device.

Material specifications

Review the material specifications including the minimum and maximum envelope sizes, envelope stack height, and tape size details.

Envelope dimensions

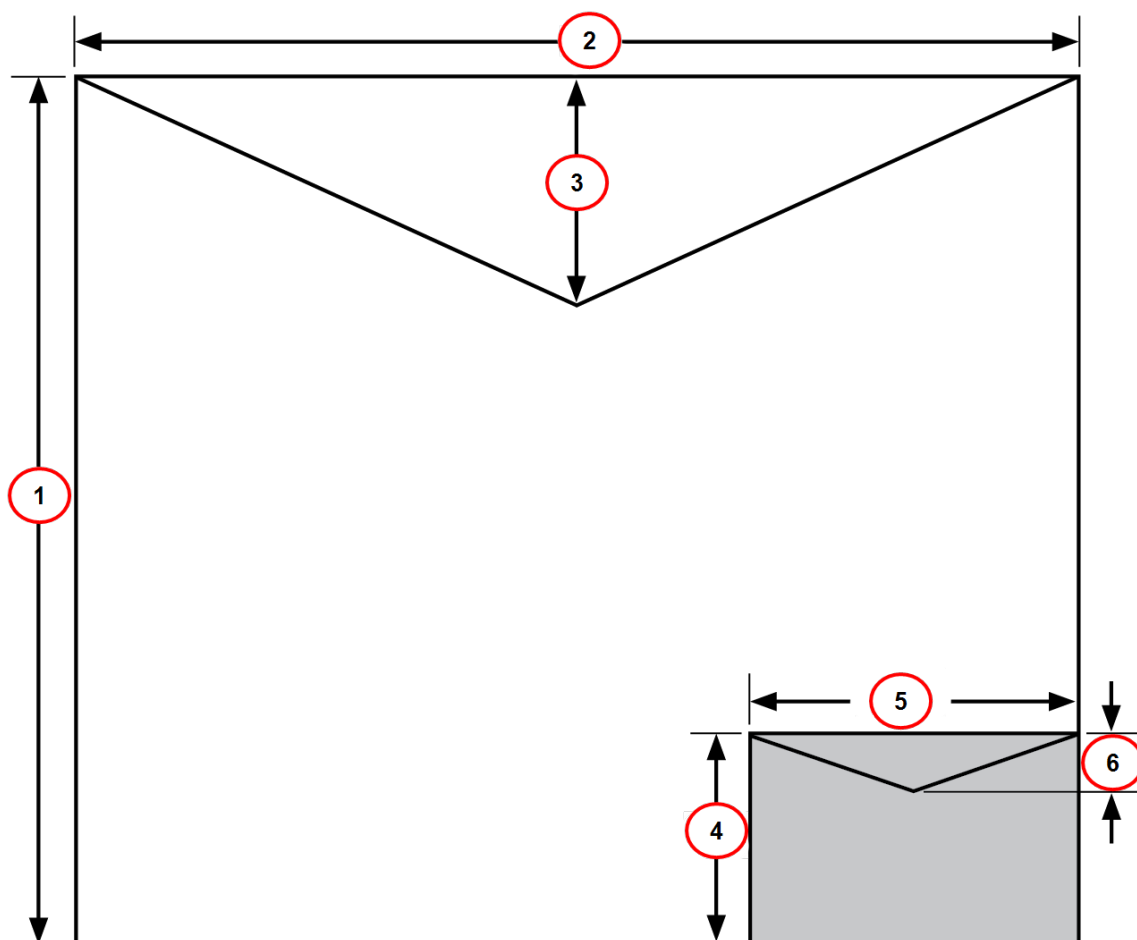

1. Maximum height: 13 in.
2. Maximum width: 15 in.
3. Envelope flap depth, maximum: 3 in
4. Minimum height: 3.5 in
5. Minimum width: 4.75 in
6. Envelope flap depth, minimum: 7/8 in

Envelope Thickness

- Minimum: 0.02 in
- Maximum: 5/16 in

Stack Height for Mail

- 3 in – This is the height of the inner edge of the side guide

Envelope Weight


- Minimum: 0.035 oz
- Maximum: 16 oz

Tape Size

- Minimum: 1.75 x 4 in
- Maximum: 1.76 x 8 in

For a proper seal, the envelope's minimum flap angle must meet the following criteria:

- For envelopes with a flap length from 1-2.36 in, the minimum flap angle is 18 degrees.
- For envelopes with a flap length greater than 2.36 in to the maximum flap length for the particular model, the minimum flap angle is 21 degrees.

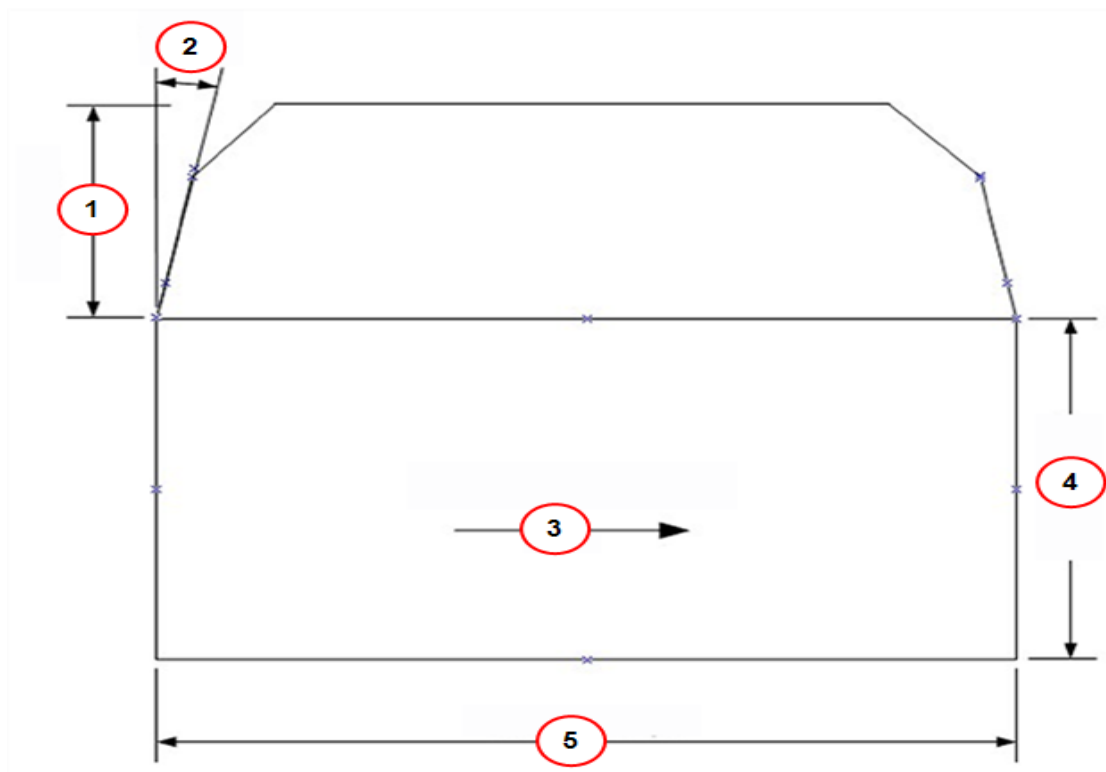

1. Flap length.
2. Minimum flap angle.
3. Mail processing direction.
4. Mailpiece length.
5. Mailpiece width.

12 - Contacting Pitney Bowes

In this section

Contacting Pitney Bowes.....	212
------------------------------	-----


Contacting Pitney Bowes

Before contacting Pitney Bowes Technical Support:

Locate your Product Code Number (PCN) and serial number

In order to find the correct information for your device, you need to know the model number.

To locate the **(1) Product Code Number (PCN)** and the **(2) 7-digit serial number**, check the label on the rear of the device or under the display cover as shown here. Note that the serial number appears blurred here for security reasons.

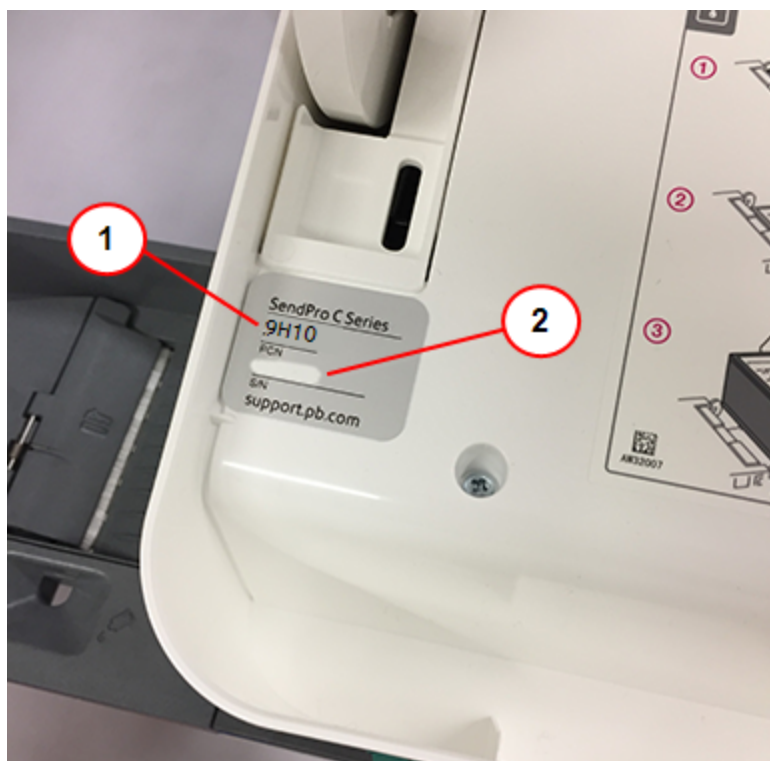

Be sure to have the following information available before contacting Pitney Bowes Technical Support:

Provide a description of the problem

- What is happening and when
- Are there any error messages?

Describe your attempts to fix the problem

- What steps have you already tried to fix the problem?
- If you tried, what happened?

Contact Technical and Account Support

Check the Pitney Bowes support site to make sure you have the latest information about your product. Visit us at: www.pitneybowes.com/support

For Pitney Bowes Supplies

- *SendPro C Lite, SendPro C, SendPro+*
- *SendPro C Auto*

Important: Customer service representatives are available Monday through Friday, 8:00 AM - 8:00 PM EST.

13 - Safety

In this section

Lithium Ion Battery.....	215
Agency Compliance Information.....	215
Important Safety Notes.....	215
Note for California Customers Only on all Models.....	217

SendPro C Auto

Power requirements: 100-240 VAC, 50/60 Hz, 2.0 A

SendPro C (All models)

- Operating Temperature: 55°F (13°C) to 95°F (35°C)
- Sound Level: Less than or equal to 70 dBA re 20 micro Pascal in accordance with ISO 7779, ISO 3744, or ISO 3741.

Lithium Ion Battery

This product contains a lithium ion battery. The battery must be recycled or disposed of properly. If you are leasing this product, you must return it to Pitney Bowes. Alternatively, contact your local waste disposal or recycle facility for instructions on how to dispose of it properly.

Agency Compliance Information

Agency Compliance Information can be found in the product's user guide. The user guide is available for download at: <http://www.pitneybowes.com/us/support>.

Important Safety Notes

Follow the normal safety precautions for all office equipment.

- Please read all instructions before you attempt to operate the system. Save these instructions for future use.
- Use only Pitney Bowes-approved supplies, in particular aerosol dusters. Improper storage and use of aerosol dusters or flammable aerosol dusters can cause an explosive-like condition that could result in personal injury and/or property damage. Never use aerosol dusters labeled flammable and always read instructions and safety precautions on the duster label.
- Use the power cord supplied with the machine and plug it into a properly grounded wall outlet that's located near the machine and easily accessible. Failure to properly ground the machine can result in severe personal injury and/or fire.
- The power cord wall plug is the primary means of disconnecting the machine from the AC supply. The unit is on whenever it is plugged into a live receptacle, even though the operator display may be blank.

- Place the mailing machine base close to an easily accessible wall outlet. DO NOT use a wall outlet controlled by a wall switch or one that is shared with other equipment.
- Do not use an adapter plug on the line cord or wall outlet.
- Do not remove the ground pin from the line cord.
- Make sure the area in front of the wall outlet into which the machine is plugged is free from obstruction.
- DO NOT route the power cord over sharp edges or trap it between pieces of furniture. Make sure there is no strain on the power cord.
- To reduce the risk of fire or electrical shock, DO NOT attempt to remove covers or disassemble the control panel or its base. The cabinet encloses hazardous parts. If you should drop or otherwise damage the unit, call Pitney Bowes.
- Use only Pitney Bowes approved ink, tape strips, and cleaners. To obtain Material Safety Data Sheets (MSDS) for OSHA requirements, please go to www.pb.com/msds. When prompted, enter the product name, manufacturer, the Pitney Bowes MSDS Number, or reorder number of the item you are interested in.
- Keep fingers, long hair, jewelry and loose clothing away from moving parts at all times.
- Avoid touching moving parts or materials while the machine is in use. Before clearing a stall (jam), be sure machine mechanisms come to a complete stop.
- To prevent overheating, do not cover the vent openings.
- When removing stalled material, avoid using too much force to protect against minor personal injury and damage to the equipment.
- Use the equipment only for its intended purpose.
- Always follow the specific occupational safety and health standards prescribed for your workplace.



Caution:

In case of an ink spill, leaking ink or excessive ink accumulation, immediately disconnect the power cord from the wall plug and contact Pitney Bowes. All inquiries can be done by visiting www.pitneybowes.com/us/support. Customer Service Representatives are available Monday through Friday, 8:00 AM - 8:00 PM ET.

Note for California Customers Only on all Models

Batteries in this product contain perchlorate material. California requires perchlorate-containing products to be accompanied by the following notice: Perchlorate Material - special handling may apply. See: <http://www.dtsc.ca.gov/hazardouswaste/perchlorate/>

Servicing

Please refer to the warranty information if problems occur. For reference purposes, the Pitney Bowes U.S. Service Center contact address is: Pitney Bowes Inc., 3001 Summer Street, Stamford, CT, 06926. All inquiries can be done by visiting www.pitneybowes.com/us/support. Customer Service Representatives are available Monday through Friday, 8:00 AM - 8:00 PM ET.

14 - Third party software

In this section

Third party software.....	219
---------------------------	-----

Third party software

Third party software may have been incorporated into this product by Pitney Bowes Inc. ("PBI") under permission from PBI's licensors. Any special terms and conditions that apply to such software are provided below:

This product contains the following software:

- Okhttp3 which is licensed under the Apache License, Version number 2.0. The license can be downloaded from: <http://www.apache.org/licenses/LICENSE-2.0.html>. The source code for this software is available from <http://square.github.io/okhttp/>.
- Retrofit which is licensed under the Apache License, Version number 2.0. The license can be downloaded from: <http://www.apache.org/licenses/LICENSE-2.0.html>. The source code for this software is available from <https://square.github.io/retrofit/>.
- Okio which is licensed under the Apache License, Version number 2.0. The license can be downloaded from: <https://github.com/square/okio/blob/master/LICENSE.txt>. The source code for this software is available from <https://github.com/square/okio>.
- Commons-codec which is licensed under the Apache License, Version number 2.0. The license can be downloaded from: <http://www.apache.org/licenses/LICENSE-2.0.html>. The source code for this software is available from https://commons.apache.org/proper/commons-codec/download_codec.cgi.
- Commons-io which is licensed under the Apache License, Version number 2.0. The license can be downloaded from: <http://www.apache.org/licenses/LICENSE-2.0.html>. The source code for this software is available from https://commons.apache.org/proper/commons-io/download_io.cgi.
- Org.greenrobot:eventbus which is licensed under the Apache License, Version number 2.0. The license can be downloaded from: <http://www.apache.org/licenses/LICENSE-2.0.html>. The source code for this software is available from <http://greenrobot.org>.
- Org.greenrobot:greendao which is licensed under the Apache License, Version number 2.0. The license can be downloaded from: <http://www.apache.org/licenses/LICENSE-2.0.html>. The source code for this software is available from <http://greenrobot.org/greendao>.
- FasterXml:jackson.core:jackson-core which is licensed under the Apache License, Version number 2.0. The license can be downloaded from: <http://wiki.fasterxml.com/JacksonLicensing>. The source code for this software is available from <http://wiki.fasterxml.com>.
- Aws-android-sdk-core which is licensed under the Apache License, Version number 2.0. The license can be downloaded from: <https://github.com/aws/aws-sdk-android/blob/master/LICENSE.APACHE.txt>. The source code for this software is available from <https://github.com/aws/aws-sdk-android>.

- Aws-android-sdk-iot which is licensed under the Apache License, Version number 2.0. The license can be downloaded from: <https://github.com/aws/aws-sdk-android/blob/master/LICENSE.APACHE.txt>. The source code for this software is available from <https://github.com/aws/aws-sdk-android>.
- Aws-android-sdk-s3 which is licensed under the Apache License, Version number 2.0. The license can be downloaded from: <https://github.com/aws/aws-sdk-android/blob/master/LICENSE.APACHE.txt>. The source code for this software is available from <https://github.com/aws/aws-sdk-android>.
- Nv-websocket-client which is licensed under the Apache License, Version number 2.0. The license can be downloaded from: <http://www.apache.org/licenses/LICENSE-2.0.html>. The source code for this software is available from <https://github.com/TakahikoKawasaki/nv-websocket-client>.
- bumptech.glide which is licensed under the Apache License, Version number 2.0. The license can be downloaded from: <http://www.apache.org/licenses/LICENSE-2.0.html>. The source code for this software is available from <https://github.com/bumptech/glide>.
- Jakewharton:butterknife which is licensed under the Apache License, Version number 2.0. The license can be downloaded from: <http://www.apache.org/licenses/LICENSE-2.0.html>. The source code for this software is available from <https://github.com/JakeWharton/butterknife>.
- Caverock:androidsvg which is licensed under the Apache License, Version number 2.0. The license can be downloaded from: <http://www.apache.org/licenses/LICENSE-2.0.html>. The source code for this software is available from <https://mvnrepository.com/artifact/com.caverock/androidsvg/1.2.1>.
- Glassfish:javax.annotation which is dual licensed under the CDDL, Version 1.0, and the GNU General Public License, Version 2, June 1991, with the Classpath Exception. The licenses can be downloaded from: <https://javaee.github.io/glassfish/LICENSE>. The source code for this software is available from <https://javaee.github.io/glassfish>.
- CalligraphyXamarin which is licensed under the Apache License, Version number 2.0. The license can be downloaded from: <http://www.apache.org/licenses/LICENSE-2.0.html>. The source code for this software is available from <https://github.com/mikescandy/Calligraphy-xamarin>.
- Newtonsoft.JSON.NET which is licensed under the MIT License. The license can be downloaded from: <https://github.com/JamesNK/Newtonsoft.Json>. The source code for this software is available from <https://github.com/JamesNK/Newtonsoft.Json>.
- MaterialChips which is licensed under the Apache License, Version number 2.0. The license can be downloaded from: <http://www.apache.org/licenses/LICENSE-2.0.html>. The source code for this software is available from <https://github.com/DoodleScheduling/android-material-chips>.

- Android Open Source Project (“AOSP”), which is licensed under the Apache License, Version number 2.0. The license can be downloaded from: <http://www.apache.org/licenses/LICENSE-2.0.html>. AOSP also contains the Linux kernel which is licensed under GNU General Public License, Version 2, June 1991 (“GPL”). The license can be downloaded from: <http://www.gnu.org/licenses/gpl-2.0.html> Copyright © 1989, 1991 Free Software Foundation. For up to three years from PBI’s distribution of this product, you may obtain a complete machine-readable copy of the source code for the Linux kernel under the terms of the GPL, without charge except for the cost of the media, shipping, and handling, upon written request to PBI. Such requests should be sent by e-mail to iptl@pb.com.
- This product contains Paho.mqtt.java, which is licensed under the Eclipse Public License - v 2.0 and the Eclipse Distribution License - v 1.0. The licenses can be downloaded from <https://www.eclipse.org/legal/epl-2.0/> and <https://www.eclipse.org/org/documents/edl-v10.php>, respectively. The modified source code can be downloaded from: <https://github.com/PitneyBowes>.



3001 Summer Street
Stamford, Connecticut 06926
www.pitneybowes.com

For Service or Supplies

SV63245 Rev L
©2024 Pitney Bowes Inc.
All Rights Reserved